 


STIGA®



IT Tagliaerba/tagliabordi con alimentazione a batteria portatile MANUALE DI ISTRUZIONI

ATTENZIONE: prima di usare la macchina, leggere attentamente il presente libretto.

BG тревен тример/тример с преносима акумулаторна батерия УПЪТВАНЕ ЗА УПОТРЕБА

ВНИМАНИЕ: преди да използвате машината прочетете внимателно настоящата книжка.

BS Ručna kosilica/trimer makaze na bateriju UPUTSTVO ZA UPOTREBU

PAŽNJA: prije nego što koristite ovu mašinu, pažljivo pročitajte priručnik s uputama.

CS Přenosný akumulátorový vyžinač/ořezávač okrajů trávníku NÁVOD K POUŽITÍ

UPOZORNĚNÍ: před použitím stroje si pozorně přečtěte tento návod k použití.

DA Bærbar batteridreven græstrimmer/kantklipper BRUGSANVISNING

ADVARSEL: læs instruktionsbogen omhyggeligt igennem, før du tager denne maskine i brug.

DE Handgehaltener batteriebetriebener Rasentrimmer/Rasenkantenschneider GEBRAUCHSANWEISUNG

ACHTUNG: vor inbetriebnahme des geräts die gebrauchsanleitung aufmerksam lesen.

EL φορητό χλοοκοπτικό / κόφτης άκρων μπαταρίας ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

ΠΡΟΣΟΧΗ: πριν χρησιμοποιήσετε το μηχάνημα, διαβάστε προσεκτικά το παρόν εγχειρίδιο.

EN Battery powered hand-held lawn trimmer / edge trimmer OPERATOR'S MANUAL

WARNING: read thoroughly the instruction booklet before using the machine.

ES Cortacésped/cortabordes con alimentación por batería portátil MANUAL DE INSTRUCCIONES

ATENCIÓN: antes de utilizar la máquina, leer atentamente el presente manual.

ET Kaasaskantav akutoitega murulõikur/äärelõikur KASUTUSJUHE

TÄHELEPANU: enne masina kasutamist lugeda tähelepanelikult antud kasutusjuhendit.

FI Käsien kannateltava akkukäyttöinen nurmikonleikkuri/nurmikon reunojen viimeistelyleikkuri KÄYTTÖOHJEET

VAROITUS: lue käyttöopas huolellisesti ennen koneen käyttöä.

FR Coupe-herbe/coupe-bordures portatif alimenté par batterie MANUEL D'UTILISATION

ATTENTION: lire attentivement le manuel avant d'utiliser cette machine.

HR Prijenosni šišač trave/šišač travnih rubova s baterijskim napajanjem PRIRUČNIK ZA UPORABU

POZOR: prije uporabe stroja, pažljivo pročitajte ovaj priručnik.

HU Hordozható akkumulátoros fűnyíró/szegélynyíró HASZNÁLATI UTASÍTÁS

FIGYELEM! a gép használatá előtti olvassa el figyelmesen a jelen kézikönyvet.

LT Rankinė akumuliatorinė vejapjovė -trimeris vejos kraštams NAUDOJIMO INSTRUKCIJOS

DĖMESIO: prieš naudojant įrenginį, atidžiai perskaityti šį naudotojo vadovą.

LV Ar bateriju darbināma rokā turama zālienu pļaujmašīna / zālienu apmaļu pļaujmašīna LIETOŠANAS INSTRUKCIJA

UZMANĪBU: pirms aparāta lietošanai rūpīgi izlasiet doto instrukciju.

MK Преносна тревокосачна/поткаструвач на батерии УПАТСТВА ЗА УПОТРЕБА

ВНИМАНИЕ: прочитайте го внимателно ова упатство пред да ја користите машината.

NL Draagbare grasmaaier/graskantenrijder met accuvoeding GEBRUIKERSHANDLEIDING

LET OP: vooraleer de machine te gebruiken, dient men deze handleiding aandachtig te lezen.

NO Bærbar batteridrevet plen- og kanttrimmer
INSTRUKSJONSBOK

ADVARSEL: les denne bruksanvisningen nøye før du bruker maskinen.

PL Przenośna podcinarka/przycinarka elektryczna akumulatorowa
INSTRUKCJE OBSŁUGI

OSTRZEŻENIE: przed użyciem maszyny, należy uważnie przeczytać niniejszą instrukcję.

PT Aparador de relva/aparador de canto alimentado a bateria
MANUAL DE INSTRUÇÕES

ATENÇÃO: antes de usar a máquina, leia atentamente o presente manual.

RO Mașină de tuns iarba/mașină de tuns margini de gazon alimenta-
te cu baterie portabilă
MANUAL DE INSTRUCTIUNI

ATENȚIE: înainte de a utiliza mașina, citiți cu atenție manualul de față.

RU Портативная газонокосилка / триммер для краев газона с
батарейным питанием
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

ВНИМАНИЕ: прежде чем пользоваться оборудованием, внимательно прочтите это руководство по эксплуатации.

SK Prenosný akumulátorový vyžínač/orezávač okrajov trávnik
NÁVOD NA POUŽITIE

UPOZORNENIE: pred použitím stroja si pozorne prečítajte tento návod.

SL Prenosni akumulatorski obrezovalnik trat / tratnih robov
PRIROČNIK ZA UPORABO

POZOR: preden uporabite stroj, pazljivo preberite priročnik z navodili.

SR Ručna kosačica/trimer makaze na bateriju
PRIRUČNIK SA UPUTSTVIMA

PAŽNJA: pre korišćenja mašine pažljivo pročitati ovaj priručnik.


SV Batteridrivnen bärbar gräsklippare/kantskärare
BRUKSANVISNING

VARNING: läs igenom hela detta häfte innan du använder maskinen.


TR Batarya beslemeli elde taşınabilir çim/kenar kesme makinesi
KULLANIM KILAVUZU

ITALIANO - Istruzioni Originali	IT
БЪЛГАРСКИ - Инструкция за експлоатация	BG
BOSANSKI - Prijevod originalnih uputa	BS
ČESKY - Překlad původního návodu k používání	CS
DANSK - Oversættelse af den originale brugsanvisning	DA
DEUTSCH - Übersetzung der Originalbetriebsanleitung	DE
ΕΛΛΗΝΙΚΑ - Μετάφραση των πρωτοτύπων οδηγιών	EL
ENGLISH - Translation of the original instruction	EN
ESPAÑOL - Traducción del Manual Original	ES
EESTI - Algupärase kasutusjuhendi tõlge	ET
SUOMI - Alkuperäisten ohjeiden käännös	FI
FRANÇAIS - Traduction de la notice originale	FR
HRVATSKI - Prijevod originalnih uputa	HR
MAGYAR - Eredeti használati utasítás fordítása	HU
LIETUVIŠKAI - Originalių instrukcijų vertimas	LT
LATVIEŠU - Instrukciju tulkojums no oriģināl valodas	LV
МАКЕДОНСКИ - Превод на оригиналните упатства	MK
NEDERLANDS - Vertaling van de oorspronkelijke gebruiksaanwijzing	NL
NORSK - Oversettelse av den originale bruksanvisningen	NO
POLSKI - Tłumaczenie instrukcji oryginalnej	PL
PORTUGUÊS - Tradução do manual original	PT
ROMÂN - Traducerea manualului fabricantului	RO
РУССКИЙ - Перевод оригинальных инструкций	RU
SLOVENSKY - Preklad pôvodného návodu na použitie	SK
SLOVENŠČINA - Prevod izvirnih navodil	SL
SRPSKI - Prevod originalnih uputstva	SR
SVENSKA - Översättning av bruksanvisning i original	SV
TÜRKÇE - Orijinal Talimatların Tercümesi	TR


1

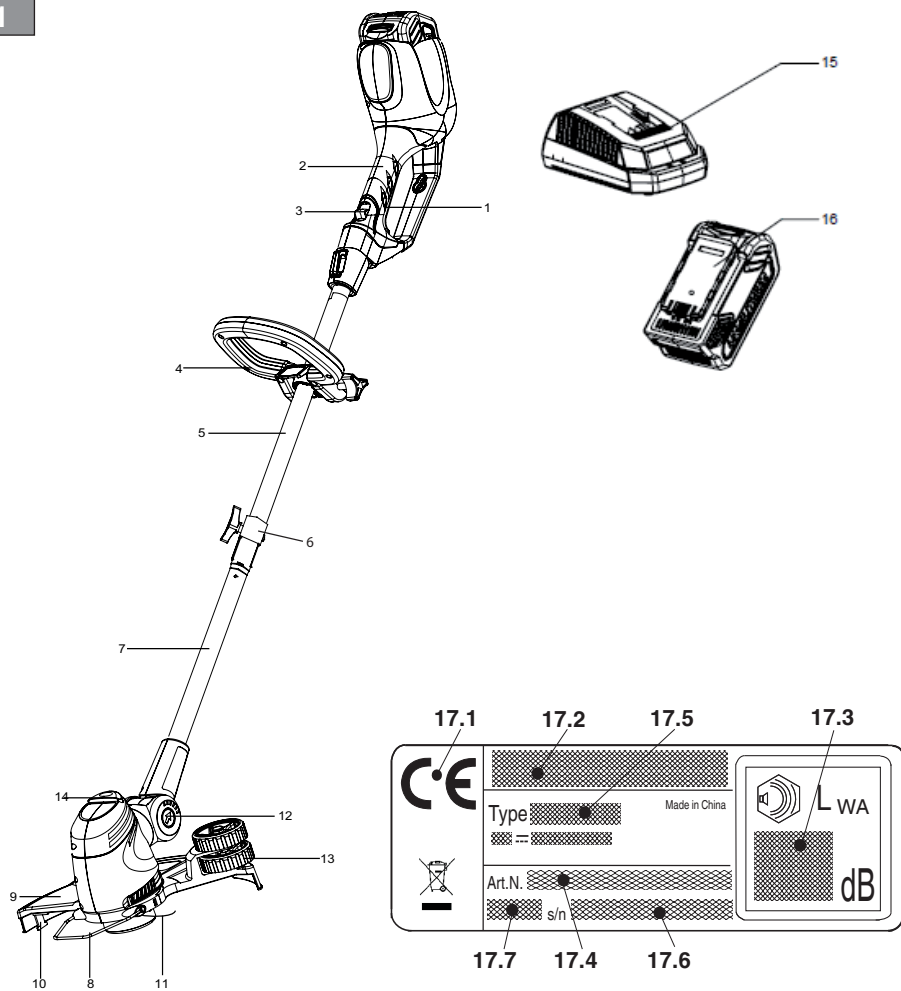


2

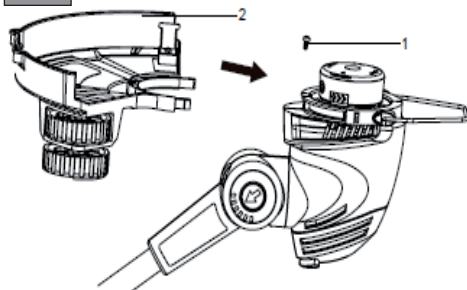


3

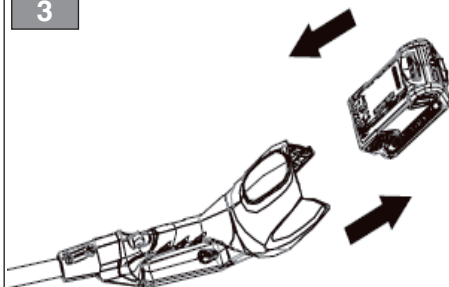


4

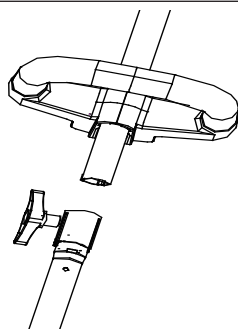


5

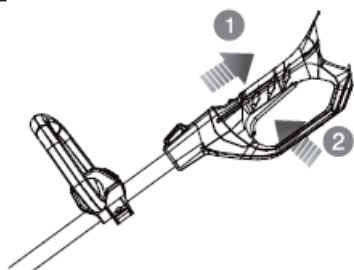


6

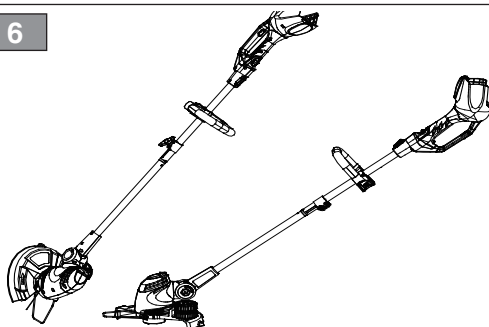


7

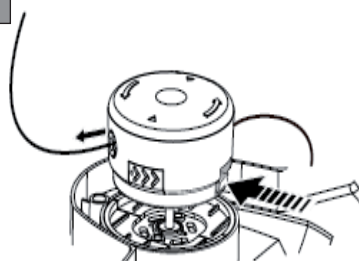


8

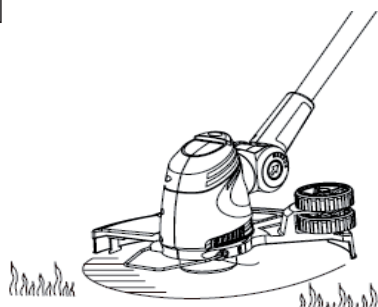


9

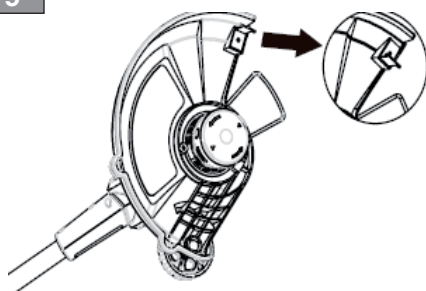


10

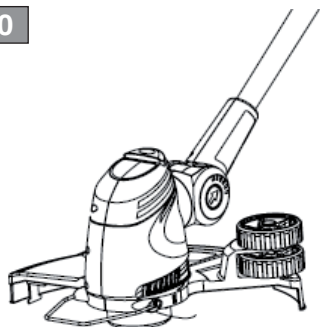


11

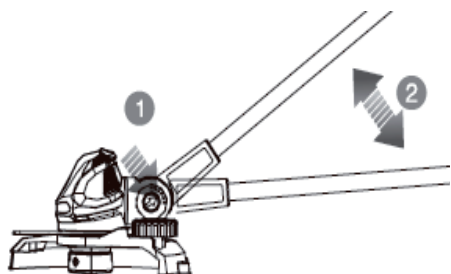

12

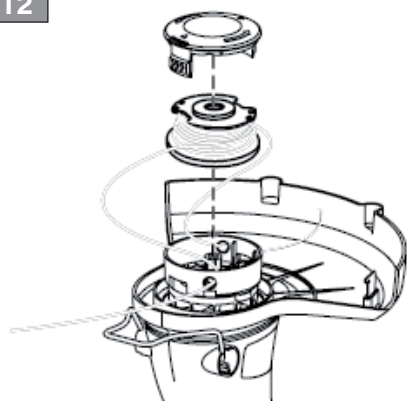

13

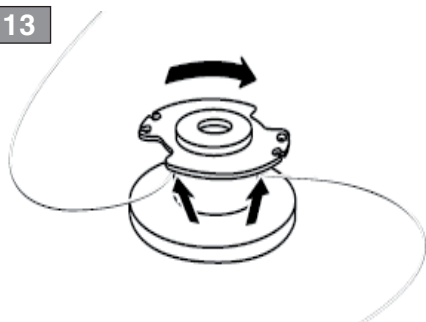

[1]	DATI TECNICI	type	TR 48 Li
[2]	Tensione	V/DC	48
[3]	Testa di taglio		Svolgimento automatico
[4]	Diametro di taglio	mm	1,6
[5]	Lunghezza di taglio	mm	300
[6]	Peso con gruppo batteria	kg	4,6
[7]	Livello di pressione acustica	dB(A)	82
[8]	- Incertezza di misura	dB(A)	3
[9]	Livello di potenza acustica misurato	dB(A)	93
[8]	- Incertezza di misura		3
[10]	Livello di potenza acustica garantito	dB(A)	96
[11]	Livello di vibrazioni	m/s ²	3,8
[8]	- Incertezza di misura	m/s ²	1,5
[12]	Batterie:	mod.	BT 48 Li 2,0 BT 48 Li 2,5 BT 48 Li 4,0 BT 48 Li 5,0

[1] BG - ТЕХНИЧЕСКИ ДАННИ [2] Номинална мощност [3] Максимална скорост на функциониране на двигателя [4] Напрежение и честота на захранване [5] Скорост на въздуха [6] Тегло (батерия не е включен) [7] Ниво на акустично налягане [8] Несигурност на измерване [9] Гарантирано ниво на акустична мощност [10] Гарантирано ниво на акустична мощност [11] Ниво на вибрация [12] Код на акумулатора	[1] BS - TEHNIČKI PODACI [2] Nazivna snaga [3] Maks. brzina rada motora [4] Napon i frekvencija napajanja [5] Brzina zraka [6] Težina mašine [7] Razina zvučnog pritiska [8] Mjerna nesigurnost [9] Izmjerena razina zvučne snage [10] Garantovana razina zvučne snage [11] Razina vibracija [12] Sifra akumulatora	[1] CS - TECHNICKÉ PARAMETRY [2] Jmenovitý výkon [3] Maximální rychlost činnosti motoru [4] Napájecí napětí a frekvence [5] Průtok vzduchu v trubce [6] Hmotnost stroje [7] Úroveň akustického tlaku [8] Nepřesnost měření [9] Úroveň naměřeného akustického výkonu [10] Úroveň zaručeného akustického výkonu [11] Úroveň vibrací [12] Kód akumulátoru
[1] DA - TEKNISKE DATA [2] Nominel effekt [3] Motorens maks. driftshastighed [4] Forsyningsspænding og -frekvens [5] Lufthastighed [6] Maskinens vægt [7] Lydtryksniveau [8] Måleusikkerhed [9] Målt lydeffektniveau [10] Garanteret lydeffektniveau [11] Vibrationsniveau [12] Batterikode	[1] DE - TECHNISCHE DATEN [2] Nennleistung [3] Max. Betriebsgeschwindigkeit des Motors [4] Versorgungsspannung und -frequenz [5] Luftgeschwindigkeit [6] Maschinengewicht [7] Schalldruckpegel [8] Messungensgenauigkeit [9] Gemessener Schalleistungspegel [10] Garantierter Schalleistungspegel [11] Vibrationspege [12] Batterie-Code	[1] EL - ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ [2] Ονομαστική ισχύς [3] Μέγ. ταχύτητα λειτουργίας κινητήρα [4] Τάση και συχνότητα τροφοδοσίας [5] Ταχύτητα αέρα [6] Βάρος μηχανήματος[7] [7] Στάθμη ακουστικής πίεσης [8] Αβεβαιότητα μέτρησης [9] Μετρημένη στάθμη ακουστικής ισχύος [10] Εγγυημένη στάθμη ακουστικής ισχύος [11] Επίπεδο κραδασμών [12] Κωδικός μπαταρίας
[1] EN - TECHNICAL DATA [2] Rated voltage * [3] Max. motor operating speed * [4] Power supply frequency and voltage [5] Air velocity [6] Weight (Battery Pack not included) [7] Acoustic pressure level [8] Measurement uncertainty [9] Measured acoustic power level [10] Guaranteed acoustic power level [11] Vibration level [12] Battery code	[1] ES - DATOS TÉCNICOS [2] Potencia nominal * [3] Velocidad máx. de funcionamiento motor [4] Tensión y Frecuencia de alimentación [5] Velocidad del aire [6] Peso máquina [7] Nivel de presión acústica [8] Incertidumbre de medida [9] Nivel de potencia acústica medido [10] Nivel de potencia acústica garantizado [11] Nivel de vibraciones [12] Código batería	[1] ET - TEHNILISED ANDMED [2] Nominaalvõimsus * [3] Mootori töötamise maks. kiirus [4] Toite pinge ja sagedus [5] Huvoolu kiirus [6] Masina kaal [7] Helirõhu tase [8] Mõõtemääramatus [9] Mõõdetud müravõimsuse tase [10] Garanteeritud müravõimsuse tase [11] Vibratsioonide tase [12] Aku kood

[1] FI - TEKNISET TIEDOT [2] Nimellisteho * [3] Moottorin maksimaalinen toiminantopeus [4] Syöttöjännite ja -taajuus [5] Ilman virtausnopeus [6] Laitteen paino [7] Äkustisen paineen taso [8] Mittauksen epävarmuus [9] Mitattu äänitehotaso [10] Taattu äänitehotaso [11] Tärinätaso [12] Akkukoodi	[1] FR - CARACTÉRISTIQUES TECHNIQUES [2] Puissance nominale* [3] Vitesse max. de fonctionnement du moteur [4] Tension et fréquence d'alimentation [5] Vitesse de l'air [6] Poids machine [7] Niveau de pression acoustique [8] Incertitude de la mesure [9] Niveau de puissance acoustique mesuré [10] Niveau de puissance acoustique garanti [11] Niveau de vibrations [12] Code batterie	[1] HR - TEHNIČKI PODACI [2] Nazivna snaga* [3] Maks. brzina rada motora [4] Napon i frekvencija napajanja [5] Brzina zraka [6] Težina stroja* [7] Razina zvučnog tlaka [8] Mjerna nesigurnost [9] Izmjerena razina zvučne snage [10] Zajamčena razina zvučne snage [11] Razina vibracija [12] Šifra baterije
[1] HU - MŰSZAKI ADATOK [2] Névleges teljesítmény * [3] A motor max. üzemi sebessége] [4] Tápfeszültség és -frekvencia [5] Légsebesség [6] A gép tömege [7] Hangnyomásszint [8] Mérési bizonytalanság [9] Mért zajteljesítmény szint. [10] Garantált zajteljesítmény szint [11] Vibrációs szint [12] Akkumulátor kódja	[1] LT - TECHINIIAI DUOMENYS [2] Vardinė galia* [3] Maksimalus variklio veikimo greitis [4] Maitinimo įtampa ir dažnis [5] Oro greitis [6] Įrenginio svoris [7] Garso slėgio lygis [8] Matavimo paklaida [9] Išmatuotas garso galios lygis [10] Garantuojamas garso galios lygis [11] Vibracijų lygis [12] Akumuliatoriaus kodas	[1] LV - TEHNISKIE DATI [2] Nominālā jauda * [3] Maks. dzinēja griešanās ātrums [4] Barošanas spriegums un frekvence [5] Gaisa plūsmas ātrums [6] Mašīnas svars [7] Skaņas spiediena līmenis [8] Mērījumu kļūda [9] Izmērītais skaņas intensitātes līmenis [10] Garantētais skaņas intensitātes līmenis [11] Vibrāciju līmenis [12] Akumulatora kods
[1] МК - ТЕХНИЧЕСКИЕ ПОДАТОЦИ [2] Номинална мощност * [3] Максимална брзина при работа на моторот [4] Волтажа и вид на напојување [5] Проток на воздух [6] Тежина на машината [7] Ниво на акустичен притисок [8] Отстапување од мерењата [9] Измерено ниво на акустична мощност [10] Гарантирано ниво на акустична мощност [11] Ниво на вибрации [12] Код на батријата	[1] NL - TECHNISCHE GEGEVENS [2] Nominaal vermogen * [3] Maximale snelheid voor de werking van de motor [4] Spanning en frequentie voeding [5] Luchtsnelheid [6] Gewicht machine [7] Niveau geluidsdruk [8] Meetonzekerheid [9] Gemeten akoestisch vermogen [10] Gewaarborgd akoestisch vermogen [11] Niveau trillingen [12] Code batterij	[1] NO - TEKNISKE DATA [2] Nominell effekt * [3] Motorens maks driftshastighet [4] Matespenning og -frekvens [5] Lufthastighet [6] Maskinvekt [7] Lydtrykknivå [8] Måleusikkerhet [9] Målt lydeffektivnivå [10] Garantert lydeffektivnivå [11] Vibrasjonsnivå [12] Batterikode
[1] PL - DANE TECHNICZNE [2] Moc znamionowa * [3] Maks. predkosć obrotowa silnika [4] Napięcie i częstotliwość zasilania [5] Predkosć powietrza [6] Masa maszyny [7] Poziom ciśnienia akustycznego [8] Błąd pomiaru [9] Poziom mocy akustycznej zmierzony [10] Gwarantowany poziom mocy akustycznej [11] Poziom vibracji [12] Kod akumulatora	[1] PT - DADOS TÉCNICOS [2] Potência nominal * [3] Velocidade máx. de funcionamento motor [4] Tensão e frequência de alimentação [5] Velocidade do ar [6] Peso da máquina [7] Nivel de pressão acústica [8] Incerteza de medição [9] Nivel de potência acústica medido [10] Nivel de potência acústica garantido [11] Nivel de vibrações [12] Código bateria	[1] RO - DATE TEHNICE [2] Putere nominală * [3] Viteza max. de funcționare a motorului [4] Tensiunea și frecvența de alimentare [5] Viteza aerului [6] Greutatea mașinii [7] Nivel de presiune acustică [8] Nesiguranta în măsurare [9] Nivel de putere acustică măsurat. [10] Nivel de putere acustică garantat [11] Nivel de vibrații [12] Cod baterie
[1] RU - ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ [2] Номинальная мощность * [3] Макс. число оборотов двигателя [4] Напряжение и частота питания [5] Скорость воздуха [6] Вес машины [7] Уровень звукового давления [8] Погрешность измерения [9] Измеренный уровень звуковой мощности [10] Гарантируемый уровень звуковой мощности [11] Уровень вибрации [12] Код батарей	[1] SK - TECHNICKÉ PARAMETRE [2] Menovitý výkon * [3] Maximálna rýchlosť činnosti motora [4] Napájacie napätie a frekvencia [5] Rýchlosť vzduchu [6] Hmotnosť stroja [7] Úroveň akustického tlaku [8] Nepresnosť merania [9] Úroveň nameraného akustického výkonu [10] Úroveň zarúčeného akustického výkonu [11] Úroveň vibrácií [12] Kód akumulátora	[1] SL - TEHNIČNI PODATKI [2] Nazivna moč * [3] Najvišja hitrost delovanja motorja [4] Napetost in frekvenca električnega napajanja [5] Hitrost zraka [6] Teža stroja [7] Raven zvočnega tlaka [8] Merilna negotovost [9] Izmnjena raven zvočne moči [10] Zajamčena raven zvočne moči [11] Nivo vibracij [12] Šifra baterije
[1] SR - TEHNIČKI PODACI [2] Nazivna snaga * [3] Maks. radna brzina motora [4] Napon i frekvencija napajanja [5] Brzina vazduha [6] Težina mašine [7] Nivo zvučnog pritiska [8] Merna nesigurnost [9] Izmereni nivo zvučne snage [10] Garantovani nivo zvučne snage [11] Nivo vibracija [12] Šifra akumulatora	[1] SV - TEKNISKA SPECIFIKATIONER [2] Nominell effekt * [3] Motors maximala funktionshastighet [4] Spänning och frekvens [5] Luftens hastighet [6] Maskinvekt [7] Ljudtrycksnivå [8] Tvivel med mått [9] Uppmått ljudeffektivnivå [10] Garanterad ljudeffektivnivå [11] Vibrationsnivå [12] Batterikod	[1] TR - TEKNİK VERİLER [2] Nominal güç * [3] Motorun maksimum çalışma hızı [4] Besleme gerilimi ve frekansı [5] Hava hızı [6] Makine ağırlığı [7] Ses basınç seviyesi [8] Ölçü belirsizliği [9] Ölçülen ses gücü seviyesi [10] Garanti edilen ses gücü seviyesi [11] Titreşim seviyesi [12] Batarya kodu



TABLE OF CONTENTS

1. HOW TO READ THE MANUAL.....	1
2. GENERAL SAFETY WARNINGS	1
3. SYMBOLS	4
4. DESCRIPTION	5
5. ASSEMBLY.....	5
6. OPERATION.....	5
7. TROUBLESHOOTING.....	8

1. HOW TO READ THE MANUAL

Some paragraphs in the manual contain important information regarding safety and operation and are emphasized in this manner:

The symbol  highlights danger. Non-compliance with the warning could lead to personal and/or third party injury and or damage.

2. GENERAL SAFETY WARNINGS

- Wear protective glasses or goggles;
- Never allow children or people unfamiliar with the instructions to use the machine;
- Stop using the machine while people, especially children, or pets are nearby;
- Only use the machine in daylight or good artificial light;
- Before using the machine and after any impact, check for signs of wear or damage and repair as necessary;
- Never operate the machine with damaged guards or without the guards in place;
- Keep hands and feet away from the cutting means at all times and especially when switching on the motor;
- Take care against injury from any device fitted for trimming the filament line length. After extending new cutter line always return the machine to its normal operating position before switching on;
- Never fit metal cutting elements;
- Never use replacement parts or accessories not provided or recommended by the manufacturer;
- Disconnect the machine from the mains before checking, cleaning or working on the machine and when it is not in use;
- Always ensure that ventilation openings are kept clear of debris;
- Where symbols/pictograms are used in the marking on the machine their function shall be explained;
- An indication of the mass of the machine in kilogrammes.

Your trimmer has been engineered and manufactured to Greenworks tools's high standard for dependability, ease of operation, and operator safety. When properly cared for, it will give you years of trouble-free performance.

SAVE THIS MANUAL FOR FUTURE REFERENCE

INTRODUCTION

This appliance is not intended for use by persons (including children) with reduced understanding, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. This product has many features for making its use more pleasant and enjoyable. Safety, performance, and dependability have been given top priority in the design of this product making it easy to maintain and operate.

INTENDED USE:

This trimmer is designed for cutting grass and soft vegetation alike and for trimming grass edges in private garden areas which are not accessible with a lawnmower. Its cutting plane should always be approximately parallel to the ground. If it is not used in this way, the possibility of injury to persons and property by thrown objects is significantly increased. The device is not allowed to be used in public gardens, parks, sports centres or at roadsides as well as in agriculture and forestry. This trimmer is not allowed to be used for cutting or chopping hedges, shrubs, bushes, and flowers. It should never be used with the cutting means rotating vertically.

USER TYPE: This machine is intended for use by consumers, i.e. non-professional operators. The machine is intended for "DIY" use only.

GENERAL SAFETY RULES.

 **Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury**

SAVE ALL WARNINGS AND INSTRUCTIONS FOR FUTURE REFERENCE.

 **When using power tools, basic safety precautions should always be taken to reduce the risk of the fire, electric shock and personal injury. Also, please read and heed the advice given in the additional safety instructions.**

The term "power tool" in the warnings refers to battery-operated (cordless) power tool.

- Wear protective glasses or goggles.

- Never allow children or people unfamiliar with the instructions to use the machine.
- Stop using the machine while people, especially children, or pets are nearby.
- Only use the machine in daylight or good artificial light.
- Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
- Never operate the machine with damaged guards or without the guards in place.
- Keep hands and feet away from the cutting means at all times and especially when switching on the motor.
- Take care against injury from any device fitted for trimming the filament line length. After extending new cutter line always return the machine to its normal operating position before switching on.
- Never fit metal cutting elements.
- Never use replacement parts or accessories not provided or recommended by the manufacturer.
- Disconnect the battery from the machine before checking, cleaning or working on the machine and when it is not in use.
- Always ensure that ventilation openings are kept clear of debris.

READ ALL INSTRUCTIONS WORK AREA SAFETY

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating a power tool. Distractions can cause you to lose control.

ELECTRICAL SAFETY

- Power tool plugs must match the outlet. Never modify the plug in any way. Do not use any adapter plugs with earthed (grounded) power tools. Unmodified plugs and matching outlets will reduce risk of electric shock.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators, ranges and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.
- Do not expose power tools to rain or wet conditions. Water entering a power tool will increase the risk of electric shock.

PERSONAL SAFETY

- Stay alert, watch what you are doing and use common sense when operating a

power tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication. A moment of inattention while operating power tools may result in serious personal injury.

- Use personal protective equipment. Always wear eye protection. Protective equipment such as dust mask, non-skid safety shoes, hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to power source and/or battery pack, picking up or carrying the tool. Carrying power tools with your finger on the switch or energising power tools that have the switch on invites accidents.
- Remove any adjusting key or wrench before turning the power tool on. A wrench or a key left attached to a rotating part of the power tool may result in personal injury.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing and gloves away from moving parts. Loose clothes, jewellery or long hair can be caught in moving parts.
- Use of hearing protection reduces the ability to hear warnings (shouts or alarms). The operator must pay extra attention to what is happening around the work area.

POWER TOOL USE AND CARE

- Do not force the power tool. Use the correct power tool for your application. The correct power tool will do the job better and safer at the rate for which it was designed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Disconnect the plug from the power source and/or the battery pack from the power tool before making any adjustments, changing accessories, or storing power tools. Such preventive safety measures reduce the risk of starting the power tool accidentally.
- Store idle power tools out of the reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the power tool. Power tools are dangerous in the hands of untrained users.
- Maintain power tools. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect the power tool's operation. If

damaged, have the power tool repaired before use. Many accidents are caused by poorly maintained power tools.

- Do not let debris build up on your trimmer. Clean often to maintain proper ventilation. Observe cleaning guides in this manual.
- Use the power tool, accessories and tool bits etc. in accordance with these instructions, taking into account the working conditions and the work to be performed. Use of the power tool for operations different from those intended could result in a hazardous situation.

BATTERY TOOL USE AND CARE

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use power tools only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

SERVICE

- Have your power tool serviced by a qualified repair person using only identical replacement parts. This will ensure that the safety of the power tool is maintained.

MAINTENANCE

- After use and before storage, disconnect the machine from the battery and check for damage.
- When not in use store the machine out of the reach of children.
- Grass trimmers should only be repaired by an authorised repairer.
- Use only manufacturers recommended replacement parts and accessories

 ***The cutter head will continue to rotate for a few seconds after switching off.***

- The vibration level during actual use of the power tool can differ from the declared total value depending on the ways in which the tool is used.

- It has been reported that vibrations from hand-held tools may contribute to a condition called Raynaud's Syndrome in certain individuals. Symptoms may include tingling, numbness and blanching of the fingers, usually apparent upon exposure to cold. Hereditary factors, exposure to cold and dampness, diet, smoking and work practices are all thought to contribute to the development of these symptoms. It is presently unknown what, if any, vibrations or extent of exposure may contribute to the condition. There are measures that can be taken by the operator to possibly reduce the effects of vibration:
 - Keep your body warm in cold weather. When operating the unit wear gloves to keep the hands and wrists warm. It is reported that cold weather is a major factor contributing to Raynaud's Syndrome.
 - After each period of operation, exercise to increase blood circulation.
 - Take frequent work breaks. Limit the amount of exposure per day.
 - If you experience any of the symptoms of this condition, immediately discontinue use and see your physician about these symptoms.

3. SYMBOLS

Some of the following symbols may be used on this tool. Please study them and understand their meaning. Proper interpretation of these symbols will allow you to operate the tool better and safer.

SYMBOL	DESIGNATION/EXPLANATION
	Class II Double insulation.
	Precautions that involve your safety.
	Read the operation manual and follow all warnings and safety instructions.
	Wear eye protection and ear protection.
	Thrown objects can ricochet and result in personal injury or property damage. Wear protective clothing and boots.

	Keep all bystanders, especially children and pets, at least 15m from the operating area.
	Beware of thrown or flying objects to bystanders. Keep bystanders a safe distance away from the machine.
	Do not expose to rain or damp conditions.

The following signal words and meanings are intended to explain the levels of risk associated with this product.

SYMBOL	MEANING
	Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.
	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury.
	(Without Safety Alert Symbol) Indicates a situation that may result in property damage.

SERVICE

Servicing requires extreme care and knowledge and should be performed only by a qualified service technician. For service we suggest you return the product to your nearest AUTHORISED SERVICE CENTRE for repair. When servicing, use only identical replacement parts.

 ***The operation of any power tool can result in foreign objects being thrown into your eyes, which can result in severe eye damage. Before beginning power tool operation, always wear safety goggles, safety glasses with side shields, or a full face shield when needed. We recommend Wide Vision Safety Mask for use***

over eyeglasses or standard safety glasses with side shields. Always use eye protection which is marked to comply with EN 166.

4. DESCRIPTION

1. Switch trigger
2. Rear handle
3. Lock-out trigger
4. Front handle
5. Upper shaft
6. Shaft coupler
7. Lower shaft
8. Plant protector
9. Grass deflector
10. Cutting diameter slide
11. Cutting line
12. Pivoting button
13. Edger wheel
14. Trimmer/Edger button
15. Battery pack
16. Charger

17. Name plate

- 17.1 CE conformity marking
- 17.2 Name and address of manufacturer
- 17.3 Sound power level
- 17.4. Item Code
- 17.5 Machine Type
- 17.6 Serial number
- 17.7 Year of construction

As soon as you have purchased the machine, do not forget to write the identification numbers (S/n) in the spaces on the last page of the manual. The example of the Declaration of Conformity is provided on the penultimate page of the manual.

5. ASSEMBLY

UNPACKING

THIS PRODUCT REQUIRES ASSEMBLY.

- Carefully remove the product and any accessories from the box. Make sure that all the items listed in the packing list are included.

⚠ Do not use this product if any parts on the Packing List are already assembled to your product when you unpack it. Parts on this list are not assembled to the product by the manufacturer and require customer installation. Use of a product that may have been improperly assembled could result in serious personal injury.

- Inspect the product carefully to make sure no breakage or damage occurred during shipping.
- Do not discard the packing material until you have carefully inspected and satisfactorily operated the product.

⚠ If any parts are damaged or missing do not operate this product until the parts are replaced. Use of this product with damaged or missing parts could result in serious personal injury

⚠ Do not attempt to modify this product or create accessories not recommended for use with this product. Any such alteration or modification is misuse and could result in a hazardous condition leading to possible serious personal injury.

⚠ To prevent accidental starting that could cause serious personal injury, always remove the battery pack from the product when assembling parts.

ATTACHING GRASS DEFLECTOR

See Figure 2.

⚠ The line cut-off blade on the grass deflector is sharp. Avoid contact with the blade. Failure to avoid contact can result in serious personal injury.

- Remove the battery pack.
- Invert the grass trimmer/edger to access the trimmer head.
- Using a Phillips head screwdriver, remove the preinstalled screw (1) from the trimmer head.
- Place the guard (2) on to the trimmer head.
- Align the screw hole on the guard with the screw hole on the trimmer head.

6. OPERATION

⚠ Do not allow familiarity with products to make you careless. Remember that a careless fraction of a second is sufficient to inflict serious injury

⚠ Always wear eye protection. Failure to do so could result in objects being thrown into your eyes resulting in possible serious injury.

⚠ Never use blades, flailing devices, wire, or rope on this product. Do not use any attachments or accessories not recommended by the manufacturer of this product. The use of attachments or accessories not recommended can result in serious personal injury.

For complete charging instructions, refer to the Operator's Manuals for your battery pack and charger models.

Note to avoid serious personal injury, always remove the battery pack and keep hands clear of the lock-out button when carrying or transporting the tool.

TO INSTALL BATTERY PACK

See Figure 3.

- Place the battery pack in the trimmer. Align raised ribs on battery pack with grooves in the trimmer's battery port.
- Make sure the latch on bottom of the battery pack snaps in place and that battery pack is fully seated and secure in the trimmer before beginning operation..

TO REMOVE BATTERY PACK

See Figure 3.

- Release the variable speed control trigger to stop the trimmer.
- Press and hold the battery latch button at the bottom of the battery pack.
- Remove battery pack from the trimmer.

SHAFT ASSEMBLY

See Figure 4.

The shaft's length cannot be adjusted.

- Insert the lower shaft into the shaft coupler on the upper shaft.
- Tighten the coupler by turning clockwise. Make sure the upper and lower part of shafts are securely tightened before reinstalling the battery pack.

STARTING/STOPPING THE TRIMMER

See Figure 5.

- To start the trimmer, grip the front handle with one hand while holding the rear handle with your other hand making sure to depress the lock-out trigger while squeezing the variable speed trigger.
- To stop the trimmer, just release the variable speed control trigger.

OPERATING THE TRIMMER

See Figure 6.

Follow these tips when using the trimmer:

- Hold the trimmer with your right hand on the rear handle and your left hand on the front handle.
- Keep a firm grip with both hands while in operation.
- Trimmer should be held at a comfortable position with the rear handle about hip height.
- Cut tall grass from the top down. This will prevent grass from wrapping around

the shaft housing and string head which may cause damage from overheating.

If grass becomes wrapped around the string head:

- Remove the battery pack from the trimmer.
- Remove the grass

 **Contact with the trimmer cutting head while operating can result in serious personal injury.**

CUTTING TIPS

See Figure 8

- Keep the trimmer tilted toward the area being cut; this is the best cutting area.
- The trimmer will cut better when moved from left to right across the area to be cut; it is less effective when moved from right to left.
- Use the tip of the cutting line to do the cutting; do not force cutting head into uncut grass.
- Wire and picket fences cause extra cutting line wear, even breakage. Stone and brick walls, curbs, and wood may wear cutting line rapidly.
- Avoid trees and shrubs. Tree bark, wood moldings, siding, and fence posts can easily be damaged by the cutting line.

ADVANCING CUTTING LINE

NOTE The trimmer is equipped with an auto-feed head. Bumping the head to try to advance the line will damage the trimmer and void the warranty.

- With the trimmer running, release the switch trigger.
- Wait two seconds, and press the switch trigger.

NOTE The cutting line will extend approximately 0.635cm with each stop and start of the trigger until the cutting line reaches the length of the grass deflector cut-off blade.

- Resume trimming.

ADVANCING CUTTING LINE MANUALLY

See Figure 7.

- Remove the battery pack.
- Push the black button located on the cutting head while pulling on cutting line to manually advance the cutting line.
- After extending new cutter line, always return the machine to its normal operating position before switching on.

ADJUSTABLE CUTTING DIAMETER

See Figure 9.

- Rotate the plant protector to its working position to avoid cutting flowers or plants by mistake.

- Remove the battery pack.
- Adjust the “cutting diameter slide” on the grass deflector to adjust the cutting path diameter. There are 2 diameter options: 30cm, 25cm.

NOTE a small diameter cutting path will maximize run time and cutting speed, while a larger cutting path will help complete the trimming task quicker.

LINE CUT-OFF BLADE

See Figure 10.

This trimmer is equipped with a line cut-off blade on the grass deflector. For best cutting, advance line until it is trimmed to length by the line cut-off blade. Advance line whenever you hear the engine running faster than normal, or when trimming efficiency diminishes. This will maintain best performance and keep line long enough to advance properly.

 **When servicing, use only identical replacement parts. Use of any other parts may create a hazard or cause product damage**

 **To avoid serious personal injury, always remove the battery pack from the tool when cleaning or performing any maintenance.**

Before each use, inspect the entire product for damaged, missing, or loose parts such as screws, nuts, bolts, caps, etc. Tighten securely all fasteners and caps and do not operate this product until all missing or damaged parts are replaced. Avoid using solvents when cleaning plastic parts. Most plastics are susceptible to damage from various types of commercial solvents and may be damaged by their use. Use clean cloths to remove dirt, dust, oil, grease, etc.

 **Do not at any time let brake fluids, gasoline, petroleum-based products, penetrating oils, ect. come in contact with plastic parts. Chemicals can damage, weaken or destroy plastic which may result in serious personal injury.**

Only the parts shown on the parts list are intended to be repaired or replaced by the customer. All other parts should be replaced at an Authorised Service Centre.

 **Upon removal, cover the battery pack's terminals with heavy-duty adhesive tape. Do not attempt to destroy or disassemble battery pack or remove any of its components. Lithium-ion and nickel-cadmium batteries must be recycled**

or disposed of properly. Also, never touch both terminals with metal objects and/or body parts as short circuit may result. Keep away from children. Failure to comply with these warnings could result in fire and/or serious injury.

SPOOL REPLACEMENT

See Figure 12.

Use original manufacturer's replacement cutting line for best performance.

- Remove the battery pack.
- Push in tabs on side of spool cover.
- Pull spool cover up to remove.
- Remove the old spool.
- To install the new spool, make sure the cutting line is captured in the slot on the new spool. Make sure the end of the cutting line is extended approximately 15cm beyond the slot.
- Install the new spool so that the cutting line and slot align with the eyelet in the cutting head. Thread the cutting line into the eyelet.
- Pull the cutting line extending from the cutting head so the cutting line releases from the slot in the spool.
- Reinstall the spool cover by depressing tabs into slots and pushing down until spool cover clicks into place.

CUTTING LINE REPLACEMENT

See Figures 12 - 13.

- Remove the battery pack.
- Remove the spool from the cutting head.

NOTE Remove any old cutting line remaining on the spool.

- Cutting a piece of cutting line approximately 3m long.
- Insert the cutting line into the anchor hole in the upper part of the spool. Wind the cutting line around the upper part of the spool clockwise, as shown by the arrows on the spool. Place cutting line in the slot on upper spool flange, leaving about 15cm. Extended beyond the slot. Do not overfill. After winding the cutting line, there should be at least 0.635cm between the wound cutting line and the outside edge of the spool.
- Replace the spool, and the spool cover. Refer to spool replacement earlier in this manual.

STORING THE TRIMMER

- Remove the battery pack from the trimmer before storing.
- Clean all foreign material from the trimmer.
- Store it in a place that is inaccessible to children.
- Keep away from corrosive agents such as garden chemicals and de-icing salts.

- Store and charge your batteries in a cool area. Temperatures above or below normal room temperature will shorten battery pack life.
- Never store batteries in a discharged condition. Wait for battery pack to cool and fully charge immediately.
- Store the battery pack where the temperature is below 27°C and away from moisture.
- All batteries gradually lose their charge. The higher the temperature, the quicker they lose their charge. If you store your unit for long periods of time without using it, recharge the batteries every month or two. This practice will prolong battery pack life.

ENVIRONMENTAL PROTECTION

- Environmental protection should be a priority of considerable importance when using the machine, for the benefit of both social coexistence and the environment in which we live. Try not to cause any disturbance to the surrounding area.
- Scrupulously comply with local regulations for the disposal of packaging, deteriorated parts or any elements with a strong environmental impact; this waste must not be disposed of as normal waste, it must be separated and

taken to specified waste disposal centres where the material will be recycled.

- Scrupulously comply with local regulations for the disposal of waste materials after mowing.
- At the time of decommissioning, do not pollute the environment with the machine, but hand it over to a disposal centre, in accordance with the local laws in force.

DISPOSAL



Do not dispose of electrical equipment with household waste material. In observance of European Directive 2012/19/EC on waste electrical and electronic equipment and its implementation in accordance with national regulations, electric equipment that has reached the end of its life must be collected separately and recycled in an ecologically compatible way. If electrical equipment is disposed of in dumps or in landfills, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. For further information on the disposal of this product, contact a domestic waste collection authority or your dealer.

7. TROUBLESHOOTING

Problem	Possible cause	Solution
String will not advance when using the auto-feed head.	String is welded to itself.	Lubricate with silicone spray.
	Not enough string on spool.	Install more string, refer to string replacement earlier in this manual
	String is worn too short.	Pull string while pressing line release button.
	String is tangled on spool.	Remove string from spool and rewind. Refer to string replacement earlier in this manual
Grass wraps around shaft housing and string head	Cutting tall grass at ground level	Cut tall grass from the top down to prevent wrapping
Motor fails to start when switch trigger is depressed.	Battery is not secure.	To secure the battery pack, make sure the latch on bottom of the battery pack snaps into place.
	Battery is not charged.	Charge the battery pack according to the instructions included with your model
	Shaft not connected completely.	Make sure lower shaft is fully seated in shaft coupler on upper shaft and secure shaft coupler.

DICHIARAZIONE CE DI CONFORMITÀ (Istruzioni Originali)

(Direttiva Macchine 2006/42/CE, Allegato II, parte A)

1. **La Società:** STIGA SpA – Via del Lavoro, 6 – 31033 Castelfranco Veneto (TV) – Italy
2. Dichiaro sotto la propria responsabilità, che la macchina: Tagliaerba/tagliabordi portatile,
taglio erba

a) Tipo / Modello Base

TR 48 Li

b) Mese/Anno di costruzione

c) Matricola

c) Motore

a batteria

3. È conforme alle specifiche delle direttive:

- MD: 2006/42/EC

e) Ente Certificatore: /

f) Esame CE del tipo: /

- OND: 2000/14/EC, ANNEX VI, proc.1- 2005/88/EC
D. Lgs. 262/2002, ANNEX VI, proc. 1 (Italy)

e) Ente Certificatore:

Intertek Testing Services Shanghai
Building no.86, 1198 Qinzhou Road (North) ,
Shanghai 200233 – China

- EMCD: 2014/30/EU

- RohS II: 2011/65/EU

4. Riferimento alle Norme armonizzate:

EN 60335-1:2012/A11:2014

EN 50636-2-91:2014

EN 50581:2012

EN 55014-1:2008/A1:2009/A2:2011

EN 55014-2:1997/A1:2001/A2:2008

g) Livello di potenza sonora misurato

93 dB(A)

h) Livello di potenza sonora garantito

96 dB(A)

i) Ampiezza di taglio

 
30 cm

m) Persona autorizzata a costituire il Fascicolo Tecnico:

STIGA SpA
Via del Lavoro, 6
31033 Castelfranco Veneto (TV)- Italia

n) Castelfranco V.to, 13.07.2017

Vice Presidente Quality & Customer Service
Ing. Raimondo Hippolit



IT • Il contenuto e le immagini del presente manuale d'uso sono stati realizzati per conto di STIGA SpA e sono tutelati da diritto d'autore – E' vietata ogni riproduzione o alterazione anche parziale non autorizzata del documento.

BG • Съдържанието и изображенията в настоящото ръководство са извършени за STIGA SpA и са защитени с авторски права – Забранява се всяко неотуризирано възпроизвеждане или промяна, дори и отчасти на документа.

BS • Sadržaj i slike iz ovog korisničkog priručnika napravljeni su isključivo za STIGA SpA i zaštićeni su autorskim pravima – zabranjena je svaka neovlaštena reprodukcija ili izmjena dokumenta, djelomično ili u potpunosti.

CS • Obsah a obrázky v tomto návodu k použití byly zpracovány jménem společnosti STIGA SpA a jsou chráněny autorským právem – Reprodukce či nepovolené pozměňování tohoto dokumentu, a to i částečné, je zakázáno.

DA • Indhold og illustrationer i denne vejledning er blevet skabt på vegne af STIGA SpA og er beskyttet af ophavsret – Enhver gengivelse eller ændring, også delvis, af dokumentet uden autorisation hertil er forbudt.

DE • Inhalt und Bilder dieser Bedienungsanleitung wurden im Namen von STIGA SpA erstellt und sind urheberrechtlich geschützt – Jede nicht genehmigte Vervielfältigung oder Veränderung, auch auszugsweise, dieses Dokuments ist verboten.

EL • Το περιεχόμενο και οι εικόνες στο παρόν εγχειρίδιο χρήσης δημιουργήθηκαν για λογαριασμό της εταιρείας STIGA SpA και προστατεύονται από πνευματικά δικαιώματα – Απαγορεύεται οποιαδήποτε αναπαραγωγή ή τροποποίηση, έστω και μερική, του εγγράφου χωρίς έγκριση.

EN • The content and images in this User Manual were produced expressly for STIGA SpA and are protected by copyright – any unauthorised reproduction or modification to the document, either partially or in full, is prohibited.

ES • El contenido y las imágenes del presente manual de uso han sido creados por STIGA SpA y están protegidos por los derechos de autor – Se prohíbe toda reproducción o modificación, incluso parcial, no autorizada del documento.

ET • Käesoleva kasutusjuhendi sisu ja kujutised on toodetud konkreetselt ettevõttele STIGA SpA ja neile rakendub autorikaitseadus – dokumendi igasuguse osaline või täielik ilma loata reproduitseerimine või muutmine on keelatud.

FI • Tämän käyttöoppaan sisältö ja kuvat on valmistettu STIGA SpA -yhtiön toimesta ja niitä suojaa tekijänoikeuslaki. – Asiakirjan kaikenlainen kopioiminen tai muuttaminen, osittainkin, on kielletty ilman erityistä lupaa.

FR • Le contenu et les images du présent manuel d'utilisation ont été réalisés pour le compte de STIGA SpA et sont protégés par un droit d'auteur - Toute reproduction ou modification non autorisée, même partielle, du document, est interdite.

HR • Sadržaj i slike u ovom priručniku za uporabu izrađeni su za tvrtku STIGA SpA te su obuhvaćeni autorskim pravima – Zabranjuje se neovlašteno umnožavanje ili prilagodba, djelomična ili u cijelosti, ovog dokumenta.

HU • Ennek a használati útmutatónak a tartalma és a benne szereplő képek kizárólag a STIGA SpA számára készültek és szerzői joggal védettek – tilos a dokumentum bármely részének vagy egészének engedély nélküli sokszorosítása és módosítása.

LT • Šio naudotojo vadovo turinis ir paveikslėliai skirti tik „STIGA SpA“ ir yra saugomi autorių teisėmis – dokumentą atgaminti ar modifikuoti, visiškai arba iš dalies, yra draudžiama.

LV • Šis lietotāja rokasgrāmatas saturs un attēli ir veidoti tikai STIGA SpA un ir aizsargāti ar autortiesībām. Jebkāda dokumenta vai tā daļas prettiesiska kopēšana vai pārveide ir stingri aizliegta.

MK • Содржината и сликите во Упатството за корисникот се подготвени исклучиво за STIGA SpA и се заштитени со авторски права – забрането е секое делумно или целосно неовластено репродуцирање или измена на документот.

NL • De inhoud en de afbeeldingen van deze gebruikshandleiding werden gerealiseerd voor rekening van STIGA SpA en zijn beschermd door het auteursrecht – Elke niet-geautoriseerde reproductie of wijziging, ook gedeeltelijke, van het document is verboden.

NO • Innholdet og bildene i denne brukerveiledningen er utført på oppdrag fra STIGA SpA og er beskyttet ved opphavsrett – Enhver gjengivelse eller endring, selv kun delvis, er forbudt.

PL • Treść oraz ilustracje zawarte w niniejszej instrukcji obsługi powstały na zlecenie spółki STIGA SpA i są chronione prawami autorskimi – Zabrania się wszelkiego kopiowania bądź modyfikowania, także częściowego, niniejszego dokumentu bez uzyskania stosownej zgody.

PT • As imagens e os conteúdos contidos no presente Manual do Utilizador foram expressamente criados para uso exclusivo da STIGA SpA, encontrando-se protegidos por direitos de autor. Qualquer tipo de reprodução ou alteração, parcial ou integral, não autorizadas deste Manual estão expressamente proibidas.

RO • Conținutul și imaginile din manualul de utilizare de față au fost realizate în numele STIGA SpA și sunt protejate de drepturi de autor – Este interzisă orice reproducere sau modificare chiar și parțială neautorizată a documentului.

RU • Тесты и изображения, содержащиеся в настоящем руководстве, были созданы в интересах STIGA SpA и защищены авторскими правами – Любое несанкционированное воспроизведение или изменение документа запрещено.

SK • Obsah a obrázky v tomto návode na používanie boli spracované menom spoločnosti STIGA SpA a sú chránené autorským právom – Reprodukcie či nepovolené pozměňovanie tohto dokumentu, a to aj čiastočné, je zakázané.

SL • Vsebine in slike v tem uporabniškem priručniku so izdelane za podjetje STIGA SpA in so zaščitene z avtorskimi pravicami – vsakršno nepooblaščenno razmnoževanje ali spreminjanje dokumenta, v celoti ali delno, je prepovedano.

SR • Sadržaj i slike ovog priručnika za upotrebu su napravljeni u ime STIGA SpA i zaštićeni su autorskim pravima – Zabranjena je svaka potpuna ili delimična reprodukcija ili izmena dokumenta bez odobrenja.

SV • Innehållet och bilderna i denna användarhandbok har framställts för STIGA SpA och skyddas av upphovsrätt – all form av reproduktion eller ändring, även partiell, som inte auktoriserats är förbjuden.

TR • Bu Kullanıcı Kılavuzundaki içerik ve resimler açıkça STIGA SpA için üretilmiştir ve telif hakkı ile korunmaktadır – dokümanın izinsiz olarak tamamen ya da kısmen herhangi bir şekilde çoğaltılması ya da değiştirilmesi yasaktır.



.....	
Type:	 L_{WA} dB
..... -s/n -Art.N	
CE	

STIGA SpA

Via del Lavoro, 6

31033 Castelfranco Veneto (TV) ITALY