


TR 24 Li
TR 24 Li B

STIGA[®]

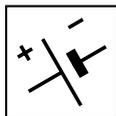

- IT** **Tagliaerba/tagliabordi con alimentazione a batteria portatile**
MANUALE DI ISTRUZIONI
ATTENZIONE: prima di usare la macchina, leggere attentamente il presente libretto.
- BG** **тревен тример/тример с преносима акумулаторна батерия**
УПЪТВАНЕ ЗА УПОТРЕБА
ВНИМАНИЕ: преди да използвате машината прочетете внимателно настоящата книжка.
- BS** **Ručna kosilica/trimer makaze na bateriju**
UPUTSTVO ZA UPOTREBU
PAZŃJA: prije nego što koristite ovu mašinu, pažljivo pročitajte priručnik s uputama.
- CS** **Přenosný akumulátorový vyživač/ořezávač okrajů trávníku**
NÁVOD K POUŽITÍ
UPOZORNĚNÍ: před použitím stroje si pozorně přečtěte tento návod k použití.
- DA** **Bærbar batteridreven græstrimmer/kantklipper**
BRUGSANVISNING
ADVARSEL: læs instruktionsbogen omhyggeligt igennem, før du tager denne maskine i brug.
- DE** **Handgehaltener batteriebetriebener Rasentrimmer/Rasenkantenschneider**
GEBRAUCHSANWEISUNG
ACHTUNG: vor inbetriebnahme des geräts die gebrauchsanleitung aufmerksam lesen.
- EL** **φορητό χλοοκοπτικό / κόφτης άκρων μπαταρίας**
ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ
ΠΡΟΣΟΧΗ: πριν χρησιμοποιήσετε το μηχάνημα, διαβάστε προσεκτικά το παρόν εγχειρίδιο.
- EN** **Battery powered hand-held lawn trimmer / edge trimmer**
OPERATOR'S MANUAL
WARNING: read thoroughly the instruction booklet before using the machine.
- ES** **Cortacésped/cortabordes con alimentación por batería portátil**
MANUAL DE INSTRUCCIONES
ATENCIÓN: antes de utilizar la máquina, leer atentamente el presente manual.
- ET** **Kaasaskantav akutoitega murulõikur/äärelõikur**
KASUTUSJUHE
TÄHELEPANU: enne masina kasutamist lugeda tähelepanelikult antud kasutusjuhendit.
- FI** **Käsin kannateltava akkukäyttöinen nurmikoneleikkuri/nurmikon reunojen viimeistelyleikkuri**
KÄYTTÖOHJEET
VAROITUS: lue käyttöopas huolellisesti ennen koneen käyttöä.
- FR** **Coupe-herbe/coupe-bordures portatif alimenté par batterie**
MANUEL D'UTILISATION
ATTENTION: lire attentivement le manuel avant d'utiliser cette machine.
- HR** **Prijenosni šišač trave/šišač travnih rubova s baterijskim napajanjem**
PRIRUČNIK ZA UPORABU
POZOR: prije uporabe stroja, pažljivo pročitajte ovaj priručnik.
- HU** **Hordozható akkumulátoros fűnyíró/szegélynyíró**
HASZNÁLATI UTASÍTÁS
FIGYELEM! a gép használatá előtti olvassa el figyelmesen a jelen kézikönyvet.
- LT** **Rankinė akumuliatorinė vejapjovė -trimeris vejos kraštams**
NAUDOJIMO INSTRUKCIJOS
DĖMESIO: prieš naudojant įrenginį, atidžiai perskaityti šį naudotojo vadovą.
- LV** **Ar bateriju darbināma rokā turama zālienu pļaujmašīna / zālienu apmaļu pļaujmašīna**
LIETOŠANAS INSTRUKCIJA
UZMANĪBU: pirms aparāta lietošanai rūpīgi izlasiet doto instrukciju.
- MK** **Преносна тревокосачна/поткаструвач на батерии**
УПАТСТВА ЗА УПОТРЕБА
ВНИМАНИЕ: прочитајте го внимателно ова упатство пред да ја користите машината.
- NL** **Draagbare grasmaaier/graskantenrijder met accuvoeding**
GEBRUIKERSHANDLEIDING
LET OP: vooraleer de machine te gebruiken, dient men deze handleiding aandachtig te lezen.

NO Bærbar batteridrevet plen- og kanttrimmer
INSTRUKSJONSBOK

ADVARSEL: les denne bruksanvisningen nøye før du bruker maskinen.

PL Przenośna podcinarka/przycinarka elektryczna akumulatorowa
INSTRUKCJE OBSŁUGI

OSTRZEŻENIE: przed użyciem maszyny, należy uważnie przeczytać niniejszą instrukcję.

PT Aparador de relva/aparador de canto alimentado a bateria
MANUAL DE INSTRUÇÕES

ATENÇÃO: antes de usar a máquina, leia atentamente o presente manual.

RO Maşină de tuns iarba/maşină de tuns margini de gazon alimenta-
te cu baterie portabilă
MANUAL DE INSTRUCȚIUNI

ATENȚIE: înainte de a utiliza maşina, citiți cu atenție manualul de față.

RU Портативная газоносеилка / триммер для краев газона с
батаре́йным пита́нием
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

ВНИМАНИЕ: прежде чем пользоваться оборудованием, внимательно прочтите это руководство по эксплуатации.

SK Prenosný akumulátorový vyžínač/orezávač okrajov trávnik
NÁVOD NA POUŽITIE

UPOZORNENIE: pred použitím stroja si pozorne prečítajte tento návod.

SL Prenosni akumulatorski obrezovalnik trat / tratnih robov
PRIROČNIK ZA UPORABO

POZOR: preden uporabite stroj, pazljivo preberite priročnik z navodili.

SR Ručna kosačica/trimer makaze na bateriju
PRIRUČNIK SA UPUTSTVIMA

PAŽNJA: pre korišćenja mašine pažljivo pročitati ovaj priručnik.

SV Batteridrivnen bärbar gräsklippare/kantskärare
BRUKSANVISNING



VARNING: läs igenom hela detta häfte innan du använder maskinen.

TR Batarya beslemeli elde taşınabilir çim/kenar kesme makinesi
KULLANIM KILAVUZU


DIKKAT: makineyi kullanmadan önce talimatlar içeren kilavuzu dikkatle okuyun.

ITALIANO - Istruzioni Originali	IT
БЪЛГАРСКИ - Превод на оригиналните инструкции	BG
BOSANSKI - Prijevod originalnih uputa	BS
ČESKY - Překlad původního návodu k používání	CS
DANSK - Oversættelse af den originale brugsanvisning	DA
DEUTSCH - Übersetzung der Originalbetriebsanleitung	DE
ΕΛΛΗΝΙΚΑ - Μετάφραση του πρωτοτύπου των οδηγιών χρήσης	EL
ENGLISH - Translation of the original instruction	EN
ESPAÑOL - Traducción del Manual Original	ES
EESTI - Algupärase kasutusjuhendi tõlge	ET
SUOMI - Alkuperäisten ohjeiden käännös	FI
FRANÇAIS - Traduction de la notice originale	FR
HRVATSKI - Prijevod originalnih uputa	HR
MAGYAR - Eredeti használati utasítás fordítása	HU
LIETUVIŠKAI - Originalių instrukcijų vertimas	LT
LATVIEŠU - Instrukciju tulkojums no oriģinālvalodas	LV
МАКЕДОНСКИ -Превод на оригиналните упатства	MK
NEDERLANDS - Vertaling van de oorspronkelijke gebruiksaanwijzing	NL
NORSK - Oversettelse av original bruksanvisning	NO
POLSKI - Tłumaczenie instrukcji oryginalnej	PL
PORTUGUÊS - Tradução do manual original	PT
ROMÂN - Traducerea manualului fabricantului	RO
РУССКИЙ - Перевод оригинальных инструкций	RU
SLOVENŠČINA - Prevod izvirnih navodil	SL
SLOVENSKY - Preklad pôvodného návodu na použitie	SK
SRPSKI - Prevod originalnih uputstva	SR
SVENSKA - Översättning av bruksanvisning i original	SV
TÜRKÇE - Orijinal Talimatların Tercümesi	TR


1

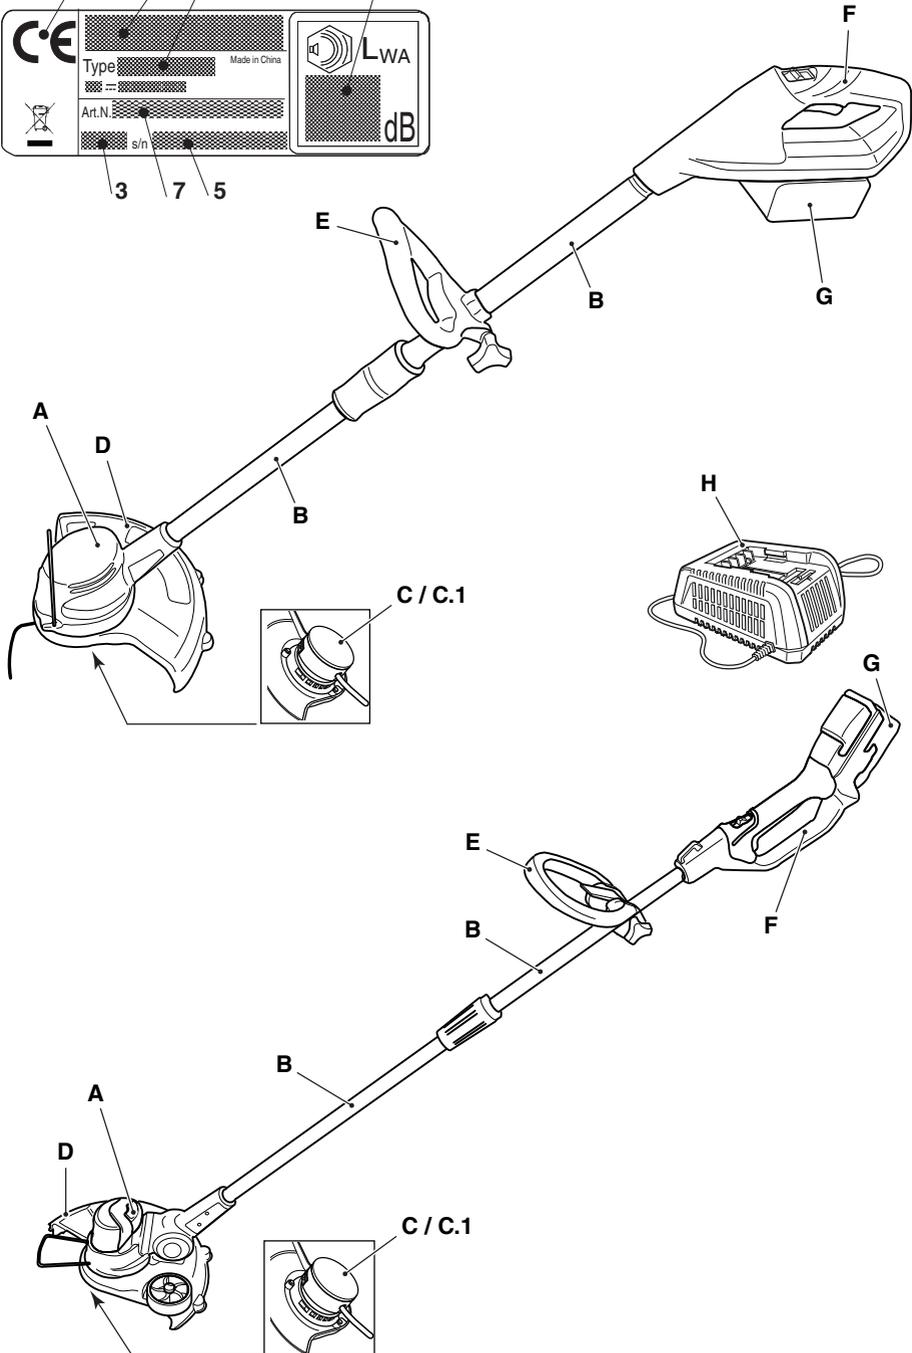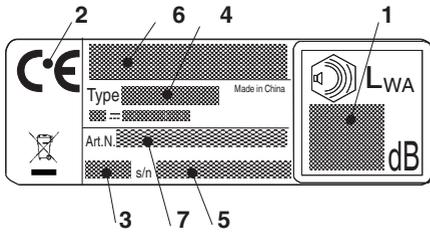


2






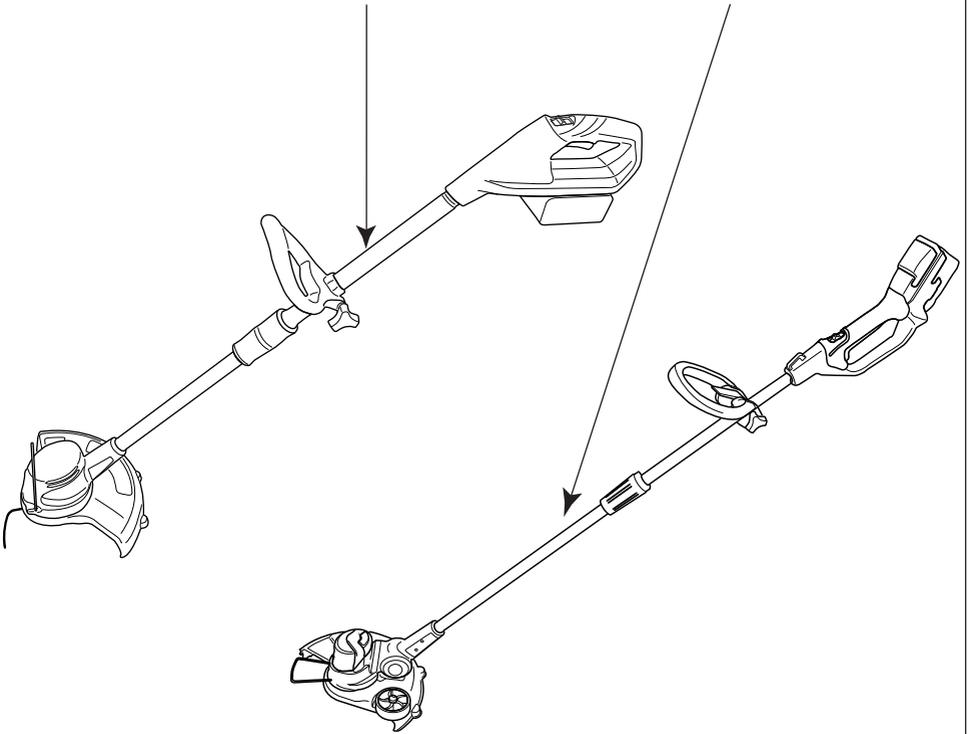


3

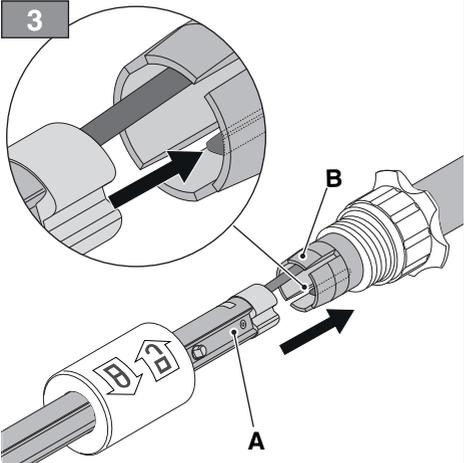


4

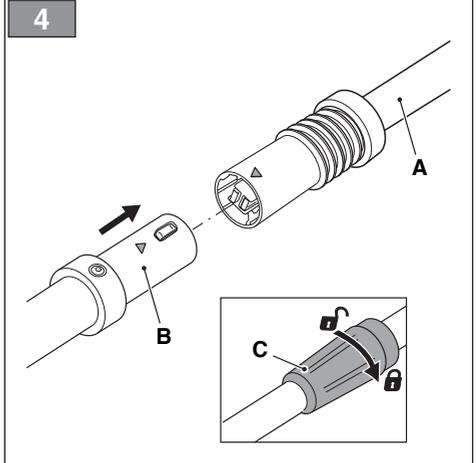


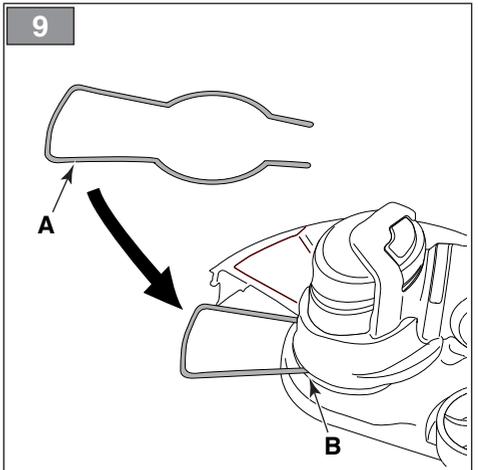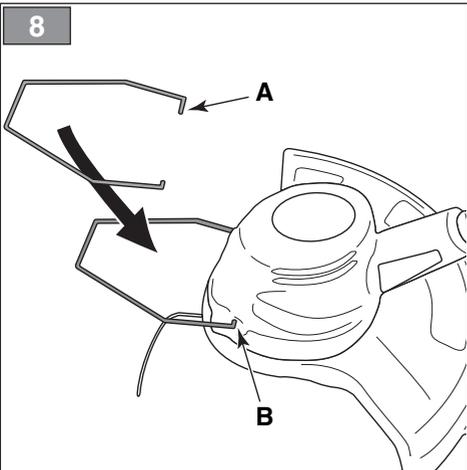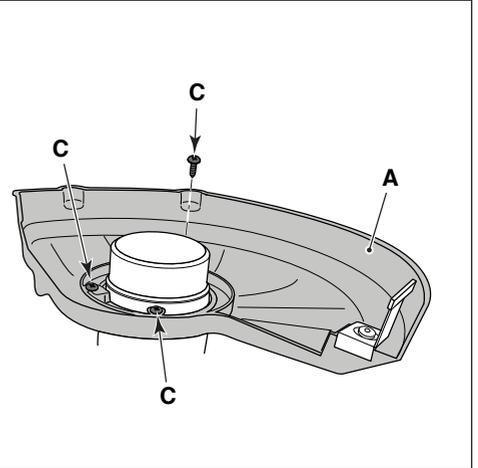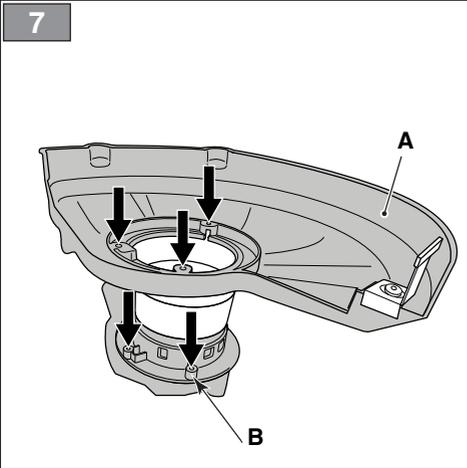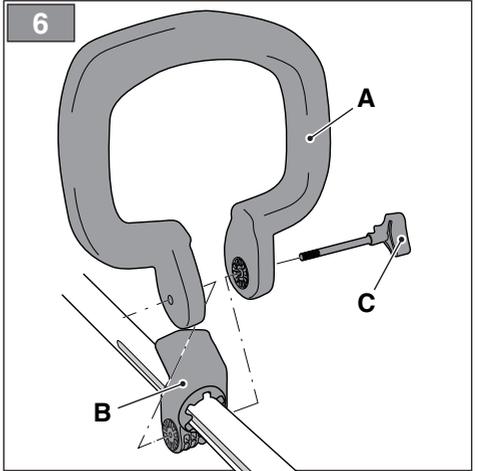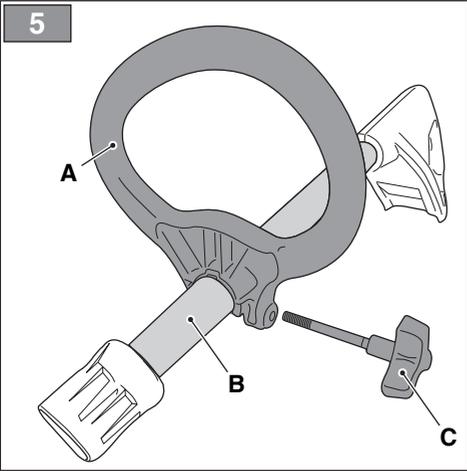


10

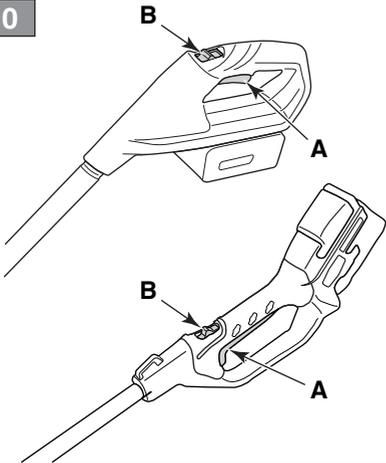


11

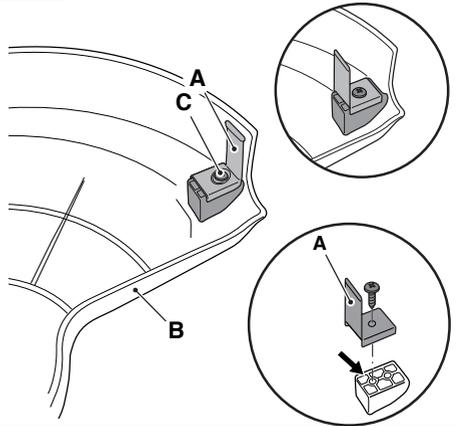


12

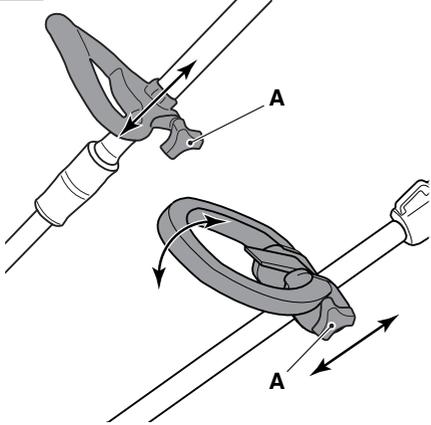


13




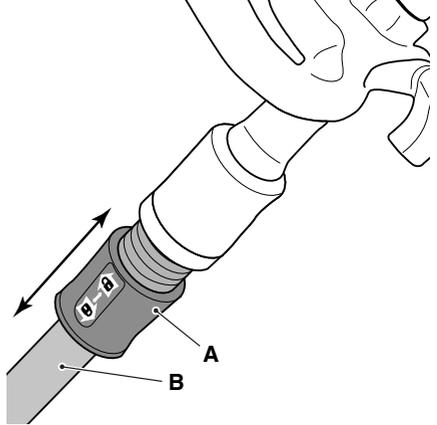


14

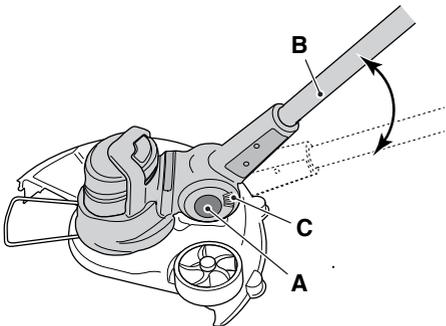


15

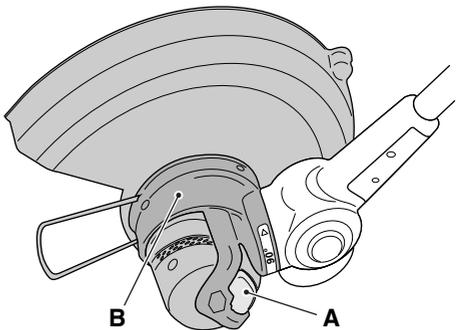


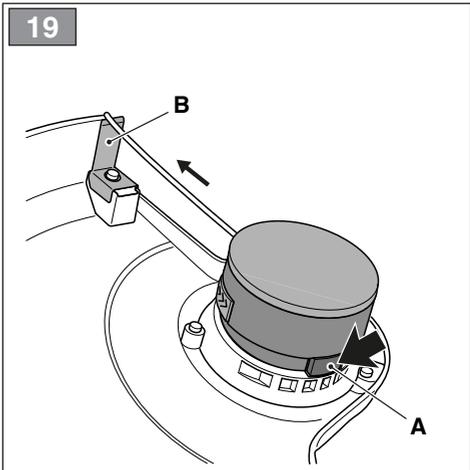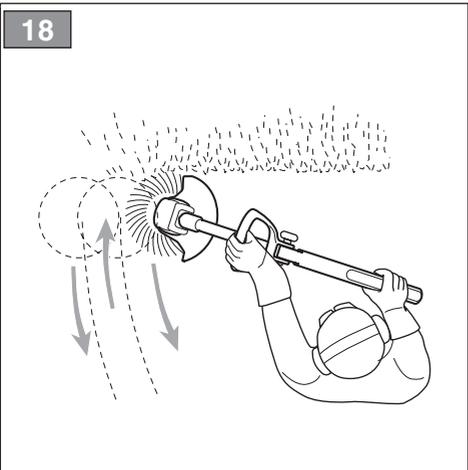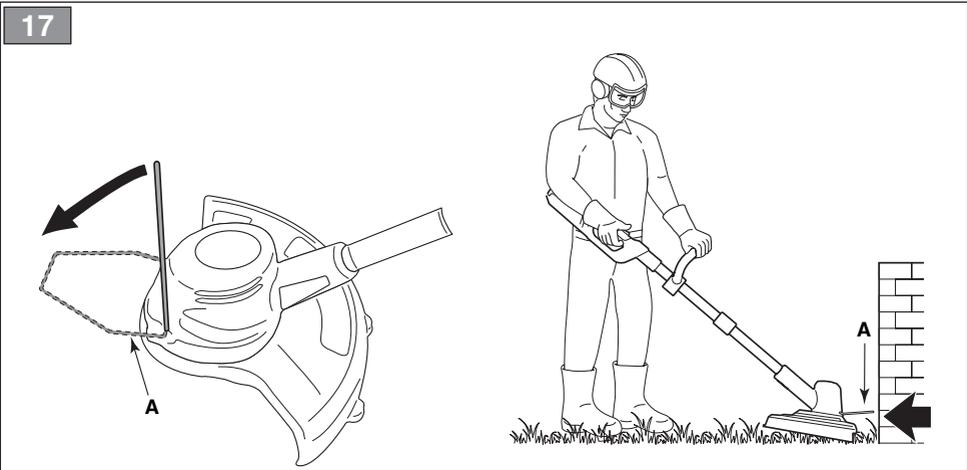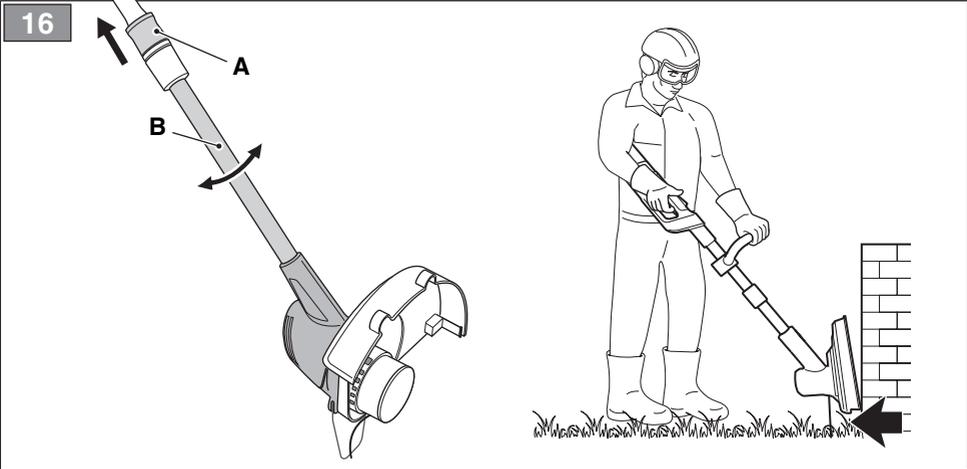


20

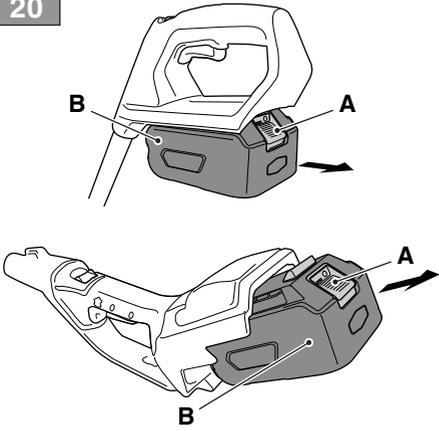


21

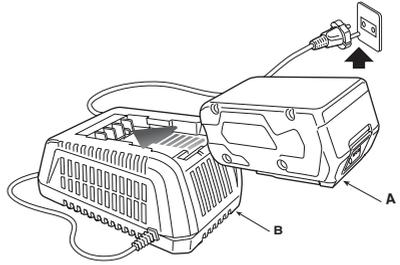


22

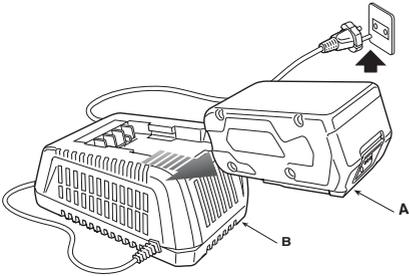


23

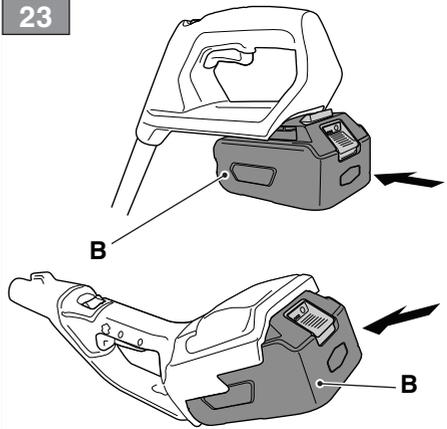


24

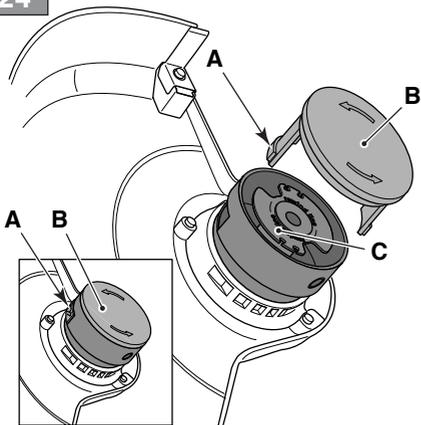


25

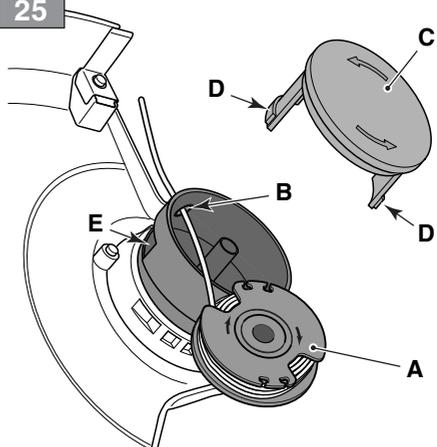


26

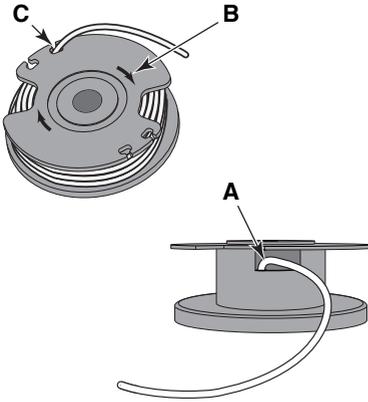

27

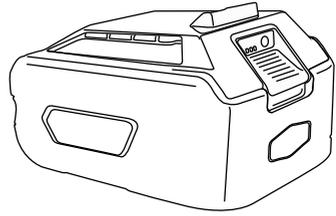

28

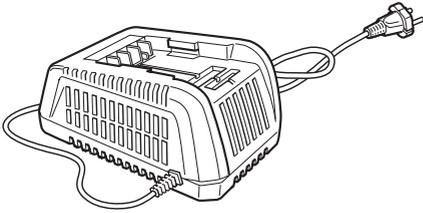

[1]	DATI TECNICI		TR 24 Li B	TR 24 Li
[2]	Tensione e frequenza di alimentazione MAX	V / DC	24	24
[3]	Tensione e frequenza di alimentazione NOMINAL	V / DC	22	22
[4]	Velocità senza carico	min ⁻¹	9000	9000
[5]	Velocità massima di rotazione dell'utensile (testina porta filo)	min ⁻¹	9000	9000
[6]	Larghezza di taglio (testina porta filo)	mm	300	300
[7]	Diametro filo testina (max)	mm	1,65	1,65
[8]	Codice dispositivo di taglio		18804529/0	18804529/0
[9]	Codice protezione		18810672/0	18804528/0
[10]	Asta separabile		-	√
[11]	Peso senza gruppo batteria	kg	2,2	2,5
[12]	Dimensioni			
[13]	Lunghezza	cm	126	173
[14]	Larghezza	cm	29	31
[15]	Altezza	cm	33	27,5
[16]	Livello di pressione sonora	dB(A)	83	82
[17]	Incertezza di misura	dB(A)	3	3
[18]	Livello di potenza sonora misurato	dB(A)	94,5	93
[17]	Incertezza di misura	dB(A)	0,29	3
[19]	Livello di potenza sonora garantito	dB(A)	96	96
[20]	Vibrazioni	m/s ²	2	2
[17]	Incertezza di misura	m/s ²	1,5	1,5

[22]	ACCESSORI A RICHIESTA	
[23]	Gruppo batteria, mod.	BT 24 Li 2.0 BT 24 Li 4.0
[24]	Carica batteria, mod.	CG 24 Li

a) **NOTA:** il valore totale dichiarato delle vibrazioni è stato misurato attenendosi ad un metodo normalizzato di prova e può essere utilizzato per fare un paragone tra un utensile e l'altro. Il valore totale delle vibrazioni può essere utilizzato anche in una valutazione preliminare dell'esposizione.

b) **AVVERTENZA:** l'emissione di vibrazioni nell'uso effettivo dell'utensile può essere diversa dal valore totale dichiarato a seconda dei modi in cui si utilizza l'utensile. Pertanto è necessario, durante il lavoro, adottare le seguenti misure di sicurezza volte a proteggere l'operatore: indossare guanti durante l'uso, limitare i tempi d'utilizzo della macchina e accorciare i tempi in cui si tiene premuta la leva comando acceleratore.

<p>[1] BG - ТЕХНИЧЕСКИ ДАННИ</p> <p>[2] Напрежение и честота на захранване MAX</p> <p>[3] Напрежение и честота на захранване NOMINAL</p> <p>[4] Скорост без товар</p> <p>[5] Максимална ротациона скорост на инструмента (глава за корда)</p> <p>[6] Ширина на рязане (глава за корда)</p> <p>[7] Диаметър за глава за корда (max)</p> <p>[8] Код на инструмента за рязане</p> <p>[9] Код на защитата</p> <p>[10] Отделяща се щанга</p> <p>[11] Тегло без акумулаторния блок</p> <p>[12] Размери</p> <p>[13] Дължина</p> <p>[14] Ширина</p> <p>[15] Височина</p> <p>[16] Ниво на звуковото налягане</p> <p>[17] Несигурност на измерване</p> <p>[18] Ниво на измерената звукова мощност</p> <p>[19] Гарантирано ниво на звукова мощност</p> <p>[20] Вибрации</p> <p>[22] Принадлежности по поръчка</p> <p>[23] Акумулаторен блок</p> <p>[24] Зарядно устройство за акумулатора</p> <p>a) ЗАБЕЛЕЖКА: декларираната обща стойност на вибрации е измерена придържайки се към</p>	<p>стандартизиран метод на изпитване на сравнение между един и друг инструмент. Общата стойност на вибрации може да се използва и за предварителна оценка на излагането.</p> <p>b) ПРЕДУПРЕЖДЕНИЕ: издаването на вибрации при реалното използване на инструмента може да бъде различна от общата декларирана стойност, в зависимост от начините на използване на инструмента. Поради това е необходимо по време на работа да се вземат следните предпазни мерки целящи предпазването на оператора: носете ръкавици по време на използването, ограничете времената на използване на машината и намалете времената, през които се държи натиснат лоста за управление на ускорителя.</p> <p>[1] BS - ТЕХНИЧКИ ПОДАЦИ</p> <p>[2] Napon i frekvencija napajanja MAX</p> <p>[3] Napon i frekvencija napajanja NOMINAL</p> <p>[4] Brzina bez opterećenja</p> <p>[5] Maksimalna brzina okretanja alatke (glava s reznom niti)</p> <p>[6] Širina reza (glava s reznom niti)</p> <p>[7] Promjer niti glave (maks.)</p> <p>[8] Šifra rezne glave</p> <p>[9] Šifra štitnika</p> <p>[10] Odvojni štip</p>	<p>[11] Težina bez baterije</p> <p>[12] Dimenzije</p> <p>[13] Dužina</p> <p>[14] Širina</p> <p>[15] Visina</p> <p>[16] Razina zvučnog pritiska</p> <p>[17] Mjerna nesigurnost</p> <p>[18] Izmjerena razina zvučne snage</p> <p>[19] Garantirana razina zvučne snage</p> <p>[20] Vibracije</p> <p>[22] Dodatna oprema na zahtjev</p> <p>[23] Baterija</p> <p>[24] Punjač baterije</p> <p>a) NAPOMENA: ukupna prijavljena vrijednost vibracija izmjerena je prema normalizovanoj metodi ispitivanja i može se koristiti za vršenje poređenja između dvije alatke. Ukupna vrijednost vibracija može se koristiti i prilikom prethodne procjene izloženosti.</p> <p>b) UPOZORENJE: emisija vibracija prilikom stvarne upotrebe alatke može se razlikovati od ukupne prijavljene vrijednosti u zavisnosti od načina na koji se koristi alatka. Stoga je neophodno, za vrijeme rada, primijeniti sljedeće sigurnosne mjere za zaštitu radnika: koristiti rukavice za vrijeme upotrebe, ograničiti vrijeme upotrebe mašine i skratiti vrijeme za koje se drži pritisnuta poluga komande gasa.</p>
<p>[1] CS - TECHNICKÉ PARAMETRY</p> <p>[2] Napájecí napětí a frekvence MAX</p> <p>[3] Napájecí napětí a frekvence NOMINAL</p> <p>[4] Rychlost bez nákladu</p> <p>[5] Maximální rychlost otáčení nástroje (strunová hlava)</p> <p>[6] Záběr (strunová hlava)</p> <p>[7] Průměr struny (max.)</p> <p>[8] Kód sekacího zařízení</p> <p>[9] Kód ochranného krytu</p> <p>[10] Dělený hřídel</p> <p>[11] Hmotnost bez akumulátoru</p> <p>[12] Rozměry</p> <p>[13] Délka</p> <p>[14] Šířka</p> <p>[15] Výška</p> <p>[16] Úroveň akustického tlaku</p> <p>[17] Nepresnost měření</p> <p>[18] Naměřená hladina akustického výkonu</p> <p>[19] Zaručená úroveň akustického výkonu</p> <p>[20] Vibrace</p> <p>[22] Příslušenství na požádání</p> <p>[23] Akumulátor</p> <p>[24] Nabíječka akumulátorů</p> <p>a) POZNÁMKA: prohlášená celková hodnota vibrací byla naměřena s použitím normalizované zkušební metody a lze ji použít pro srovnání jednotlivých nástrojů. Celková hodnota vibrací může být použita také při přípravě výhodnocování vystavení vibracím.</p>	<p>b) VAROVÁNÍ: emise vibrací při skutečném použití nástroje může být odlišná od deklarované celkové hodnoty v závislosti na režimech, ve kterých se daný nástroj používá. Proto je třeba během práce přijmout níže uvedené bezpečnostní opatření, jejichž cílem je ochránit operátora: během běžného použití mějte nasazené rukavice a omezte dobu použití stroje a zkrátte dobu, během kterých je zatlačena ovládací páka plynu.</p> <p>[1] DA - TEKNISKE DATA</p> <p>[2] Forsyningsspænding og -frekvens MAX</p> <p>[3] Forsyningsspænding og -frekvens NOMINAL</p> <p>[4] Hastighed uden belastning</p> <p>[5] Maksimalt omdrejningstal for redskabet (trådhoved)</p> <p>[6] Skærebredde (trådhoved)</p> <p>[7] Diameter af tråd i hovedet (maks.)</p> <p>[8] Skæreanordningens varenr.</p> <p>[9] Beskyttelsens varennummer</p> <p>[10] Adskillelig stang</p> <p>[11] Vægt uden batteri</p> <p>[12] Mål</p> <p>[13] Længde</p> <p>[14] Bredde</p> <p>[15] Højde</p> <p>[16] Lydtryksniveau</p> <p>[17] Målesikkerhed</p> <p>[18] Målt lydeffektniveau</p> <p>[19] Garanteret lydeffektniveau</p> <p>[20] Vibrationer</p>	<p>[22] Ekstraudstyr</p> <p>[23] Batteri</p> <p>[24] Batterioplader</p> <p>a) BEMÆRK: den samlede erklærede værdi af vibrationer blev målt ifølge en standardiseret metode til afprøvning og kan bruges til at foretage en sammenligning mellem forskellige redskaber. Den samlede værdi af vibrationer kan også bruges til en indledende vurdering af eksponeringen.</p> <p>b) ADVARSEL: den faktiske udsendelse af vibrationer i forbindelse med brug af redskabet kan afvige fra den samlede atesterede værdi afhængigt af den konkrete brug af redskabet. Derfor er det nødvendigt, at man under arbejdet tager følgende sikkerhedsforanstaltninger for at beskytte brugeren. Bær handsker under brug, begræns den tid maskinen bruges og forkort den tid hvor gashåndtaget holdes aktiveret.</p>

<p>[1] DE - TECHNISCHE DATEN [2] Versorgungsspannung und -frequenz MAX [3] Versorgungsspannung und -frequenz NOMINAL [4] Leerlaufdrehzahl [5] Maximale Drehgeschwindigkeit des Werkzeugs (Fadenkopf) [6] Schnittbreite (Fadenkopf) [7] Durchmesser Faden Fadenkopf (max.) [8] Code Messer [9] Nummer Schutzeinrichtung [10] Trennbare Stange [11] Gewicht ohne Akku [12] Abmessungen [13] Länge [14] Breite [15] Höhe [16] Schalldruckpegel [17] Messungsgenauigkeit [18] Gemessener Schalleistungspegel [19] Garantiertes Schalleistungspegel [20] Vibrationen [22] Zubehör auf Anfrage [23] Akku [24] Batterieladegerät</p> <p>a) HINWEIS: Der erklärte Gesamtwert der Vibrationen wurde durch eine standardisierte Methode gemessen. Er kann verwendet werden, um einen Vergleich zwischen verschiedenen Werkzeugen anzustellen. Der Gesamtwert der Vibrationen kann auch bei einer Vorabbewertung der Vibrationsbelastung eingesetzt werden.</p>	<p>b) WARNUNG: Die Schwingungsemission bei der effektiven Verwendung des Werkzeugs kann sich je nach den Einsatzarten des Werkzeugs vom erklärten Gesamtwert unterscheiden. Deshalb ist es notwendig, während der Arbeit die folgenden Sicherheitsmaßnahmen zu ergreifen, um den Bediener zu schützen: Handschuhe während der Verwendung anziehen, die Einsatzzeiten der Maschine begrenzen und die Zeiten verkürzen, in denen man den Gashebel gedrückt hält.</p> <p>[1] EL - ΤΕΧΝΙΚΑ ΧΑΡΑΚΤΗΡΙΣΤΙΚΑ [2] Τάση και συχνότητα τροφοδοσίας MAX [3] Τάση και συχνότητα τροφοδοσίας NOMINAL [4] Ταχύτητα χωρίς φορτίο [5] Μέγιστη ταχύτητα περιστροφής εργαλείου (κεφαλή νήματος) [6] Πλάτος κοπής (κεφαλή νήματος) [7] Διάμετρος νήματος κεφαλής (μέγ.) [8] Κωδικός συστήματος κοπής [9] Κωδικός προστασίας [10] Αποσπώμενος άξονας [11] Βάρος γκρουπ μπαταρίας [12] Διαστάσεις [13] Μήκος [14] Πλάτος [15] Ύψος [16] Αβεβαιότητα μέτρησης</p>	<p>[17] Στάθμη ηχητικής πίεσης [18] Μετρούμενη στάθμη ηχητικής ισχύος [19] Στάθμη εγγυώμενης ηχητικής ισχύος [20] Κραδασμοί [22] Αιτούμενα παρελκομενα [23] Γκρουπ μπαταρίας [24] Φορτιστής μπαταρίας</p> <p>a) ΣΗΜΕΙΩΣΗ: Η συνολική δηλωμένη τιμή των κραδασμών έχει μετρηθεί με βάση μια πρότυπη μέθοδο δοκιμής και μπορεί να χρησιμοποιηθεί για τη σύγκριση διαφόρων εργαλείων. Η συνολική τιμή των κραδασμών μπορεί επίσης να χρησιμοποιηθεί για μια προκαταρκτική εκτίμηση της έκθεσης.</p> <p>b) ΠΡΟΕΙΔΟΠΟΙΗΣΗ: η εκπομπή κραδασμών κατά την πραγματική χρήση του εργαλείου μπορεί να είναι διαφορετική από τη συνολική δηλωμένη τιμή ανάλογα με τον τρόπο χρήσης του εργαλείου. Επομένως είναι απαραίτητο, κατά την εργασία, να λάβετε τα παρακάτω μέτρα ασφαλείας για την προστασία του χειριστή: φορέστε γάντια κατά τη χρήση, περιορίστε το χρόνο χρήσης του μηχανήματος και μειώστε το χρόνο χρήσης του μοχλού γκαζιού.</p>
<p>[1] EN - TECHNICAL DATA [2] Power supply frequency and voltage MAX [3] Power supply frequency and voltage NOMINAL [4] No load speed [5] Maximum tool rotation speed (cutting line head) [6] Cutting width (cutting line head) [7] Diameter of cutting line (max) [8] Cutting means code [9] Protection code [10] Separable rod [11] Weight without battery pack [12] Dimensions [13] Length [14] Width [15] Height [16] Sound pressure level [17] Uncertainty of measure [18] Measured sound power level [19] Guaranteed sound power level [20] Vibrations [22] Accessories available on request [23] Battery pack [24] Battery charger</p> <p>a) NOTE: the declared total vibration value was measured using a normalised test method and can be used to conduct comparisons between one tool and another. The total vibration value can also be used for a preliminary exposure evaluation.</p>	<p>b) WARNING: the vibrations emitted during actual use of the tool can differ from the declared total value according to how the tool is used. Whilst working, therefore, it is necessary to adopt the following safety measures designed to protect the operator: wear protective gloves whilst working, use the machine for limited periods at a time and decrease the time during which the throttle control lever is pressed.</p> <p>[1] ES - DATOS TÉCNICOS [2] Tensión y Frecuencia de alimentación MAX [3] Tensión y Frecuencia de alimentación NOMINAL [4] Velocidad sin carga [5] Velocidad máxima de rotación de la herramienta (cabezal porta hilo) [6] Ancho de corte (cabezal porta hilo) [7] Diámetro hilo cabezal (máx) [8] Código dispositivo de corte [9] Código de protección [10] Varilla separable [11] Peso sin grupo de batería [12] Dimensiones [13] Longitud [14] Anchura [15] Altura [16] Nivel de presión sonora [17] Incertidumbre de medida [18] Nivel de potencia sonora medido [19] Nivel de potencia sonora garantizado</p>	<p>[20] Vibraciones [22] Accesorios bajo pedido [23] Grupo de batería [24] Cargador de batería</p> <p>a) NOTA: el valor total de la vibración se ha medido según un método normalizado de prueba y puede utilizarse para realizar una comparación entre una máquina y otra . El valor total de la vibración también se puede emplear para la valoración preliminar de la exposición.</p> <p>b) ADVERTENCIA: la emisión de vibración en el uso efectivo del aparato puede ser diferente al valor total declarado según los modos en los que se utiliza la herramienta. Por ello, durante la actividad se deben poner en práctica las siguientes medidas de seguridad para el usuario: usar guantes, limitar el tiempo de uso de la máquina, así como el tiempo que se mantiene presionada la palanca de mando del acelerador.</p>

<p>[1] ET - TEHNILISED ANDMED</p> <p>[2] Toite pinge ja sagedus MAX</p> <p>[3] Toite pinge ja sagedus NOMINAL</p> <p>[4] Kiirus ilma koormuseta</p> <p>[5] Lõikeseadme maksimum pöördekiirus (nööripeaga)</p> <p>[6] Lõikelaius (nööripeaga)</p> <p>[7] Nööripea läbimõõt (maks.)</p> <p>[8] Lõikeseadme kood</p> <p>[9] Kaitse kood</p> <p>[10] Eraldatav varras</p> <p>[11] Kaal ilma akuta</p> <p>[12] Mootmed</p> <p>[13] Pikkus</p> <p>[14] Laius</p> <p>[15] Kõrgus</p> <p>[16] Helirõhu tase</p> <p>[17] Mootemääramatus</p> <p>[18] Helivõimsuse määdetav tase</p> <p>[19] Garanteeritud helivõimsuse tase</p> <p>[20] Vibratsioon</p> <p>[22] Tellimusel lisatarvikud</p> <p>[23] Aku</p> <p>[24] Akulaadidaja</p> <p>a) MÄRKUS: deklareeritud koguvibratsiooni tase mõõdeti standardiseeritud testi käigus, mille abil on võimalik võrrelda omavahel erinevate tööriistade vibratsiooni. Deklareeritud koguvibratsiooni võib kasutada ka eeldatava vibratsiooni käes olemise hindamiseks.</p>	<p>b) HOIATUS: tegelikud tööriista kasutamisel tekivad vibratsioonid võivad erineda deklareeritud koguvibratsiooni tasemest sõltuvalt tööriista kasutamise viisist. Seepärast tuleb töö ajal kasutuseel võtta ohutusmeetodid, millega töötajad kaitsta: kandke kasutamise ajal kindaid, piirake masina kasutamise aega ja lühendage perioode, mille väffel hoitakse gaasihooba all.</p> <p>[1] FI - TEKNISE TIEDOT</p> <p>[2] Syöttöjännite ja -taajuus MAX</p> <p>[3] Syöttöjännite ja -taajuus NOMINAL</p> <p>[4] Nopeus ilman kuormaa</p> <p>[5] Työkulun maksimipyörimisnopeus (siimapää)</p> <p>[6] Leikkuuleveys (siimapää)</p> <p>[7] Siimapään siiman halkaisija (max)</p> <p>[8] Leikkuuvälineen koodi</p> <p>[9] Suojakoodi</p> <p>[10] Irrotettava tanko</p> <p>[11] Paino ilman akkuyksikköä</p> <p>[12] Koko</p> <p>[13] Pituus</p> <p>[14] Leveys</p> <p>[15] Korkeus</p> <p>[16] Äänenpaineen taso</p> <p>[17] Mittauksen epävarmuus</p> <p>[18] Mittattu äänitehotaso</p> <p>[19] Taattu äänitehotaso</p> <p>[20] Tärinä</p> <p>[22] Tilattavat lisävarusteet</p> <p>[23] Akkuyksikkö</p> <p>[24] Akkulatari</p>	<p>a) HUOMAUTUS: tärinän kokonaisarvo on mitattu käyttämällä normalisoitua testiennetelmää ja sitä voidaan käyttää verrattaessa työkaluja keskenään. Tärinän kokonaisarvoa voidaan käyttää myös kun tehdään altistumista koskeva esiarviointi.</p> <p>b) VAROITUS: laitteen tuottama tärinä työvälineen todellisen käytön aikana saattaa poiketa ilmoitetusta kokonaisarvosta käytötavasta riippuen. Tämän vuoksi on tarpeen soveltaa seuraavia käyttäjää suojaavia turvatoimenpiteitä: käyttää käsineitä käytön aikana, rajoittaa laitteen käyttöaika ja lyhentää aikoja jolloin kaasuttimen vipua pidetään painettuna.</p>
<p>[1] FR - CARACTÉRISTIQUES TECHNIQUES</p> <p>[2] Tension et fréquence d'alimentation MAX</p> <p>[3] Tension et fréquence d'alimentation* NOMINAL</p> <p>[4] Vitesse à vide</p> <p>[5] Vitesse maximum de rotation de l'outil (tête à fil)</p> <p>[6] Largeur de coupe (tête à fil)</p> <p>[7] Diamètre fil tête (max.)</p> <p>[8] Code organe de coupe</p> <p>[9] Code protection</p> <p>[10] Tige séparable</p> <p>[11] Poids sans groupe batterie</p> <p>[12] Dimensions</p> <p>[13] Longueur</p> <p>[14] Largeur</p> <p>[15] Hauteur</p> <p>[16] Niveau de pression sonore</p> <p>[17] Incertitude de la mesure</p> <p>[18] Niveau de puissance sonore mesuré</p> <p>[19] Niveau de puissance sonore garanti</p> <p>[20] Vibrations</p> <p>[22] Accessoires sur demande</p> <p>[23] Groupe batterie</p> <p>[24] Chargeur de batterie</p> <p>a) REMARQUE : la valeur totale déclarée des vibrations a été mesurée selon une méthode d'essai normalisée et peut être utilisée pour comparer un outillage avec un autre. La valeur totale des vibrations peut être utilisée</p>	<p>aussi pour une évaluation préalable à l'exposition.</p> <p>b) AVERTISSEMENT : l'émission de vibrations lors de l'utilisation effective de l'outillage peut différer de la valeur totale déclarée en fonction des modes d'utilisation de l'outillage. Par conséquent, il est nécessaire, pendant le travail, d'adopter les mesures de sécurité suivantes en vue de protéger l'opérateur : porter des gants durant l'utilisation, limiter les temps d'utilisation de la machine et écourter les temps pendant lesquels le levier de commande de l'accélérateur est enfoncé.</p> <p>[1] HR - TEHNIČKI PODACI</p> <p>[2] Napon i frekvencija napajanja MAX</p> <p>[3] Napon i frekvencija napajanja NOMINAL</p> <p>[4] Brzina bez opterećenja</p> <p>[5] Maksimalna brzina rotacije alata (glava s reznom niti)</p> <p>[6] Širina rezanja (glava s reznom niti)</p> <p>[7] Promjer niti glave (maks.)</p> <p>[8] Šifra noža</p> <p>[9] Šifra štitnika</p> <p>[10] Odvojiva osovina</p> <p>[11] Težina bez baterije</p> <p>[12] Dimenzije</p> <p>[13] Dužina</p> <p>[14] Širina</p> <p>[15] Visina</p> <p>[16] Razina zvučnog tlaka</p>	<p>[17] Mjerna nesigurnost</p> <p>[18] Izmjereni razina zvučne snage</p> <p>[19] Zajamčena razina zvučne snage</p> <p>[20] Vibracije</p> <p>[22] Dodatni pribor na upit</p> <p>[23] Baterija</p> <p>[24] Razina zvučnog tlaka</p> <p>a) NAPOMENA: izjavljena ukupna vrijednost vibracija izmjerena je pridržavajući se normirane probne metode i može se koristiti za usporedbu jednog alata s drugim. Ukupnu vrijednost vibracija može se koristiti i u preliminarnoj procjeni izloženosti.</p> <p>b) UPOZORENJE: emisija vibracija pri stvarnoj uporabi alata može se razlikovati od izjavljene ukupne vrijednosti, ovisno o načinima korištenja alata. Stoga je za vrijeme rada potrebno poduzeti sljedeće sigurnosne mjere namijenjene zaštiti rukovatelja: nositi rukavice tijekom uporabe, ograničiti vrijeme korištenja stroja te skratiti vrijeme držanja pritisnute upravljačke ručice gasa.</p>

<p>[1] HU - MŰSZAKI ADATOK [2] Tápfeszültség és -frekvencia MAX [3] Tápfeszültség és -frekvencia NOMINAL [4] Sebesség terhelés nélkül [5] A szerszám maximális forgási sebessége (huzaltár fej) [6] Munkaszélesség (huzaltár fej) [7] Fej húzal keresztmetszet (max.) [8] Vágóegység kódszáma [9] Védelem kódja [10] Leválasztható rúd [11] Tömeg akkumulátor egység nélkül [12] Méretek [13] Hosszúság [14] Szélesség [15] Magasság [16] Hangnyomásszint [17] Mérési bizonytalanság [18] Mért zajteljesítmény szint [19] Garantált zajteljesítmény szint [20] Rezgések [22] Rendelhető tartozékok [23] Akkumulátor egység [24] Akkumulátor-töltő</p> <p>a) MEGJEGYZÉS: a rezgés névleges összértékét szabványos teszt módszerrel mértük, ezért alkalmazható más szerszámokkal való összehasonlításra. A rezgés névleges összértéke a kitettség előzetes értékelésére is alkalmas.</p>	<p>b) FIGYELMEZTETÉS: a szerszám valós használata során keletkező rezgés eltérhet a névleges összértéktől a szerszám használati módjának függvényében. Ezért a munka alatt alkalmazni kell a kezelő védelmét szolgáló biztonsági intézkedéseket: viseljen munkakesztyűt a használat során, korlátozza a gép használati idejét és lehetőleg rövid ideig tartsa nyomva a gázkart.</p> <p>[1] LT - TECHNINIAI DUOMENYS [2] Maitinimo įtampa ir dažnis MAX [3] Maitinimo įtampa ir dažnis NOMINAL [4] Greitis tuščiaja eiga [5] Maksimalus įrankio (pjovimo valo galvutės) sukimosi greitis [6] Pjovimo plotis (pjovimo valo galvutė) [7] Valo galvutės skersmuo (maks.) [8] Pjovimo įtaiso kodas [9] Apsaugos kodas [10] Nuimamas kotas [11] Svoris be baterijos [12] Išmatavimai [13] Ilgis [14] Plotis [15] Aukštis [16] Garso slėgio lygis [17] Matavimo paklaida [18] Išmatuotas garso galios lygis [19] Garantuotas garso galios lygis [20] Vibracijos [22] Priedai, kuriuos galima užsisakyti</p>	<p>[23] Baterijos blokas [24] Baterijos įkroviklis</p> <p>a) PASTABA: bendras deklaruojamas vibracijų lygis buvo išmatuotas laikantis standartizuoto bandymo metodo ir gali būti naudojamas lyginant vieną įrankį su kitu. Bendras vibracijų lygis gali būti naudojamas preliminariam vibracijų įvertinimui.</p> <p>b) ĮSPĖJIMAS: vibracijų skleidimo lygis eksploatuojant įrenginį gali skirtis nuo bendro deklaruojamo vibracijų lygio, priklausomai nuo būdu, kaip bus naudojamas įrankis. Dėl šios priežasties darbo metu yra būtina imtis saugos priemonių, susijusių su operatoriaus apsauga: naudojimo metu mūvėti pirštines, riboti įrenginio darbo trukmę ir trumpinti laiką, kurio metu būna paspausta akceleratoriaus valdymo svirtis.</p>
<p>[1] LV - TEHNISKIE DATI [2] Barošanas spriegums un frekvence MAX [3] Barošanas spriegums un frekvence NOMINAL [4] Brīvgaits ātrums [5] Maksimālais instrumenta griešanās ātrums (aukļas turēšanas galviņa) [6] Plaušanas platums (aukļas turēšanas galviņa) [7] Galviņas aukļas diametrs (maks.) [8] Griežējierīces kods [9] Aizsarga kods [10] Nonemams kāts [11] Svārs bez bateriju paketes [12] Izmēri [13] Garums [14] Platums [15] Augstums [16] Skaņas spiediena līmenis [17] Mērījumu kļūda [18] Mērītās skaņas jaudas līmenis [19] Garantētais skaņas jaudas līmenis [20] Vibrācija [22] Piederumi pēc pieprasījuma [23] Bateriju pakete [24] Akumulatoru lādētājs</p> <p>a) PIEZĪME: kopējā norādītā vibrāciju intensitātes vērtība tika izmērīta, izmantojot standarta pārbaudes metodi, un to var izmantot ierīču savstarpējai salīdzināšanai. Kopējo vibrāciju intensitātes vērtību var izmantot arī sākotnējai ekspozīcijas novērtēšanai.</p>	<p>b) BRĪDINĀJUMS: vibrāciju līmenis ierīces faktiskās izmantošanas laikā var atšķirties no kopējās norādītās vērtības, atkarībā no ierīces izmantošanas veida. Tāpēc darba laikā ir svarīgi izmantot šādas operatora aizsardzības līdzekļus: izmantošanas laikā valkājiet cimdus, ierobežojiet mašīnas izmantošanas laiku un sālsiniet laiku, kuru akceleratora vadības svira atrodas nospieštā stāvoklī.</p> <p>[1] MK - TEHNICHI PODATOCCI [2] Волтажа и вид на напојување MAX [3] Волтажа и вид на напојување NOMINAL [4] Брзина без оптеретување [5] Максимална брзина на ротација на дополнителната опрема (налем со конец) [6] Ширина на косење (налем со конец) [7] Дијаметар на калемот со конец (макс) [8] Код на уредот за сечење [9] Код на заштитата [10] Делив држач [11] Тежина без батерији [12] Димензии [13] Должина [14] Ширина [15] Висина [16] Ниво на звучен притисок [17] Отстапување од мерењата [18] Измерено ниво на бучава</p>	<p>[19] Гарантирано ниво на бучава [20] Вибрации [22] Додатоци достапни на барање [23] Батерији [24] Полнач за батерија</p> <p>a) ЗАБЕЛЕШКА: вкупната посочена вредност за вибрациите е измерена со пробен метод за нормализирање и може да се користи за споредбена вредност на еден уред со друг. Вкупната вредност на вибрациите може да се користи и за прелиминарна процена на изложеноста.</p> <p>b) ВНИМАНИЕ: емисијата на вибрациите при ефективна употреба може да се разликува од вкупната посочена вредност според начинот на употреба на уредот. Затоа е неопходно во текот на работата да се направат повеќе безбедносни мерења за да се заштити операторот: носете чевли во текот на употребата, ограничете го времето на употреба на машината и скратете го времето кога треба да се притисне рачката за управување со забрзувачот.</p>

<p>[1] NL - TECHNISCHE GEGEVENS</p> <p>[2] Spanning en frequentie voeding MAX</p> <p>[3] Spanning en frequentie voeding NOMINAL</p> <p>[4] Snelheid onbelast</p> <p>[5] Maximale rotatiesnelheid van het werktuig (draadhouder)</p> <p>[6] Snijbreedte (draadhouder)</p> <p>[7] Diameter draadhouder (max)</p> <p>[8] Code snij-richting</p> <p>[9] Code bescherming</p> <p>[10] Verwijderbare staaf</p> <p>[11] Gewicht zonder batterij-eenheid</p> <p>[12] Afmetingen</p> <p>[13] Lengte</p> <p>[14] Breedte</p> <p>[15] Hoogte</p> <p>[16] Niveau geluidsdruk</p> <p>[17] Meetonzekerheid</p> <p>[18] Gemeten geluidsvermogeniveau</p> <p>[19] Gegarandeerd geluidsniveau</p> <p>[20] Trillingen</p> <p>[22] Optionele accessoires</p> <p>[23] Batterij-eenheid</p> <p>[24] Batterijlader</p> <p>a) OPMERING: de totale verklaarde waarde van de trillingen werd gemeten met een genormaliseerde testmethode en kan gebruikt worden voor een vergelijking tussen twee werktuigen. De totale waarde van de trillingen kan ook gebruikt worden in een voorafgaande evaluatie van de blootstelling.</p>	<p>b) WAARSCHUWING: de emissie van trillingen bij het effectief gebruik van het werktuig kan verschillen van de totale verklaarde waarden, al naar gelang de manieren waarop het werktuig gebruikt wordt. Daarom is het noodzakelijk, tijdens het werk, de volgende veiligheidsmaatregelen toe te passen om de bediener te beschermen: handschoenen te gebruiken tijdens het gebruik, het gebruik van de machine te beperken en de de bedieningshendel van de versnelling zo kort mogelijk ingedrukt te houden.</p> <p>[1] NO - TEKNISCHE DATA</p> <p>[2] Matespenning og -frekvens MAX</p> <p>[3] Matespenning og -frekvens NOMINAL</p> <p>[4] Hastigheten belastning</p> <p>[5] Maksimal omdreiningshastighet for verktyget (trådspolen)</p> <p>[6] Klippebredde (trådspole)</p> <p>[7] Diameter for trådspolens tråd (maks)</p> <p>[8] Artikelnummer for klippeinnretning</p> <p>[9] Artikelnummer for vern</p> <p>[10] Avtagbar arm</p> <p>[11] Vekt uten batterienhet</p> <p>[12] Mål</p> <p>[13] Lengde</p> <p>[14] Bredde</p> <p>[15] Høyde</p> <p>[16] Lydtrykknivå</p> <p>[17] Målesikkerhet</p> <p>[18] Målt lydeffektnivå</p> <p>[19] Garantert lydeffektnivå</p>	<p>[20] Vibrasjoner</p> <p>[22] Tilleggsutstyr på forespørsel</p> <p>[23] Batterienhet</p> <p>[24] Batterilader</p> <p>a) MERK: Oppgitt totalverdi for vibrasjonene har blitt målt ved å bruke en normal prøvemethode og kan brukes for å sammenligne et redskap med et annet. Den totale vibrasjonsverdien kan også brukes i en foreløpig eksponeringsvurdering.</p> <p>b) ADVARSEL: emisjon av vibrasjoner ved effektiv bruk av redskapet kan avvike fra oppgitt totalverdi i henhold til måten redskapet brukes på. Derfor er det nødvendig, under arbeidet, å ta i bruk følgende sikkerhetstiltak for å beskytte operatøren: iføre seg hansker ved bruk, begrense maskinens holdtid og korte ned på tiden som man holder inne akselerator kommandospaken.</p>
<p>[1] PL - DANE TECHNICZNE</p> <p>[2] Napięcie i częstotliwość zasilania MAX</p> <p>[3] Napięcie i częstotliwość zasilania NOMINAL</p> <p>[4] Prędkość bez obciążenia</p> <p>[5] Maksymalna prędkość obrotowa urządzenia (głowica żyłkowa)</p> <p>[6] Szerokość cięcia (głowica żyłkowa)</p> <p>[7] Średnica głowicy żyłkowej (maks)</p> <p>[8] Kod agregatu tnącego</p> <p>[9] Kod zabezpieczenia</p> <p>[10] Wał podzielný</p> <p>[11] Ciężar bez zespołu akumulatora</p> <p>[12] Wymiary</p> <p>[13] Długość</p> <p>[14] Szerokość</p> <p>[15] Wysokość</p> <p>[16] Poziom ciśnienia akustycznego</p> <p>[17] Błąd pomiaru</p> <p>[18] Mierzony poziom mocy akustycznej</p> <p>[19] Gwarantowany poziom mocy akustycznej</p> <p>[20] Wibracje</p> <p>[22] Akcesoria dostępne na zamówienie</p> <p>[23] Zespół akumulatora</p> <p>[24] Ładowarka akumulatora</p> <p>a) UWAGA: Całkowita wskazana wartość drgań została zmierzona zgodnie ze znormalizowaną metodą badania i może być wykorzystana w celu dokonania porównania między dwoma urządzeniami. Całkowita wartość drgań może być również stosowana do wstępnej oceny zagrożenia.</p>	<p>b) UWAGA: emisja drgań w praktycznym zastosowaniu niniejszego narzędzia może się różnić od deklarowanej wartości łącznej, w zależności od sposobu użytkowania urządzenia. Dlatego, w celu zapewnienia bezpieczeństwa użytkownika, konieczne jest podczas pracy z urządzeniem podjęcie następujących środków bezpieczeństwa: noszenie rękawic podczas korzystania z urządzenia, ograniczenie czasu użytkowania urządzenia i skrócenie czasu trzymania wciśniętej dźwigni obrotów silnika.</p> <p>[1] PT - DADOS TÉCNICOS</p> <p>[2] Tensão e frequência de alimentação MAX</p> <p>[3] Tensão e frequência de alimentação NOMINAL</p> <p>[4] Velocidade sem carga</p> <p>[5] Velocidade máxima de rotação da ferramenta (cabeça porta-fio)</p> <p>[6] Largura de corte (cabeça porta-fio)</p> <p>[7] Diâmetro fio da cabeça (máx)</p> <p>[8] Código dispositivo de corte</p> <p>[9] Código de proteção</p> <p>[10] Haste separável</p> <p>[11] Peso sem grupo bateria</p> <p>[12] Dimensões</p> <p>[13] Comprimento</p> <p>[14] Largura</p> <p>[15] Altura</p> <p>[16] Nível de pressão sonora</p> <p>[17] Incerteza de medição</p> <p>[18] Nível medido de potência sonora</p> <p>[19] Nível garantido de potência sonora</p>	<p>[20] Vibrações</p> <p>[22] Acessórios a pedido</p> <p>[23] Grupo bateria</p> <p>[24] Carregador de bateria</p> <p>a) NOTA: o valor total declarado das vibrações foi mensurado de acordo com um método normalizado de ensaio e pode ser utilizado para comparar uma ferramenta com a outra. O valor total das vibrações também pode ser utilizado para uma avaliação preliminar da exposição.</p> <p>b) ADVERTÊNCIA: a emissão de vibrações no uso efetivo da ferramenta pode ser diversa do valor total declarado de acordo com os modos com os quais a ferramenta é utilizada. Portanto, durante o trabalho, é necessário adotar as seguintes medidas de segurança para proteger o operador: usar luvas durante o uso, limitar o tempo de utilização da máquina e encurtar o tempo durante o qual a alavanca de comando é mantida pressionada.</p>

<p>[1] RO - DATE TEHNICE</p> <p>[2] Tensiunea și frecvența de alimentare MAX</p> <p>[3] Tensiunea și frecvența de alimentare NOMINAL</p> <p>[4] Viteaza fără sarcină</p> <p>[5] Viteză maximă de rotație a sculei (unitate de suport fir)</p> <p>[6] Lățime de tăiere (cap de suport fir)</p> <p>[7] Diametru fir unitate (max)</p> <p>[8] Codul dispozitivului de tăiere</p> <p>[9] Codul protecției</p> <p>[10] Tijă separabilă</p> <p>[11] Greutate fără grupul acumulator</p> <p>[12] Dimensiuni</p> <p>[13] Lungime</p> <p>[14] Lățime</p> <p>[15] Înălțime</p> <p>[16] Nivel de presiune sonoră</p> <p>[17] Nesigurantă în măsurare</p> <p>[18] Nivel de putere sonoră măsurat</p> <p>[19] Nivel de putere sonoră garantat</p> <p>[20] Vibrații</p> <p>[22] Accesorii la cerere</p> <p>[23] Grupul acumulator</p> <p>[24] Alimentator pentru baterie</p> <p>a) OBSERVAȚIE: valoarea totală declarată a vibrațiilor a fost măsurată ținându-se cont de o metodă de probă normalizată și poate fi utilizată pentru a compara instrumentele între ele. Valoarea totală a vibrațiilor poate fi utilizată și pentru o evaluare preliminară a expunerii.</p>	<p>b) AVERTISMENT: emisia de vibrații în utilizarea efectivă a instrumentului poate fi diferită față de valoarea totală declarată, în funcție de modulurile în care se utilizează instrumentul. Din acest motiv este nevoie ca, în timpul sesiunii de lucru, să se adopte următoarele măsuri de siguranță menite să protejeze operatorul: purtarea mănușilor în timpul utilizării, limitarea duratei de utilizare a mașinii și scurtarea duratei în care se ține apăsată maneta de comandă a acceleratorului.</p> <p>[1] RU - ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ</p> <p>[2] Напряжение и частота питания МАХ</p> <p>[3] Напряжение и частота питания NOMINAL</p> <p>[4] Скорость без нагрузки</p> <p>[5] Максимальная скорость вращения инструмента (триммерная головка)</p> <p>[6] Ширина скашивания (триммерная головка)</p> <p>[7] Диаметр корда (макс.)</p> <p>[8] Код режущего приспособления</p> <p>[9] Код защиты</p> <p>[10] Съёмный шток</p> <p>[11] Вес без аккумулятора</p> <p>[12] Габариты</p> <p>[13] Длина</p> <p>[14] Ширина</p> <p>[15] Высота</p> <p>[16] Уровень звукового давления</p> <p>[17] Погрешность измерения</p>	<p>[18] Уровень измеренной звуковой мощности</p> <p>[19] Гарантируемый уровень звуковой мощности</p> <p>[20] Вибрация</p> <p>[22] Принадлежности – навесные орудия по заказу</p> <p>[23] Аккумулятор</p> <p>[24] Зарядное устройство</p> <p>a) ПРИМЕЧАНИЕ: общий заявленный уровень вибрации был измерен с использованием нормализованного метода испытаний, и его можно использовать для сравнения различных инструментов между собой. Общий уровень вибрации можно также использовать для предварительной оценки подверженности воздействию вибрации.</p> <p>b) ПРЕДУПРЕЖДЕНИЕ: уровень вибрации во время фактической эксплуатации инструмента может отличаться от общего заявленного значения и зависит от режимов эксплуатации инструмента. Поэтому во время работы необходимо принимать следующие меры безопасности для защиты оператора: работать в перчатках, ограничивать время использования машины и сократить время, в течение которого рычаг управления дросселем остается нажатым.</p>
<p>[1] SK - TECHNICKÉ PARAMETRE</p> <p>[2] Napájacie napätie a frekvencia MAX</p> <p>[3] Napájacie napätie a frekvencia NOMINAL</p> <p>[4] Rychlosť bez nákladu</p> <p>[5] Maximálna rýchlosť otáčania nástroja (strunová hlava)</p> <p>[6] Zaber (strunová hlava)</p> <p>[7] Priemer struny (max.)</p> <p>[8] Kód kosiaceho zariadenia</p> <p>[9] Kód ochranného krytu</p> <p>[10] Delený hriadeľ</p> <p>[11] Váha akumulátorovej jednotky</p> <p>[12] Rozmery</p> <p>[13] Dĺžka</p> <p>[14] Šírka</p> <p>[15] Výška</p> <p>[16] Úroveň akustického tlaku</p> <p>[17] Presnosť merania</p> <p>[18] Hladina nameraného akustického výkonu</p> <p>[19] Zaručená úroveň akustického výkonu</p> <p>[20] Vibrácie</p> <p>[22] Prídavné zariadenia na požiadanie</p> <p>[23] Akumulátorová jednotka</p> <p>[24] Nabíjačka akumulátora</p> <p>a) POZNÁMKA: vyhlásená celková hodnota vibrácií bola nameraná s použitím normalizovanej skúšobnej metódy a je možné ju použiť na porovnanie jednotlivých nástrojov.</p>	<p>Celková hodnota vibrácií môže byť použitá aj pri prípravnom vyhodnocovaní vibrácií.</p> <p>b) VAROVANIE: emisia vibrácií pri skutočnom použití nástroja môže byť odlišná od vyhlásenej celkovej hodnoty v závislosti na režimoch, v ktorých sa daný nástroj používa. Preto je potrebné počas práce prijať nižšie uvedené bezpečnostné opatrenia, ktoré majú za cieľ ochrániť operátora: počas bežného použitia majte nasadené rukavice, obmedzte dobu použitia stroja a skráťte dobu, počas ktorých je zatlačená ovládacia páka plynu.</p> <p>[1] SL - TEHNIČNI PODATKI</p> <p>[2] Napetost in frekvenca električnega napajanja MAX</p> <p>[3] Napetost in frekvenca električnega napajanja NOMINAL</p> <p>[4] Hitrost brez obremenitve</p> <p>[5] Največja hitrost rotacije orodja (glava z nitjo)</p> <p>[6] Širina košnje (glava z nitjo)</p> <p>[7] Premer niti (max)</p> <p>[8] Šifra rezalne naprave</p> <p>[9] Šifra zaščite</p> <p>[10] Ločljivi drog</p> <p>[11] Teža brez enote baterije</p> <p>[12] Dimenzije</p> <p>[13] Dolžina</p> <p>[14] Širina</p> <p>[15] Višina</p> <p>[16] Raven zvočnega pritiska</p> <p>[17] Merilna negotovost</p> <p>[18] Raven izmerjene zvočne moči</p>	<p>[19] Raven zagotovljene zvočne moči</p> <p>[20] Vibracije</p> <p>[22] Dodatni priključki na zahtevo</p> <p>[23] Enota baterije</p> <p>[24] Polnilnik baterije</p> <p>a) OPOMBA: Deklarirana skupna vrednost vibracij je bila izmerjena v skladu z normirano metodo preizkušanja; mogoče jo je uporabiti za primerjavo med različnimi orodji. Skupna vrednost vibracij se lahko uporabi tudi za predhodno oceno izpostavitve.</p> <p>b) OPOZORILO: Med dejansko uporabo orodja se oddajane vibracije lahko razlikujejo od deklarirane skupne vrednosti, kar je odvisno od načina uporabe orodja. Zato je treba med delom udeležajati naslednje varnostne ukrepe za zaščito upravljavca: med delom nosite rokavice, omejite čas uporabe stroja in skrajšajte intervale, med katerimi pritisnete na komandni vzvod pospeševalnika.</p>

<p>[1] SR - TEHNIČKI PODACI</p> <p>[2] Napon i frekvencija napajanja MAX</p> <p>[3] Napon i frekvencija napajanja NOMINAL</p> <p>[4] Brzina bez opterećenja</p> <p>[5] Maksimalna brzina okretanja alatke (glava s reznom niti)</p> <p>[6] Širina rezanja (glava s reznom niti)</p> <p>[7] Prečnik niti glave (maks.)</p> <p>[8] Šifra rezne glave</p> <p>[9] Šifra štitnika</p> <p>[10] Odvojni štاپ</p> <p>[11] Težina bez baterije</p> <p>[12] Dimenzije</p> <p>[13] Dužina</p> <p>[14] Širina</p> <p>[15] Visina</p> <p>[16] Nivo zvučnog pritiska</p> <p>[17] Merna nesigurnost</p> <p>[18] Izmeren nivo zvučne snage</p> <p>[19] Garantovan nivo zvučne snage</p> <p>[20] Vibracije</p> <p>[22] Dodatna oprema na zahtev</p> <p>[23] Akumulatorska baterija</p> <p>[24] Punjač baterije</p> <p>a) NAPOMENA: ukupna prijavljena vrednost vibracija izmerena je prema normalizovanoj metodi ispitivanja i može se koristiti za poređenje dve alatke. Ukupna vrednost vibracija može se koristiti i prilikom uvodne procene izloženosti.</p>	<p>b) UPOZORENJE: emisija vibracija prilikom efektivne upotrebe alatke može se razlikovati od ukupne prijavljene vrednosti u zavisnosti od načina na koji se koristi alatka. Stoga je potrebno, za vreme rada, primeniti sledeće sigurnosne mere u cilju zaštite radnika: nositi rukavice za vreme upotrebe, smanjiti vreme korišćenja mašine i skratiti vreme pritiskanja poluge komande gasa.</p> <p>[1] SV - TEKNISKA SPECIFIKACIONER</p> <p>[2] Spänning och frekvens MAX</p> <p>[3] Spänning och frekvens NOMINAL</p> <p>[4] Hastighet utan belastning</p> <p>[5] Verktygets maximala rotationshastighet (trimmerhuvud)</p> <p>[6] Klippbredd (trimmerhuvud)</p> <p>[7] Trädens diameter (max)</p> <p>[8] Skärenhetens kod</p> <p>[9] Skyddskod</p> <p>[10] Borttagbar stång</p> <p>[11] Vikt utan batterigrupp</p> <p>[12] Dimensioner</p> <p>[13] Längd</p> <p>[14] Bredd</p> <p>[15] Höjd</p> <p>[16] Ljudtrycksnivå</p> <p>[17] Tvivel med mått</p> <p>[18] Uppmått ljudeffektnivå</p> <p>[19] Garanterad ljudeffektnivå</p> <p>[20] Vibrationer</p>	<p>[22] Fyllvalstillbehör</p> <p>[23] Batterigrupp</p> <p>[24] Batteriladdare</p> <p>a) ANMÄRKNING: det totala angivna vibrationsvärdet har mätts i enlighet med en standardiserad testmetod och kan användas för en jämförelse mellan olika verktyg. Det totala vibrationsvärdet kan användas även vid en preliminär exponeringsbedömning.</p> <p>b) VARNING: vibrationsemissioner under användningen av verktyget kan skilja sig från det totala värdet som anges beroende på hur verktyget används. Därför är det nödvändigt, under arbetet, att tillämpa de följande säkerhetsåtgärderna som avses för att skydda föraren: bär handskar under användningen, begränsa användningstiden och tiderna som gasreglaget spak hålls nedtryckt.</p>
<p>[1] TR - TEKNİK VERİLER</p> <p>[2] Besleme gerilimi ve frekansı MAX</p> <p>[3] Besleme gerilimi ve frekansı NOMINAL</p> <p>[4] Yüksüz hız</p> <p>[5] Aletin maksimum rotasyon hızı (misinali kesme kafası)</p> <p>[6] Kesim genişliği (misinali kesme kafası)</p> <p>[7] Kesme kafası çapı (maks)</p> <p>[8] Kesim düzeni kodu</p> <p>[9] Koruma kodu</p> <p>[10] Ayrılabilen çubuk</p> <p>[11] Batarya grubu olmadan ağırlık</p> <p>[12] Ebatlar</p> <p>[13] Uzunluk</p> <p>[14] Genişlik</p> <p>[15] Yükseklik</p> <p>[16] Ses basınç seviyesi</p> <p>[17] Ölçü belirsizliği</p> <p>[18] Ölçülen ses güç seviyesi</p> <p>[19] Garanti edilen ses güç seviyesi</p> <p>[20] Titreşim</p> <p>[22] Talep üzerine aksesuarlar</p> <p>[23] Batarya grubu</p> <p>[24] Batarya şarjörü</p> <p>a) NOT: beyan edilen toplam titreşim değeri, normalize edilmiş test yöntemine uygun şekilde ölçülmüştür ve bir takım ile diğeri arasında karşılaştırma yapmak amacıyla kullanılabilir. Toplam titreşim değeri aynı zamanda maruz kalma durumuna dair ön değerlendirme yaparken de kullanılabilir.</p>	<p>b) UYARI: takımın etkili kullanımı sırasında yayılan titreşim, takımın kullanıma şekline bağlı olarak beyan edilen toplam değerden farklı olabilir. Bu nedenle, çalışma yapılırken operatörü korumaya yönelik aşağıdaki güvenlik tedbirleri alınmalıdır: kullanım sırasında eldiven takın, makinenin kullanıldığı süreleri sınırladığınız ve gaz kumanda levyesinin basılı tutulduğu süreleri kısaltın.</p>	

**INDEX**

1. GENERAL ASPECTS	1
2. SAFETY REGULATIONS.....	2
3. GETTING TO KNOW THE MACHINE	6
3.1 Description of the machine and planned use..	6
3.2 Safety signs.....	7
3.3 Product identification label	7
3.4 Main components.....	8
4. ASSEMBLY.....	8
4.1 Assembly components.....	8
4.2 Rod installation.....	8
4.3 Handle assembly	8
4.4 Fitting the guard on the cutting means.....	9
4.5 Fitting the indicator on the cutting limit	9
5. CONTROLS.....	9
5.1 Throttle control lever.....	9
5.2 Throttle safety lever.....	9
6. USING THE MACHINE	9
6.1 Preparation.....	9
6.2 Safety checks.....	10
6.3 Start-up	11
6.4 Operation	11
6.5 Advice for operation	12
6.6 Stop.....	12
6.7 After use.....	12
7. ROUTINE MAINTENANCE.....	12
7.1 General information.....	12
7.2 Battery.....	13
7.3 Cleaning the machine and the motor.....	13
7.4 Nuts and bolts	13
8. OCCASIONAL MAINTENANCE	13
8.1 Cutting means maintenance	14
8.2 Sharpening the line cutting knife	14
9. STORING.....	14
9.1 Storing.....	14
9.2 Storing the battery.....	14
10. HANDLING AND TRANSPORTATION.....	14
11. ASSISTANCE AND REPAIRS	15
12. WARRANTY COVERAGE.....	15
13. MAINTENANCE TABLE.....	15
14. TROUBLESHOOTING.....	16
15. ACCESSORIES ON REQUEST	17
15.1 Batteries.....	17
15.2 Battery charger.....	17

1. GENERAL ASPECTS**1.1 HOW TO READ THE MANUAL**

Some paragraphs in the manual contain important information regarding safety and operation and are emphasized in this manner:

NOTE or **IMPORTANT** *These give details or further information on what has been previously indicated and aim to prevent damage to the machine or cause other damage.*

The  symbol highlights danger. Failure to observe the warning can lead to the risk of injury to oneself and others and/or damage.

The paragraphs highlighted in a square with grey spots indicate the optional characteristics not on all models documented in this manual. Check if the characteristic is on this model.

Whenever reference is made to a position on the machine "front", "back", "left" or "right" hand side, this refers to the operator's working position.

1.2 REFERENCES**1.2.1 Figures**

The figures in these instructions for use are numbered 1, 2, 3, etc. Components shown in the figures are marked A, B, C, etc. Reference to component C in figure 2 is indicated with the wording: "See fig. 2.C" or simply "(Fig. 2.C)". The figures are given as a guide only. The actual pieces can differ from those illustrated in this document.

1.2.2 Titles

The manual is divided into chapters and paragraphs. The title of paragraph "2.1 Training" is a sub-title of "2. Safety regulations". References to titles or paragraphs are marked with the abbreviation chap. or par. and the relevant number. Example: "chap. 2" or "par. 2.1."

2. SAFETY REGULATIONS

2.1 TRAINING

 ***Become familiar with the controls and the proper use of the machine. Learn how to stop the machine quickly. Failure to follow the warnings and instructions may result in fire and/or serious injury.***

- Never allow the machine to be used by children or individuals with reduced physical, sensory or mental capabilities, or without experience and know-how, or individuals who do not have the necessary familiarity with the instructions. Local regulations may restrict the age of the operator.
- Never use the machine if the user is tired or unwell, or has taken medicine, drugs, alcohol or any substances which may slow their reflexes and compromise their judgement.
- Bear in mind that the operator or user is responsible for accidents or unexpected events occurring to other people or their property. It is the user's responsibility to assess the potential risk of the area where work is to be carried out and to take all the necessary precautions to ensure his own safety and that of others, particularly on slopes or rough, slippery and unstable ground.
- If the machine is sold or lent to others, make sure that the operator looks over the user instructions contained in this manual.

2.2 PREPARATION

Personal Protective Equipment (PPE)

- Always wear slim-fitting protective clothes with slash-proof protection, anti-vibration gloves, helmet, protective goggles, half-mask respirator, protective earplugs, cut resistant safety boots with non-slip soles.
- Use of hearing protections can reduce the ability to hear any warnings (shouting or alarms). Be careful of what occurs around you in the work area.
- Never wear scarves, shirts, necklaces, bracelets, loose flowing clothing, laces or ties or any hanging or flapping accessory that could catch in the machine or in any objects or materials in the work area.
- Tie your hair back if it is long.

Work area / Machine

- Thoroughly inspect the entire work area and remove anything that could be thrown by the machine or damage the cutting means/rotating units (stones, branches, iron wire, bones, etc.).

2.3 DURING OPERATION

Work area

- Do not use the machine in environments at risk of explosion, in the presence of flammable liquids, gas or powder. Power tools create sparks which may ignite the dust or fumes.
- Work only in daylight or with good artificial light in good visibility conditions.

- Keep persons, children and animals away from the working area. Get another adult to keep the children under supervision.
- Check that there is nobody within 15 metres of the machine's range of operation or within 30 metres for heavier cutting.
- Avoid working with wet grass, in the rain and when there is a risk of a thunderstorm, especially lightening.
- Do not expose the machine to rain or wet environments. Water entering a power tool will increase the risk of electric shock.
- Where possible, avoid working on wet, slippery ground or in any case on uneven or steep ground that does not guarantee stability for the operator.
- Pay careful attention to uneven ground (hills, dips), slopes, hidden hazards and obstacles that could limit visibility.
- Be very careful near ravines, ditches or embankments.
- Always work across the face of the slope and never up and down it, being very careful when changing direction, making sure the cutting means is always downstream.
- Look out for traffic when using the machine near the road.

Behaviour

- When working, the machine must always be firmly held in both hands, keeping the power unit on the right of the body and the cutting group below the line of the belt. Do not excessively extend arms.
- Avoid body contact with earthed or grounded surfaces, such as pipes, radiators,

cookers and refrigerators. There is an increased risk of electric shock if your body is earthed or grounded.

- Always use caution and take on a firm and well-balanced position.
- Never run, always walk.
- Always keep hands and feet away from the cutting means, when starting and when using the machine.
- Attention: the cutting means will continue to rotate for a few seconds after disengagement or after you have switched off the motor.
- Be careful of flying debris coming from the cutting means.
- Be careful of avoiding violent collisions between the cutting means and foreign objects/obstacles. Kickback may occur if the cutting means comes into contact with an obstacle/object. This contact can cause a rapid jerk in the opposite direction, pushing the cutting means up and towards the operator. Kickback can cause the operator to lose control of the machine, leading to serious consequences. To prevent kickbacks, take all appropriate precautions provided below:
 - Firmly hold the machine, with two hands, and place your body and arms in a position that allows you to resist kickback.
 - Do not extend the arms too high and do not cut above waist height.
 - Only use the cutting means specified by the manufacturer.
 - Follow the manufacturer's instructions concerning cutting means maintenance.

- Beware of injuries caused by devices used to cut the line length.

 If something breaks or an accident occurs during work, turn off the motor immediately and move the machine away to prevent further damage; if an accident occurs with injuries or third parties are injured, carry out the first aid measures most suitable for the situation immediately and contact the medical authorities for any necessary health care. Carefully remove any debris which could cause damage or injury to persons or animals if ignored.

 Prolonged exposure to vibrations can cause injuries and neurovascular disorders (also called “Raynaud’s syndrome” or “white finger”), especially to people suffering from circulation disorders. The symptoms can regard the hands, wrists and fingers and are shown through loss of sensitivity, torpor, itching, pain and discolouring of or structural changes to the skin. These effects can be worsened by low ambient temperatures and/or by gripping the hand grips excessively tightly. If the symptoms occur, the length of time the machine is used must be reduced and a doctor consulted.

Use limitations

- Do not use the machine if you are unable to hold it with both hands or keep it steady on your legs while working.
- Never assemble metal cutting means. **The use of metal or**

rigid blades of any type with this machine is prohibited.

- Never use the machine with damaged, missing or incorrectly positioned guards.
- Don’t use the machine if the attachments/tools are not installed in their seats.
- Never disengage, deactivate, remove or tamper with the safety systems/micro switches installed.
- Do not use the power tool if the switch does not turn it on and off. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Do not strain the machine too much and do not use a small machine for heavy-duty work. If you use the right machine, you will reduce the risk of hazards and improve the quality of your work.

2.4 MAINTENANCE, STORAGE

Ensure regular maintenance and correct storage to maintain machine safety and high performance levels.

Maintenance

- Never use the machine with worn or damaged parts. Faulty or worn-out parts must always be replaced and never repaired.
- Be careful during adjustment of the machine to prevent entrapment of the fingers between moving parts of the cutting means and fixed parts of the machine.

 The noise and vibration levels shown in these

instructions are the maximum levels for use of the machine. The use of an unbalanced cutting element, the excessive speed of movement, or the absence of maintenance have a significant influence on noise emissions and vibrations. Consequently, it is necessary to take preventive steps to eliminate possible damage due to high levels of noise and stress from vibration. Maintain the machine well, wear ear protection devices, and take breaks while working.

Storage

- To reduce fire risks, do not leave containers with debris inside a room.

2.5 RESIDUAL RISKS

Despite the compliance with all safety prescriptions, there may be additional hazards:

- danger of injuries to fingers and hands if caught in the rotation of the cutting line;
- danger of injuries to feet if struck by the cutting line,
- stones and soil projections.

2.6 BATTERY / BATTERY CHARGER

IMPORTANT *The following safety instructions are in addition to the safety requirements provided in the specific battery and battery charger manual delivered with this machine.*

- Only use battery chargers recommended by the manufacturer to recharge batteries. An inadequate battery charger may cause

electric shock, overheating or corrosive liquid to leak from the battery

- Use only batteries specifically designed for your power tool. The use of other batteries may cause injuries and fire risks.
- Make sure that the machine is switched off before inserting the battery. Inserting a battery in a machine which is switched on can cause a fire.
- Keep all unused batteries at a distance from paper clips, coins, keys, nails, screws or other small metal objects as contact with the same can cause short circuits. Short circuits between battery contacts can lead to explosion or fires.
- Never use the battery charger in environments in the presence of vapours, flammable substances or on easily flammable surfaces such as paper, fabric, etc. The battery charger heats up during recharging and may cause a fire.
- When transporting batteries, make sure the contacts never come into contact with each other and never use metal containers to transport them.

2.7 ENVIRONMENTAL PROTECTION

Safeguarding the environment must be a relevant and priority aspect of machine use, of benefit to the community and the environment we live in.

- Avoid being a disturbance to the neighbourhood. Use this machine at reasonable times of the day only (not early morning

or late evening when the noise could cause disturbance).

- Scrupulously comply with local regulations for the disposal of packaging, deteriorated parts or any elements with a strong environmental impact; this waste must not be disposed of as normal waste, it must be separated and taken to specified waste disposal centres where the material will be recycled.
- Scrupulously comply with local regulations for the disposal of waste materials
- When the machine is withdrawn from service, do not dump it in the environment, but take it to a waste disposal facility in accordance with the local regulations in force.



Do not throw electrical equipment away with domestic waste. According to the European Directive 2012/19/EU on electrical and electronic equipment waste and its implementation in compliance with national standards, old electrical equipment must be collected separately, for eco-compatible recycling. If electrical equipment is disposed of in a landfill or in the ground, the harmful substances can reach the water table and enter the food chain, damaging your health and well-being. For further information on the disposal of this product, contact your dealer or a domestic waste collection service.



Li-ion

At the end of their working life, dispose of batteries paying due attention to the environment. Batteries

contain material classified as hazardous for you and the environment. They must be removed and disposed of separately at a facility that accepts lithium-ion batteries.



Separate waste collection of the products and packaging used allows the materials to be recycled and reused. Reuse of recycled materials help to prevent environmental pollution and reduces the demand for raw materials.

3. GETTING TO KNOW THE MACHINE

3.1 DESCRIPTION OF THE MACHINE AND PLANNED USE

This machine is a garden tool and more precisely a battery-powered portable grass /grass edge trimmer.

The machine is essentially composed of a motor which, employing a transmission shaft, drives a cutting device (cutting line head).

The cutting means works on a surface that is approximately parallel to the ground (in case of use as grass trimmer) or approximately perpendicular to the ground (in case of use as grass edge trimmer).

The operator can operate the machine and use the main controls, always keeping a safe distance from the cutting means.

3.1.1 Intended use

This machine was designed and manufactured for:

- cutting grass and non woody vegetation (e.g. around the edges of lawns, flowerbeds, walls, fences and small grassy areas);
- tidy up the cutting done using a mower;
- being used by one operator.

3.1.2 Improper use

Any other usage not in keeping with the above-mentioned ones may be hazardous and harm

persons and/or damage things. Examples of improper use may include, but are not limited to:

- using the machine for sweeping, tilting the cutting line head. The power of the motor could throw objects and small stones 15 metres or more, causing damage or injury to people;
- trimming hedges or other jobs in which the cutting means is not used at ground level;
- cutting and chopping trees, bushes and flowers;
- using the machine for cutting non-plant material;
- using the machine with the cutting means above the operator's belt level;
- using the machine in public gardens, parks, sports centres, on roadways, fields and woods;
- using cutting means other than those listed in the "Technical Data" table. Serious injury and wound hazard.
- using of the machine by more than one person.

IMPORTANT *Improper use of the machine will invalidate the warranty, relieve the Manufacturer from all liability, and the user will consequently be liable for all and any damage or injury to himself or others.*

3.1.3 User types

This machine is intended for use by consumers, i.e. non-professional operators. It is intended for "DIY" use only.

3.2 SAFETY SIGNS

The machine has various symbols on it (fig. 2). They are used to remind the operator of the behaviour to follow to use it with the necessary attention and caution.

Meaning of symbols:



WARNING! DANGER!

Failure to use this machine correctly can be hazardous for oneself and others



WARNING! Read the instruction manual before using the machine.



Anyone operating the machine under normal conditions for continuous daily use may be exposed to a noise level equal to or exceeding 85 dB (A). Use ear protection devices and goggles.



PROJECTION HAZARD!

Be careful of flying debris projected by the cutting means, that can cause serious injuries to persons or damage to things.



PROJECTION HAZARD!

Keep any people or pets at least 15 m away when using the machine!



Keep away from bystanders.



Do not leave the machine in the rain (or in damp conditions).

IMPORTANT *Any damaged or illegible decals must be replaced. Order replacement decals from an authorised assistance centre.*

3.3 PRODUCT IDENTIFICATION LABEL

The product identification label provides the following data (fig. 1):

1. Sound power level
2. Conformity marking
3. Year of manufacture
4. Type of machine
5. Serial number
6. Name and address of Manufacturer
7. Article code

Write the identification data of the machine in the specific space on the label on the back of the cover page.

IMPORTANT *Quote the information on the product identification label whenever you contact an authorised service workshop.*

IMPORTANT *The example of the Declaration of Conformity is provided on the last pages of the manual.*

3.4 MAIN COMPONENTS

The machine is composed of a series of main components that have the following functions (Fig.1):

- A. Power unit:** it drives the cutting means through a transmission shaft.
- B. Rod:** it connects the rear hand grip to the power unit.
- C. Cutting means:** the element designed to cut the vegetation
 - 1. Cutting line head:** nylon line cutting means.
- D. Cutting means guard:** it is a safety device which prevents objects drawn up by the cutting means from being hurled away from the machine.
- E. Front hand grip:** semi-circular shaped, it is used to handle the machine.
- F. Rear hand grip:** used to handle the machine and equipped with the main on/off/acceleration control buttons.
- G. Battery** (*if it is not supplied with the machine, see chapter 15 "accessories on request"*): device that supplies electric current to the tool; its specifications and regulations for use are described in a specific manual.
- H. Battery charger** (*if it is not supplied with the machine, see chapter 15 "accessories on request"*): device used to recharge the battery.

4. ASSEMBLY

IMPORTANT *The safety regulations to follow are described in chap. 2. Strictly comply with these indications to avoid serious risks or dangers.*

For storage and transport purposes, some components of the machine are not installed in the factory and have to be assembled after unpacking. Follow the instructions below.

 **Unpacking and completing the assembly should be done on a flat and stable surface, with enough space for machine handling and its packaging, always making use of suitable equipment. Do not use the machine until all the indications provided in the "ASSEMBLY" section have been carried out.**

4.1 ASSEMBLY COMPONENTS

The packaging includes assembly components.

4.1.1 Unpacking

1. Carefully open the packaging, paying attention not to lose components.
2. Consult the documentation in the box, including these instructions.
3. Remove all the unassembled parts from the box.
4. Remove the machine from the box.
5. Dispose of the box and packaging in compliance with local regulations.

 **Before assembling, make sure the battery is not inserted in its housing.**

4.2 ROD INSTALLATION

1.a Model TR 24 Li B

- Insert and push the lower part of the rod (Fig. 3.A) in the upper part (Fig. 3.B) until you hear the stop pin that blocks it in the right position.

NOTE *The rod cannot be removed once it is assembled.*

The rod length is adjustable (par. 6.1.3).

1.b Model TR 24 Li

- Align the upper part of the rod (Fig. 4.A) with the lower part (Fig. 4.B), following the direction of the arrows;
- push the lower part in the rod upper part;
- once inserted, tighten the knob securely (Fig. 4.C) following the direction of the arrow - closed padlock.
- Make sure the lower and upper part of the rod are carefully tightened.

4.3 HANDLE ASSEMBLY

4.3.1 Assembly of the front hand grip

1.a Model TR 24 Li B

- Insert the front hand grip (Fig. 5.A) on the shaft (Fig. 5.B), with the seat of the screw oriented on the left side.

1.b Model TR 24 Li

- Insert the front hand grip (Fig. 6.A) on the pre-assembled support (Fig. 6.B), with the seat of the screw oriented on the right side.
2. Insert the screw and tighten the knob, without tightening it (Fig. 5.C, Fig. 6.C).
3. Adjust the grip in the most ergonomic position for the operator (chapter 6.1.2).
4. Tighten the knob.


4.4 FITTING THE GUARD ON THE CUTTING MEANS

 **Wear protective gloves.**

 **Every cutting means must be fitted with a specific guard, as indicated by the following directions in the Technical Data table.**

1. Place the guard (Fig. 7.A) on the holes on the power unit base (Fig. 7.B).
2. Secure the guard (Fig. 7.A) fully tightening the screws (Fig. 7.C).

NOTE On the guard of the cutting means there is the following symbol:

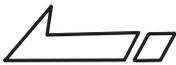

Indicates the rotation direction of the cutting means.

4.5 FITTING THE INDICATOR ON THE CUTTING LIMIT

1.a Model TR 24 Li B

- Insert and fasten the two ends of the cutting limit indicator (Fig. 8.A) in their respective holes on the power unit (Fig. 8.B).

1.b Model TR 24 Li

- Slightly enlarge the cutting limit indicator (Fig. 9.A) and insert it in the space provided on the power unit (Fig. 9.B).

5. CONTROLS

5.1 THROTTLE CONTROL LEVER

It allows to start/stop the machine and simultaneously engages/disengages the cutting means.

The throttle control lever (Fig. 10.A) can only be used if the throttle safety lever is pressed simultaneously (Fig. 10.B).

For machine start up:

- Simultaneously push the regulator control lever and safety lever.

 **Starting the machine causes the cutting means to start rotating at the same time.**

The machine stops automatically as the throttle control lever is released.

5.2 THROTTLE SAFETY LEVER

Throttle safety lever (Fig. 10.B) allows the throttle control lever to be used (Fig. 10.A).

6. USING THE MACHINE

IMPORTANT *The safety regulations to follow are described in chap. 2. Strictly comply with these indications to avoid serious risks or dangers.*

6.1 PREPARATION

Before starting work it is necessary to carry out several checks and operations to ensure you can work efficiently and in maximum safety:

1. make sure the battery is not inserted in its housing;
2. place the machine in a stable horizontal position on the ground;
3. adjust the cutting diameter (par. 6.1.1)
4. adjust the machine from the ergonomic and functional points of view, in order to adapt it to the worker stature and to the type of work (par. 6.1.2 - par. 6.1.6);
5. check the battery (par. 6.1.7).

6.1.1 Adjustment of the cutting diameter (for cutting in motion only)

It is possible to set up a more or less wide cutting diameter (30 cm or 25 cm).

A larger cutting diameter helps to complete the work more quickly and it should be used in case of greater time to work. A smaller cutting diameter optimises operating time and cutting speed.

To set the cutting diameter smaller:

1. remove the line cutting knife (Fig. 11.A) from the cutting means guard (Fig. 11.B) unscrewing the screw (Fig. 11.C);
2. rotate the line cutting knife by 180°;
3. **only for model TR 24 Li B:** Position the line cutting knife in the inner hole;
4. re-assemble the line cutting knife (Fig. 11.A) on the cutting means guard (Fig. 11.B).

6.1.2 Regulating the front hand grip

1. Remove the knob (Fig. 12.A);
- 2.a **For model TR 24 Li B:**
 - move the front hand grip in the most ergonomic position for the operator;
- 2.b **For model TR 24 Li:**
 - move and/or direct the hand grip in the most ergonomic position for the operator; it is possible to direct the hand grip only forwards.
3. Tighten the knob (Fig. 12.A).

6.1.3 Rod length regulation (only for model TR 24 Li B)

1. Loosen the knob (Fig. 13.A) following the direction of the arrow - open padlock.
2. pull or push the rod (Fig. 13.B) until it reaches the desired length;
3. when the adjustment is complete, tighten the hand grip following the direction of the arrow - closed padlock.

6.1.4 Rod height regulation (only for model TR 24 Li)

1. Press the button (Fig. 14.A) and adjust the rod height (Fig. 14.B) on one of the four possible positions (Fig. 14.C);
2. make sure the rod is firmly locked.

6.1.5 Aligning the cutting device

The cutting means orientation allows to switch from grass trimmer mode to grass edge trimmer mode, and vice versa, while working (Par. 3.1).

How to work in grass trimmer mode:

- 1.a **For model TR 24 Li:**
 - Press the button (Fig. 15.A);
 - Rotate the cutting means (Fig. 15.B) by 90°, making sure it stays locked in the position.
- 1.b **For model TR 24 Li B:**
 - Pull the upper sleeve backwards (Fig. 16.A);

- Rotate the lower part of the rod by 180° (Fig. 16.B), making sure it stays locked in the position.

⚠ Perform this operation when the machine is turned off and the cutting means is still.

6.1.6 Cutting limit indicator adjustment (only for model TR 24 Li B)

- Rotate forwards the cutting limit indicator (Fig. 17.A) when working near trees, kerbs or fences, to avoid the impact with the cutting means.

6.1.7 Checking the battery

Before each use:

- check the battery charge status according to the instructions in the battery booklet.

6.2 SAFETY CHECKS

Run the following safety checks and check that the results correspond to those outlined on the tables.

⚠ Always carry out the safety checks before use.

6.2.1 General check

Object	Result
Hand grips (Fig. 1.E)	Clean, dry and fixed firmly to the machine.
Cutting means guard (Fig. 1.D)	Correctly and securely fit to the machine, not worn/deteriorated or damaged.
Screws on the machine	Correctly tightened (not loose)
Cutting means (Fig. 1.C)	Clean, not damaged or worn.
Battery (Fig. 1.G)	No damage to the casing, no liquid leakage
Cooling air ducts (par. 7.3)	Not clogged
Machine	No signs of damage or wear
Throttle control lever (Fig. 10.A), throttle safety lever (Fig. 10.B)	The levers must move freely and not be forced.
Test driving	No abnormal vibrations. No abnormal sound

6.2.2 Machine operating test

Action	Result
1. Start the machine (par. 6.3); 2. Release the throttle control lever (Fig. 10.A) and throttle safety lever (Fig. 10.B).	1. The cutting means should move. 2. The levers should return automatically and rapidly to the neutral position, the machine and the cutting means should stop.
Only activate the throttle control lever (Fig. 10.A)	The throttle control lever remains blocked.

⚠ *If any of the results fail to match the indications provided in the tables below, do not use the machine! Take it to a service centre to be checked and repaired if necessary.*

6.3 START-UP

1. Make sure the cutting means is not touching the ground or any other object;
2. fit the battery inside its housing correctly (par. 7.2.3);
3. simultaneously activate the throttle control lever (Fig. 10.A) and throttle safety lever (Fig. 10.B).

NOTE *At every start up new line is automatically released (par. 6.4.2).*

6.4 OPERATION

NOTE *Before tackling a mowing job for the first time, get to know the machine, learn the most suitable cutting techniques, grip the machine firmly and make the movements required by the job.*

To use the machine proceed as follows:
– always hold the machine firmly with two hands, using the cutting unit below the operator's belt level.

NOTE *During use, the battery is protected against total drainage with a protective device that switches off the machine and stops it from working.*

NOTE *Battery power reserve (and therefore the cuttable vegetation surface before recharging is required) depends on many factors described in (par. 7.2.1).*

6.4.1 Work techniques

⚠ *Use ONLY nylon lines. The use of metal lines, plasticised metal lines and/or lines that are not suitable for the head can cause serious injuries and wounds.*

a. Cutting in motion (Scything)

- Make sure the cutting means is in grass trimmer mode (par. 6.1.5);
- proceed at a regular pace, with a circular motion similar to a traditional scythe, without tilting the cutting line head during the operation (Fig. 18).

First try cutting at the right height in a small area, so as to then achieve a uniform cutting height keeping the cutting line head at a constant distance from the ground.

For heavier cutting it can be useful to tilt the cutting line head to the left by about 30°.

⚠ *Do not work in this way if there is the possibility of causing objects to be thrown, which could harm people, animals or cause damage.*

b. Precision cutting (Trimming)

Keep the machine slightly tilted so that the lower part of the cutting line head does not touch the ground and the cutting line is at the required point, always keeping the cutting means at a distance from the operator.

c. Cutting near fences/foundations

- Adjust the cutting limit indicator (if applicable, par. 6.1.6);
- move the cutting line head slowly towards fences, posts, rocks, walls, etc. without hitting them hard (Fig. 17).

If the line strikes a solid object it could break or become worn; if it gets tangled in a fence it could break suddenly. In any case, cutting around pavements, foundations, walls, etc. can cause greater wear than normal to the line.

d. Cutting around trees

- Adjust the cutting limit indicator (if applicable, par. 6.1.6);
- walk round the tree from left to right, approaching the trunks slowly so as not to strike the tree with the line and keeping the cutting line head tilted forward slightly.

Remember that the nylon line could lop off or damage small shrubs and that the impact of the

nylon line against the trunk of bushes or trees with soft bark could seriously damage the plant.

6.4.2 Adjusting the length of the cutting line head during work

Head line length should be adjusted:

- when the line is consumed and becomes shorter;
- when motor rotation seems higher than normal;
- when cutting efficiency seems reduced.

• Automatic line release

This machine is fitted with an automatic line release head.

To release new line:

1. Stop the machine (par. 6.6);
2. wait for two seconds and restart the machine.

The released line is about 6.35 mm.

Repeat the procedure until the line length reaches the line cutting knife that will cut any exceeding length.

• Manual line release

To release new line:

1. Stop the machine (par. 6.6);
2. remove the battery from its housing (par 7.2.2);
3. press the button on the line head (Fig. 19.A) and, at the same time, pull the line manually for the length that is necessary to reach the line cutting knife (Fig. 19.B);
4. bring back the machine to the working position;
5. Fit the battery inside its housing (par. 7.2.3).

6.5 ADVICE FOR OPERATION

During use it is best to periodically remove weeds that wrap around the machine to avoid motor overheating (Fig. 1.A), due to grass caught under the cutting means guard (Fig. 1.D).

Proceed as follows:

- stop the machine (par. 6.6);
- remove the battery (par.7.2.2);
- wear work gloves;
- remove the caught-up grass with a screwdriver to allow the motor to be properly cooled.

6.6 STOP

To stop the machine:

1. Release the throttle control lever (Fig. 10.A);
2. Wait until the cutting means stops.

 **When you have stopped the machine, it will take a few seconds for the cutting means to stop.**

IMPORTANT Always stop the machine when moving between work areas.

6.7 AFTER USE

- Remove the battery from its housing and recharge it (par 7.2.2).
- Allow the motor to cool before storing in an enclosed space.
- Clean (par. 7.3).
- Check there are no loose or damaged components. If necessary, replace the damaged components and tighten any screws and loose bolts or contact the authorised service centre.

IMPORTANT Always remove the battery (par 7.2.2) whenever you leave the machine unused or unattended.

7. ROUTINE MAINTENANCE

7.1 GENERAL INFORMATION

IMPORTANT The safety regulations to follow are described in chap. 2. Strictly comply with these indications to avoid serious risks or dangers.

 **Prior to carrying out any maintenance operation, you need to:**

- **Stop the machine;**
- **remove the battery from its housing and recharge it (par 7.2.2).**
- **allow the motor to cool before storing in an enclosed space;**
- **use suitable clothing, protective gloves and goggles;**
- **read the relevant instructions;**

- The frequency and types of maintenance are summarised in the "Maintenance Table" (chapter 13). The table will help you maintain your machine's safety and performance. It summarises the main interventions to be made and the frequency applicable to each of them. Carry out the relevant task as soon as it is scheduled to be performed.
- The use of non-genuine spare parts and attachments could adversely affect machine operation and safety. The manufacturer

declines all liability for any damage or injuries caused by these products.

- Genuine spare parts are supplied by authorised assistance workshops and dealers.

IMPORTANT Any maintenance and adjustment operations not described in this manual must be carried out by your dealer or Authorised Service Centre.

7.2 BATTERY

7.2.1 Battery power reserve

Battery power reserve (and therefore the cuttable vegetation surface before recharging is required) mainly depends on:

- a. environmental factors, that cause higher energy requirements:
 - cutting, high, wet vegetation;
- b. operator behaviour that should be avoided:
 - switching the machine on and off frequently whilst working;
 - adopting a cutting technique that is unsuitable for the work to be performed (par. 6.4);

To optimise battery power reserve it is always recommended to:

- cut the grass when dry;
- use the most appropriate technique for the work to be performed

If the need arises to use the machine for sessions which exceed the capability of a standard battery, it is possible to:

- purchase a second standard battery to immediately replace the discharged battery, without compromising the continuity of operations;
- purchase a battery with an extended power reserve compared to the standard version (par. 15.1).

7.2.2 Battery removal and recharging

1. Press the retainer tab in the battery (Fig. 20.A), and remove the battery (Fig. 20.B);
2. fit the battery (Fig. 21.A) in the battery charger housing (Fig. 21.B);
3. connect the battery charger (Fig. 21.B) to a power socket with the voltage indicated on the rating plate.
4. fully charge the battery according to the instructions in the battery/ battery charger booklet.

NOTE The battery is equipped with a guard that inhibits recharging if the environmental temperature is not between 0 and +45 °C.

NOTE The battery can be recharged at any time, even partially, with no risk of damaging it.

7.2.3 Refitting the battery on the machine

When recharging is completed:

1. Remove the battery (Fig. 22.A) from the housing in the battery charger (do not keep recharging when recharging is completed);
2. disconnect the battery charger (Fig. 22.B) from the electrical mains;
3. fit the battery (Fig. 23.B) in its housing pressing down until you hear it click firmly into position which ensures the electrical contact.

7.3 CLEANING THE MACHINE AND THE MOTOR

- Always clean the machine after use with a damp cloth dipped in neutral detergent.
- Remove all traces of humidity using a soft damp cloth. Humidity can generate risks of electric shocks.
- Do not use aggressive detergents or solvents to clean the plastic parts or hand grips.
- To reduce fire hazards, keep the lawnmower and, in particular, the motor free of grass, leaves, or excessive grease;
- To avoid overheating and damage to the motor or the battery, always keep the cooling air vents clean and free of debris.
- Do not spray water onto the motor and electrical components and prevent them from getting wet.

7.4 NUTS AND BOLTS

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Check regularly that the handles are fixed firmly.

8. OCCASIONAL MAINTENANCE

Prior to carrying out any maintenance operation, you need to:

- **Stop the machine;**
- **remove the battery from its housing and recharge it (par 7.2.2).**

- **allow the motor to cool before storing in an enclosed space;**
- **use suitable clothing, protective gloves and goggles;**
- **read the relevant instructions;**

8.1 CUTTING MEANS MAINTENANCE

Cutting means displaying the code indicated on the Technical Data table should be used on this machine.

Given product evolution, the cutting means mentioned in the "Technical Data" table may be replaced in time with others having similar interchangeable and operating safety features.

 **Do not touch the cutting means until the battery has been removed and the cutting means is completely stationary.**

8.1.1 Replacing the reel of the cutting line head

1. Press the two side tabs (Fig. 24.A) and remove the cover (Fig. 24.B);
2. Remove the reel (Fig. 24.C);
3. insert the new reel (Fig. 25.A), making sure the line extremity exits the head hole (Fig. 25.B);
4. Refit the cover (Fig. 25.C) insert the two side tabs (Fig. 25.D) in the cutting line head openings (Fig. 25.E).

8.1.2 Replacing the cutting line head

1. Remove the reel (par. 8.1.1);
2. remove the line left inside;
3. only use a line with diameter of 1.65 mm and cut 3 m of length.
4. Insert one line extremity in the hole located inside the reel (Fig. 26.A);
5. roll the line in the clockwise direction as specified by the arrows (Fig. 26.B) and let it stick out of about 15 cm from the reel;
6. connect it with one of the anchorage sites (Fig. 26.C) on the reel;
7. reposition the reel and reassemble the cover (cap 8.1.1).

8.2 SHARPENING THE LINE CUTTING KNIFE

1. Remove the line cutting knife (Fig. 11.A) from the cutting means guard (Fig. 11.B) unscrewing the screw (Fig. 11.C);

2. Fix the line cutting knife in a vice and sharpen it using a flat file, being careful to retain the original cutting angle;
3. Re-assemble the line cutting knife (Fig. 11.A) on the cutting means guard (Fig. 11.B).

9. STORING

IMPORTANT *The safety regulations to follow are described in chap. 2. Strictly comply with these indications to avoid serious risks or dangers.*

9.1 STORING

When the machine is to be stored away:

- Remove the battery from its housing and recharge it (par. 7.2.2).
- Allow the motor to cool before storing in an enclosed space.
- Clean (par. 7.3).
- Check there are no loose or damaged components. If necessary, replace the damaged components and tighten any screws and loose bolts or contact the authorised service centre.
- Store the machine:
 - in a dry place
 - protected from inclement weather
 - in a place where children cannot get to it
 - making sure that keys or tools used for maintenance are removed.

9.2 STORING THE BATTERY

The battery must be kept in a cool, shaded place without humidity.

NOTE *If unused for any length of time, recharge the battery every two months to prolong its working life.*

10. HANDLING AND TRANSPORTATION

Whenever the machine is to be handled or transported you must:

- Stop the machine (par. 6.6);
- remove the battery from its housing and recharge it (par. 7.2.2);
- wear heavy work gloves;
- only hold the machine using the hand grips and position the cutting means in the opposite direction to that used during operations.

When transporting the machine on a vehicle, always:

- position it so that it can not cause a hazard for anybody.

11. ASSISTANCE AND REPAIRS

This manual provides all the necessary information to run the machine and for correct basic maintenance operations which can be performed by the user. Any regulations and maintenance operations not described herein must be carried out by your Dealer or Authorised Service Centre, which have the necessary knowledge and equipment to ensure that the work is carried out correctly, maintaining the correct degree of safety and the original operating conditions of the machine. Any operations performed in unauthorised centres or by unqualified persons will totally invalidate the Warranty and all obligations and responsibilities of the Manufacturer.

- Only authorised service workshops can carry out guaranteed repairs and maintenance.
- The authorised service workshops only use genuine spare parts. Genuine spare parts and attachments have been designed specifically for machines.
- Non-genuine spare parts and accessories are not approved. Use of non-genuine spare parts and accessories cause the warranty to expire.

- It is advisable to send your machine once a year to an authorised service workshop for servicing, assistance and safety device inspection.

12. WARRANTY COVERAGE

The warranty covers all material and manufacturing defects. The user must follow all the instructions provided in the accompanying documentation. The warranty does not cover damages caused by:

- Failure to become familiar with the documentation accompanying the machine.
- Carelessness.
- Incorrect or prohibited use or assembly.
- Use of non-genuine spare parts.
- Use of attachments not supplied or approved by the manufacturer.

The warranty does not cover:

- Normal wear and tear of consumables, such as cutting means, safety bolts.
- Normal wear and tear.

The purchaser is protected by his or her own national legislation. The purchaser's rights under the national laws or his or her own country are not in any way restricted by this warranty.

13. MAINTENANCE TABLE

Intervention	Frequency	Notes
MACHINE		
Check all fasteners	Before each use	par. 7.4
Safety checks/check controls	Before each use	par. 6.2
Check the cutting means guard.	Before each use	par. 6.2.1
Checking the cutting means	Before each use	par. 6.2.1
Check the battery charge status	Before each use	*
Recharge the battery	After each use	par. 7.2.2 *
Cleaning the machine and the motor	After each use	par. 7.3
Checking for any damage to the machine. If necessary, contact the authorised service centre.	After each use	-

* Refer to the battery/battery charger manual.

14. TROUBLESHOOTING

PROBLEM	PROBABLE CAUSE	SOLUTION
1. The cutting means is stationary and the machine does not start when the throttle control lever and throttle safety lever are engaged	Battery is not inserted or is inserted incorrectly	Make sure that the battery is inserted correctly (par. 7.2.3)
	Low battery	Check the battery status and recharge if necessary (par. 7.2.2)
	The separable rod was not fully or properly inserted in its housing	Make sure the separable rod was installed and correctly inserted (par. 4.2)
	Defective throttle control lever/ throttle safety lever	Do not use the machine. Immediately turn off the machine remove the battery and contact a service centre.
	Machine damaged.	Do not use the machine. Immediately turn off the machine remove the battery and contact a service centre.
2. Motor overheating	Grass caught under the cutting means guard	Remove caught grass (par. 6.5)
3. Grass accumulates around the power unit housing and the cutting line head	Too high grass is being cut close to the ground	Cut tall grass with a top down movement to avoid accumulations.
4. The line is not released when the automatic release is turned on	The line is stuck to itself	Lubricate with silicone spray
	Not enough line on the reel or reel empty	Replace the reel (chap. 8.1.1) or the line (chap. 8.1.2)
	The line is worn and too short	Release the line manually (chap. 6.4.2.)
	The line is tangled on the reel or broken	Remove the line from the reel and rewind it (chapter 8.1.2)
5. The cutting means comes into contact with a foreign body.	-	Turn off the machine, remove the battery and: - inspect for damage; - check for and tighten any loose parts; - have all replacements or repairs carried out by an authorised service centre.
6. Excessive noise and/or vibration is experienced whilst working	Loose or damaged parts.	Turn off the machine, remove the battery and: - inspect for damage; - check for and tighten any loose parts; - have all replacements or repairs carried out by an authorised service centre.
7. The machine gives off smoke whilst working	Machine damaged.	Do not use the machine. Immediately turn off the machine remove the battery and contact a service centre.
8. Battery power reserve is low	Severe working conditions requiring greater current absorption	Optimise operations (par. 7.2.1)
	Battery is insufficient for operating requirements	Use a second battery or extended battery (par. 15.1)
	Decrease in battery capacity	Purchase a new battery

If problems persist after having performed the above operations, contact your dealer.

PROBLEM	PROBABLE CAUSE	SOLUTION
9. The battery charger is not recharging the battery	Battery is not correctly inserted in the battery charger	Check it is correctly inserted (par. 7.2.3)
	Unsuitable environmental conditions	Recharge the battery in places with suitable temperatures (see battery/ battery charger instruction manual)
	Dirty contacts	Clean the contacts
	The battery charger is not energised	Check it is plugged in and the power socket is energised
	Faulty battery charger	Replace with an original spare part
-		If the problem persists, refer to the battery/battery charger manual

If problems persist after having performed the above operations, contact your dealer.

15. ACCESSORIES ON REQUEST

15.1 BATTERIES

Different capacity batteries are available to suit specific operating requirements (Fig. 27). The list of approved batteries for this machine is found in the "Technical Data" table.

15.2 BATTERY CHARGER

Device used to recharge the battery (Fig. 28).

DICHIARAZIONE CE DI CONFORMITÀ (Istruzioni Originali)

(Direttiva Macchine 2006/42/CE, Allegato II, parte A)

1. **La Società:** STIGA SpA – Via del Lavoro, 6 – 31033 Castelfranco Veneto (TV) – Italy
2. Dichiaro sotto la propria responsabilità, che la macchina: Tagliaerba/tagliabordi portatile, taglio erba

a) Tipo / Modello Base

TR 24 Li, TR 24 Li B

b) Mese/Anno di costruzione

c) Matricola

c) Motore

a batteria

3. È conforme alle specifiche delle direttive:

- MD: 2006/42/EC
- e) Ente Certificatore: /
- f) Esame CE del tipo: /

- OND: 2000/14/EC, ANNEX VI, proc.1- 2005/88/EC
D. Lgs. 262/2002, ANNEX VI, proc. 1 (Italy)

e) Ente Certificatore: Intertek Testing Services Shanghai
Building no.86, 1198 Qinzhou Road (North) ,
Shanghai 200233 - China

- EMCD: 2014/30/EU
- RohS II: 2011/65/EU

4. Riferimento alle Norme armonizzate:

EN 60335-1:2012/A11:2014
EN 50636-2-91:2014
EN 50581:2012

EN 55014-1:2008/A1:2009/A2:2011
EN 55014-2:1997/A1:2001/A2:2008


	TR 24 Li	TR 24 Li B	
g) Livello di potenza sonora misurato	93	95	dB(A)
h) Livello di potenza sonora garantito	96	96	dB(A)
i) Ampiezza di taglio	30	30	cm

m) Persona autorizzata a costituire il Fascicolo Tecnico:

STIGA SpA
Via del Lavoro, 6
31033 Castelfranco Veneto (TV)- Italia

n) Castelfranco V.to, 24.07.2017

Vice Presidente Quality & Customer Service
Ing. Raimondo Hippolit

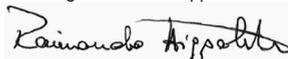

- IT** • Il contenuto e le immagini del presente manuale d'uso sono stati realizzati per conto di STIGA SpA e sono tutelati da diritto d'autore – E' vietata ogni riproduzione o alterazione anche parziale non autorizzata del documento.
- BG** • Съдържанието и изображенията в настоящото ръководство са извършени за STIGA SpA и са защитени с авторски права – Забранява се всяко неотуризирано възпроизвеждане или промяна, дори и отчасти на документа.
- BS** • Sadržaj i slike iz ovog korisničkog priručnika napravljeni su isključivo za STIGA SpA i zaštićeni su autorskim pravima – zabranjena je svaka neovlaštena reprodukcija ili izmjena dokumenta, djelomično ili u potpunosti.
- CS** • Obsah a obrázky v tomto návodu k použití byly zpracovány jménem společnosti STIGA SpA a jsou chráněny autorským právem – Reprodukce či nepovolené pozměňování tohoto dokumentu, a to i částečně, je zakázáno.
- DA** • Indhold og illustrationer i denne vejledning er blevet skabt på vegne af STIGA SpA og er beskyttet af ophavsret – Enhver gengivelse eller ændring, også delvis, af dokumentet uden autorisation hertil er forbudt.
- DE** • Inhalt und Bilder dieser Bedienungsanleitung wurden im Namen von STIGA SpA erstellt und sind urheberrechtlich geschützt – Jede nicht genehmigte Vervielfältigung oder Veränderung, auch auszugsweise, dieses Dokumentes ist verboten.
- EL** • Το περιεχόμενο και οι εικόνες στο παρόν εγχειρίδιο χρήσης δημιουργήθηκαν για λογαριασμό της εταιρείας STIGA SpA και προστατεύονται από πνευματικά δικαιώματα – Απαγορεύεται οποιαδήποτε αναπαραγωγή ή τροποποίηση, έστω και μερική, του εγγύρφου χωρίς έγκριση.
- EN** • The content and images in this User Manual were produced expressly for STIGA SpA and are protected by copyright – any unauthorised reproduction or modification to the document, either partially or in full, is prohibited.
- ES** • El contenido y las imágenes del presente manual de uso han sido creados por STIGA SpA y están protegidos por los derechos de autor – Se prohíbe toda reproducción o modificación, incluso parcial, no autorizada del documento.
- ET** • Käesoleva kasutusjuhendi sisu ja kujutised on toodetud konkreetselt ettevõttele STIGA SpA ja neile rakendud autoritaiseadused – dokumendi igasugune osaline või täielik ilma loata reprodutseerimine või muutmine on keelatud.
- FI** • Tämän käyttöoppaan sisältö ja kuvat on valmistettu STIGA SpA -yhtiön toimesta ja niitä suojaa tekijänoikeuslaki. – Asiakirjan kaikenlainen kopioiminen tai muuttaminen, osittainkin, on kielletty ilman erityistä lupaa.
- FR** • Le contenu et les images du présent manuel d'utilisation ont été réalisés pour le compte de STIGA SpA et sont protégés par un droit d'auteur - Toute reproduction ou modification non autorisée, même partielle, du document, est interdite.
- HR** • Sadržaj i slike u ovom priručniku za uporabu izrađeni su za tvrtku STIGA SpA te su obuhvaćeni autorskim pravima – Zabranjuje se neovlašteno umnožavanje ili prilagodba, djelomična ili u cijelosti, ovog dokumenta.
- HU** • Ennek a használati útmutatónak a tartalma és a benne szereplő képek kizárólag a STIGA SpA számára készültek és szerzői joggal védettek – tilos a dokumentum bármely részének vagy egészének engedély nélkül másolása, módosítása.
- LT** • Šio naudotojo vadovo turinys ir paveikslėliai skirti tik „STIGA SpA“ ir yra saugomi autorių teisėmis – dokumentą atgaminti ar modifikuoti, visiškai arba iš dalies, yra draudžiama.
- LV** • Šis lietotāja rokasgrāmatas saturs un attēli ir veidoti tikai STIGA SpA un ir aizsargāti ar autoritētiesībām. Jebkāda dokumenta vai tā daļas prettiesiska kopēšana vai pārveide ir stingri aizliegta.
- MK** • Содржината и сликите во Упатството за корисникот се подготвени исклучиво за STIGA SpA и се заштитени со авторски права – забрането е секое делумно или целосно неовластено репродуцирање или измена на документот.
- NL** • De inhoud en de afbeeldingen van deze gebruikshandleiding werden gerealiseerd voor rekening van STIGA SpA en zijn beschermd door het auteursrecht – Elke niet-geautoriseerde reproductie of wijziging, ook gedeeltelijke, van het document is verboden.
- NO** • Innholdet og bildene i denne brukerveiledningen er utført på oppdrag fra STIGA SpA og er beskyttet ved opphavsrett - Enhver gjengivelse eller endring, selv kun delvis, er forbudt.
- PL** • Treść oraz ilustracje zawarte w niniejszej instrukcji obsługi powstały na zlecenie spółki STIGA SpA i są chronione prawami autorskimi – Zabrania się wszelkiego kopiowania bądź modyfikowania, także częściowego, niniejszego dokumentu bez uzyskania stosownej zgody.
- PT** • As imagens e os conteúdos contidos no presente Manual do Utilizador foram expressamente criados para uso exclusivo da STIGA SpA, encontrando-se protegidos por direitos de autor. Qualquer tipo de reprodução ou alteração, parcial ou integral, não autorizadas deste Manual estão expressamente proibidas.
- RO** • Conținutul și imaginile din manualul de utilizare de față au fost realizate în numele STIGA SpA și sunt protejate de drepturi de autor – Este interzisă orice reproducere sau modificare chiar și parțială neautorizată a documentului.
- RU** • Тесты и изображения, содержащиеся в настоящем руководстве, были созданы в интересах STIGA SpA и защищены авторскими правами – Любое несанкционированное воспроизведение или изменение документа запрещено.
- SK** • Obsah a obrázky v tomto návode na používanie boli spracované menom spoločnosti STIGA SpA a sú chránené autorským právom – Reprodukcie či nepovolené pozměňovanie tohto dokumentu, a to aj čiastočne, je zakázané.
- SL** • Vsebine in slike v tem uporabniškem priručniku so izdelane za podjetje STIGA SpA in so zaščitene z avtorskimi pravicami – vsakršno nepooblaščenno razmnoževanje ali spreminjanje dokumenta, v celoti ali delno, je prepovedano.
- SR** • Sadržaj i slike ovog priručnika za upotrebu su napravljeni u ime STIGA SpA i zaštićeni su autorskim pravima – Zabranjena je svaka potpuna ili delimična reprodukcija ili izmena dokumenta bez odobrenja.
- SV** • Innehållet och bilderna i denna användarhandbok har framställts för STIGA SpA och skyddas av upphovsrätt – all form av reproduktion eller ändring, även partiell, som inte auktoriserats är förbjuden.
- TR** • Bu Kullanıcı Kilavuzundaki içerik ve resimler açığa STIGA SpA için üretilmiştir ve telif hakkı ile korunmaktadır – dokümanın izinsiz olarak tamamen ya da kısmen herhangi bir şekilde çoğaltılması ya da değiştirilmesi yasaktır.



.....	
Type:	 LWA dB
..... -s/n -Art.N	
	

STIGA SpA
Via del Lavoro, 6
31033 Castelfranco Veneto (TV) ITALY