

CP1 430 Li D48

CP1 480 Li D48

STIGA®



IT Tosaerba a batteria con conducente a piedi MANUALE DI ISTRUZIONI

ATTENZIONE: prima di usare la macchina, leggere attentamente il presente libretto.

BG Аккумуляторна носачка с изправен водач УПЪТСТВАНЕ ЗА УПОТРЕБА

ВНИМАНИЕ: преди да използвате машината прочетете внимателно настоящата книжка.

BS Kosilica na bateriju na guranje UPUTSTVO ZA UPOTREBU

PAŽNJA: prije nego što koristite ovu mašinu, pažljivo pročitajte priručnik s uputama.

CS Akumulátorová sekačka se stojící obsluhou NÁVOD K POUŽITÍ

UPOZORNĚNÍ: před použitím stroje si pozorně přečtěte tento návod k použití.

DA Batteridreven plæneklipper betjent af gående personer BRUGSANVISNING

ADVARSEL: læs instruktionsbogen omhyggeligt igennem, før du tager denne maskine i brug.

DE Handgeführter batteriebetriebener Rasenmäher GEBRAUCHSANWEISUNG

ACHTUNG: vor Inbetriebnahme des geräts die gebrauchsanleitung aufmerksam lesen.

EL Χλοοκοπτική μηχανή μπαταρίας με όρθιο χειριστή ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ

ΠΡΟΣΟΧΗ: πριν χρησιμοποιήσετε το μηχάνημα, διαβάστε προσεκτικά το παρόν εγχειρίδιο.

EN Pedestrian-controlled walk-behind battery powered lawn mower OPERATOR'S MANUAL

WARNING: read thoroughly the instruction booklet before using the machine.

ES Cortadora de pasto por batería con operador de pie MANUAL DE INSTRUCCIONES

ATENCIÓN: antes de utilizar la máquina, leer atentamente el presente manual.

ET Seisva juhiga akutoitega muruniitja KASUTUSJUHEND

TÄHELEPANU: enne masina kasutamist lugeda tähelepanelikult antud kasutusjuhendit.

FI Kävellèn ohjattava akkukäyttöinen ruohonleikkuri KÄYTTÖOHJEET

VAROITUS: lue käyttöopas huolellisesti ennen koneen käyttöä

FR Tondeuse à gazon alimentée par batterie et à conducteur à pied MANUEL D'UTILISATION

ATTENTION: lire attentivement le manuel avant d'utiliser cette machine.

HR Baterijska ručno upravljana kosilica trave PRIRUČNIK ZA UPORABU

POZOR: prije uporabe stroja, pažljivo pročitajte ovaj priručnik.

HU Gyalogvezetésű akkumulátoros fűnyírógép HASZNÁLATI UTASÍTÁS

FIGYELEM! a gép használatá előtt olvassa el figyelmesen a jelen kézikönyvet.

LT Pėsčio operatoriaus valdoma akumuliatorinė vejapjovė NAUDOJIMO INSTRUKCIJOS

DĖMESIO: prieš naudojant įrenginį, atidžiai perskaityti šį naudotojo vadovą.

LV Ar bateriju darbināma no aizmugures ejot vadāma zāliena pļaujmašina LIETOŠANAS INSTRUKCIJA

UZMANĪBU: pirms aparāta lietošanai rūpīgi izlasiet doto instrukciju.

MK Тревокосачка на батерии со оператор на нозе УПАТСТВА ЗА УПОТРЕБА

ВНИМАНИЕ: прочитајте го внимателно ова упатство пред да ја користите машината.

NL Lopend bediende grasmaaier met batterij GEBRUIKERSHANDLEIDING

LET OP: vooraleer de machine te gebruiken, dient men deze handleiding aandachtig te lezen.

NO Håndført batteridrevet gressklipper INSTRUKSJONSBOK

ADVARSEL: les denne bruksanvisningen nøye før du bruker maskinen.

PL Kosiarka akumulatorowa prowadzona przez operatora pieszego
INSTRUKCJE OBSŁUGI

OSTRZEŻENIE: przed użyciem maszyny, należy uważnie przeczytać niniejszą instrukcję.

PT Corta-relvas a bateria para operador apeedo
MANUAL DE INSTRUÇÕES

ATENÇÃO: antes de usar a máquina, leia atentamente o presente manual.

RO Mașină pe baterii de tuns iarba cu conducător pedestru
MANUAL DE INSTRUCTIUNI

ATENȚIE: înainte de a utiliza mașina, citiți cu atenție manualul de față.

RU Газонокосилка с пешеходным управлением с батарейным питанием
РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ

ВНИМАНИЕ: прежде чем пользоваться оборудованием, внимательно прочтите это руководство по эксплуатации.

SK Akumulátorová kosačka so stojacou obsluhou
NÁVOD NA POUŽITIE

UPOZORNENIE: pred použitím stroja si pozorne prečítajte tento návod.

SL Akumulatorska kosilnica za stoječega delavca
PRIROČNIK ZA UPORABO

POZOR: preden uporabite stroj, pazljivo preberite priročnik z navodili.

SR Kosačica na bateriju na guranje
PRIRUČNIK SA UPUTSTVIMA

PAŽNJA: pre korišćenja mašine pažljivo pročitati ovaj priručnik.

SV Batteridrivnen förarledd gräsklippare
BRUKSANVISNING




VARNING: läs igenom hela detta häfte innan du använder maskinen.

TR Arkadan ayak kumandalalı bataryalı çim biçme makinesi
KULLANIM KILAVUZU



DIKKAT: makineyi kullanmadan önce talimatlar içeren kılavuzu dikkatle okuyun.

ITALIANO - Istruzioni Originali	IT
БЪЛГАРСКИ - Инструкция за експлоатация	BG
BOSANSKI - Prijevod originalnih uputa	BS
ČESKY - Překlad původního návodu k používání	CS
DANSK - Oversættelse af den originale brugsanvisning	DA
DEUTSCH - Übersetzung der Originalbetriebsanleitung	DE
ΕΛΛΗΝΙΚΑ - Μετάφραση των πρωτοτύπων οδηγιών	EL
ENGLISH - Translation of the original instruction	EN
ESPAÑOL - Traducción del Manual Original	ES
EESTI - Algupärase kasutusjuhendi tõlge	ET
SUOMI - Alkuperäisten ohjeiden käännös	FI
FRANÇAIS - Traduction de la notice originale	FR
HRVATSKI - Prijevod originalnih uputa	HR
MAGYAR - Eredeti használati utasítás fordítása	HU
LIETUVIŠKAI - Originalių instrukcijų vertimas	LT
LATVIEŠU - Instrukciju tulkojums no oriģināl valodas	LV
МАКЕДОНСКИ - Превод на оригиналните упатства	MK
NEDERLANDS - Vertaling van de oorspronkelijke gebruiksaanwijzing	NL
NORSK - Oversettelse av den originale bruksanvisningen	NO
POLSKI - Tłumaczenie instrukcji oryginalnej	PL
PORTUGUÊS - Tradução do manual original	PT
ROMÂN - Traducerea manualului fabricantului	RO
РУССКИЙ - Перевод оригинальных инструкций	RU
SLOVENSKY - Preklad pôvodného návodu na použitie	SK
SLOVENŠČINA - Prevod izvirnih navodil	SL
SRPSKI - Prevod originalnih uputstva	SR
SVENSKA - Översättning av bruksanvisning i original	SV
TÜRKÇE - Orijinal Talimatların Tercümesi	TR

1

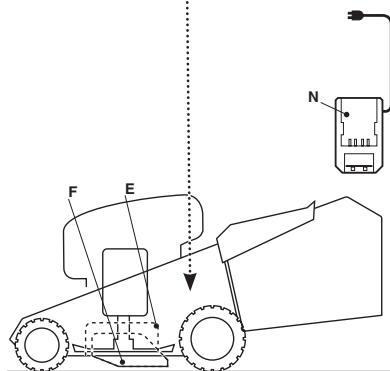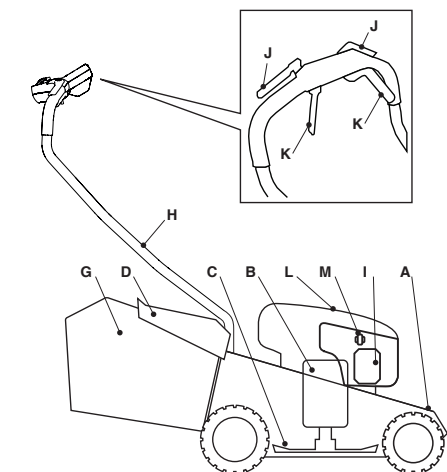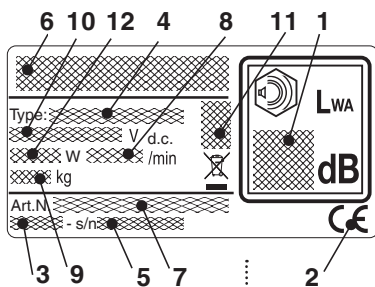


2

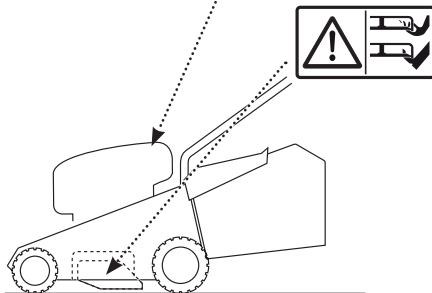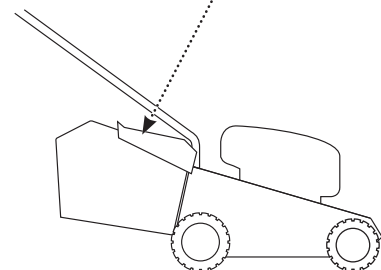


3




4








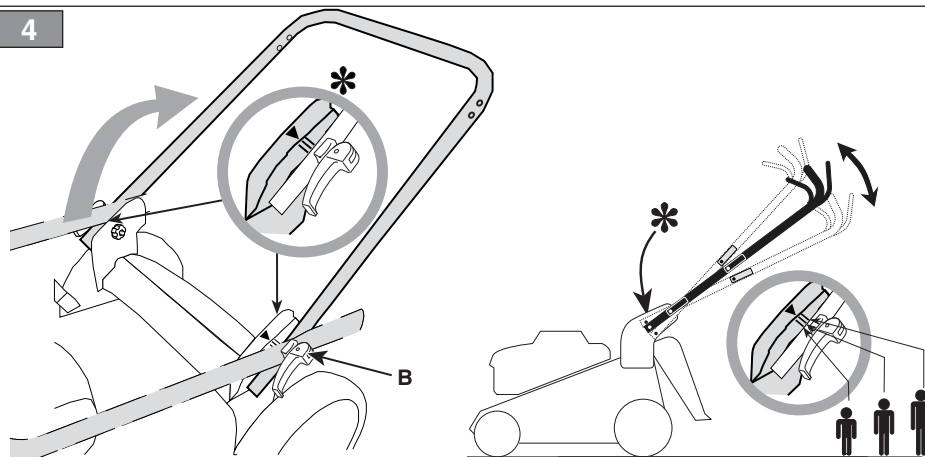


5

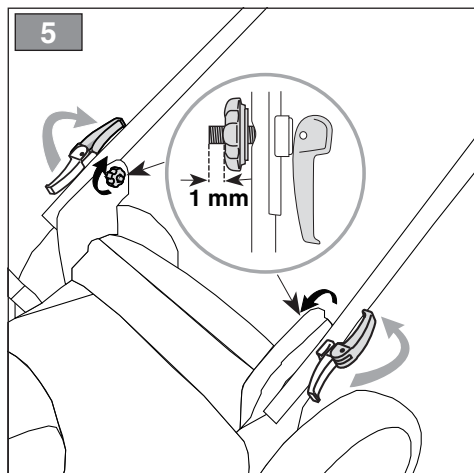


6

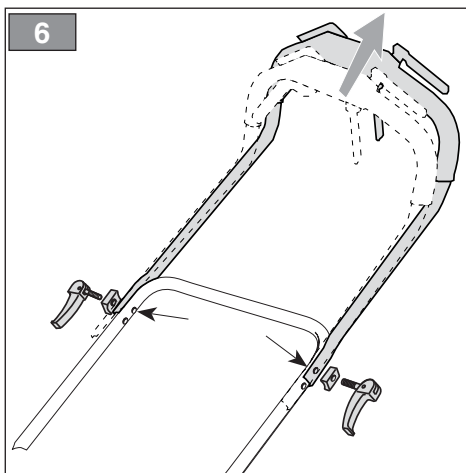


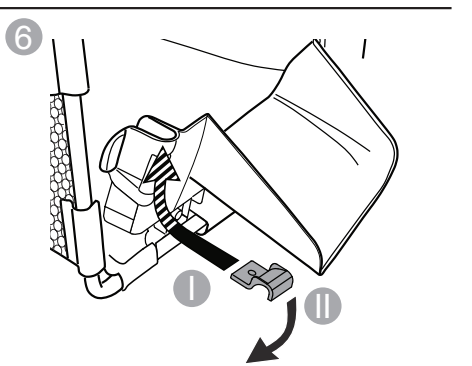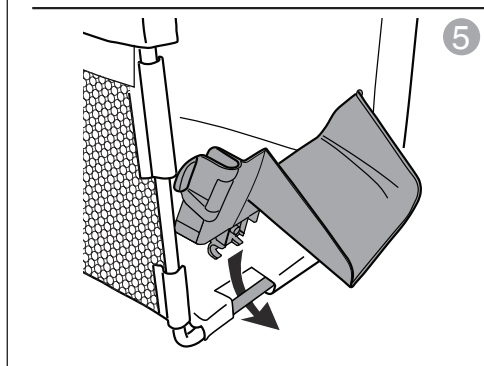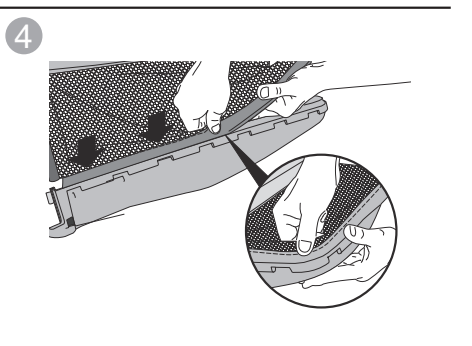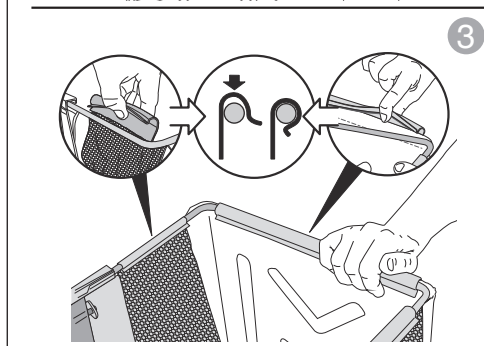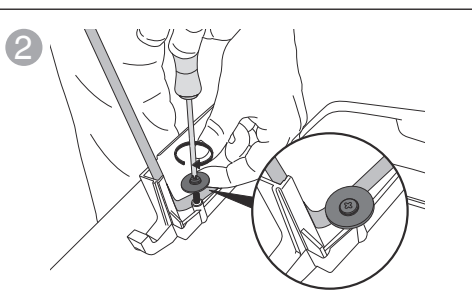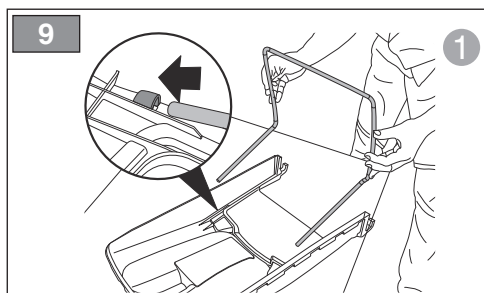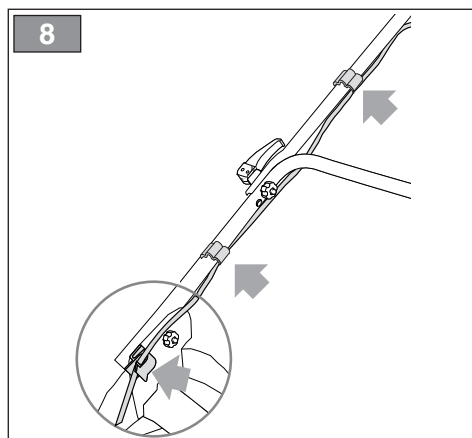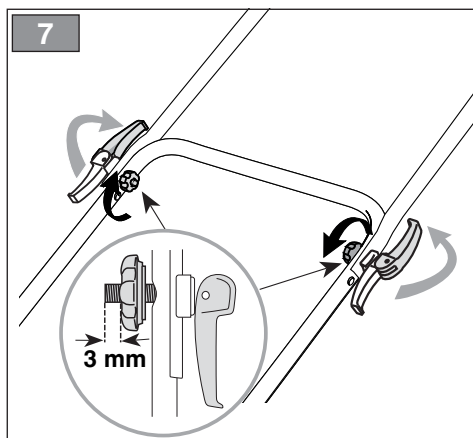


10

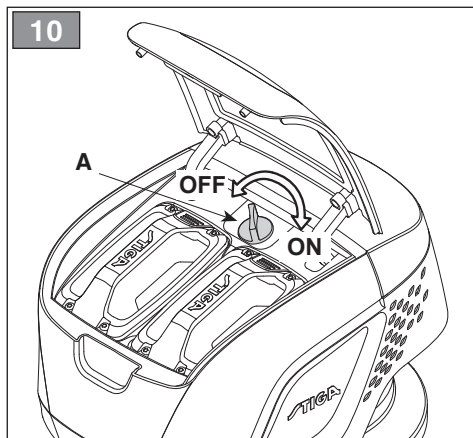


11

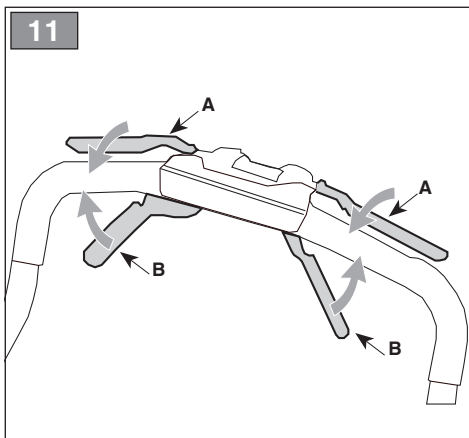


12

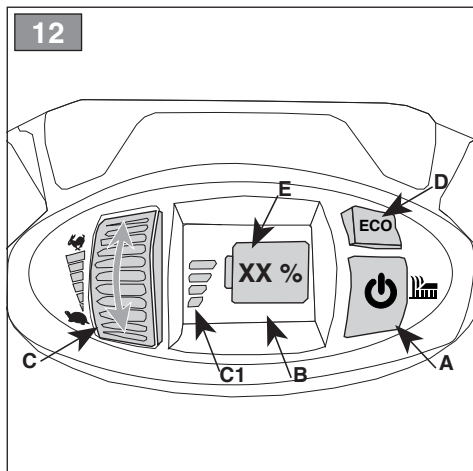




13

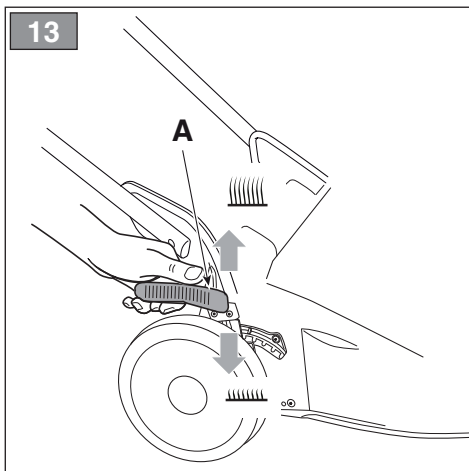



14

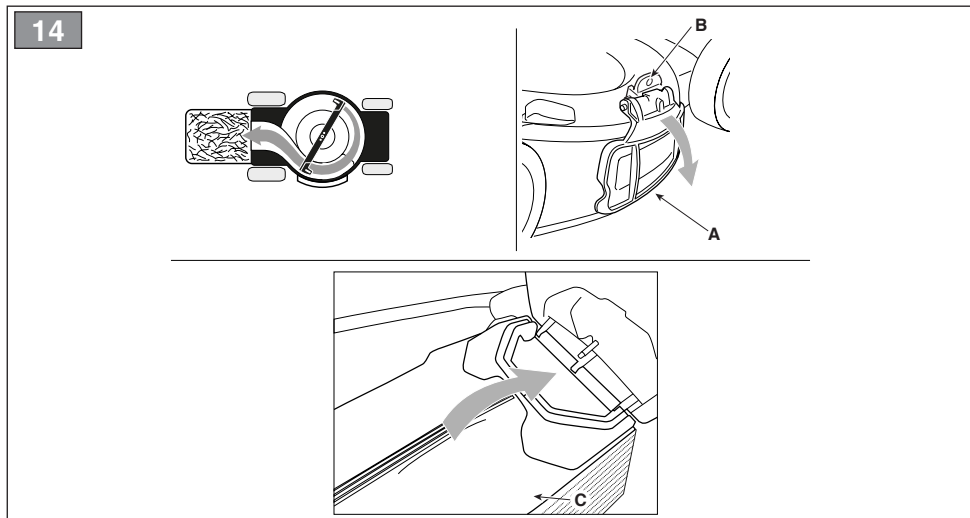






15

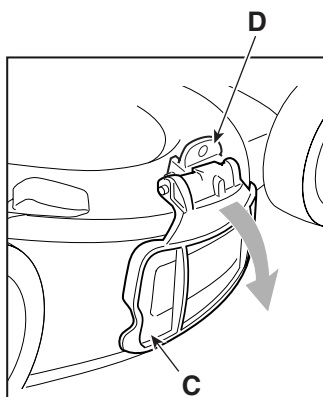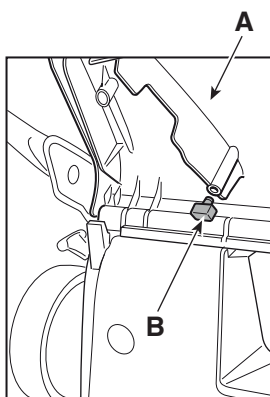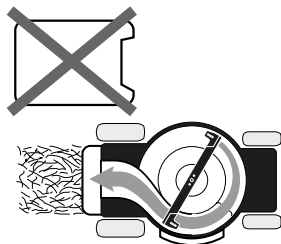


16

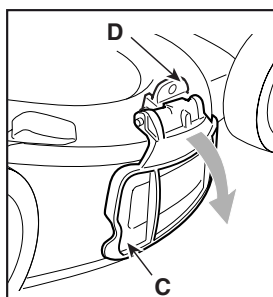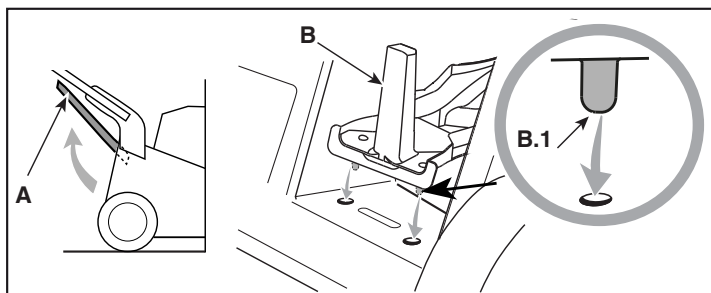


17

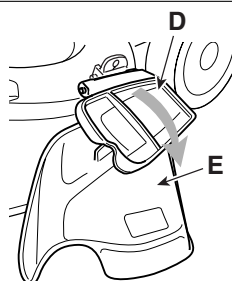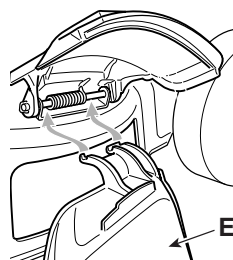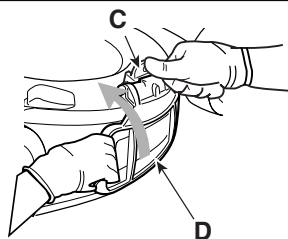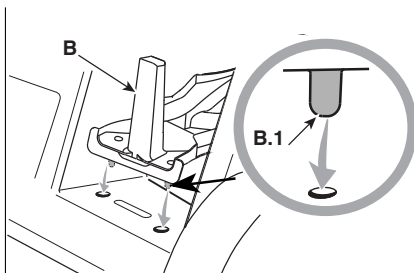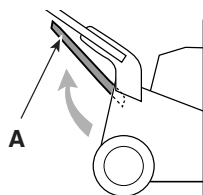


18

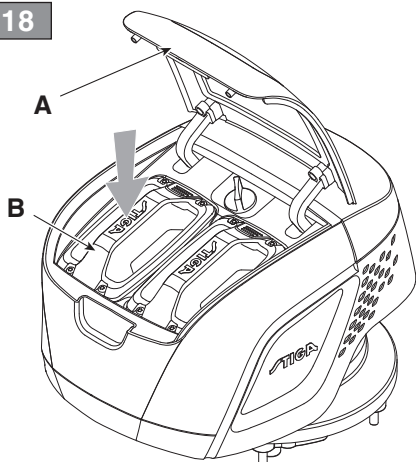


19

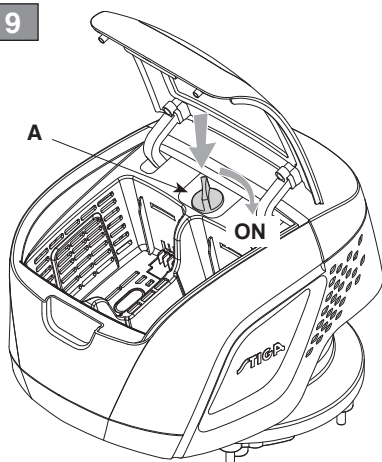


20

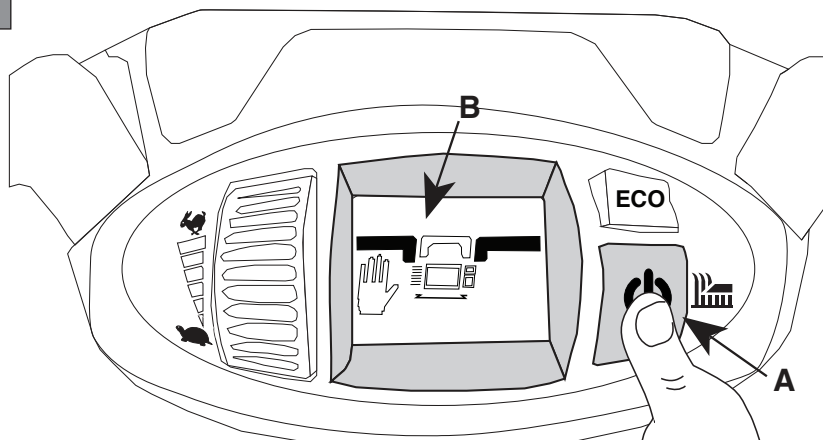


21

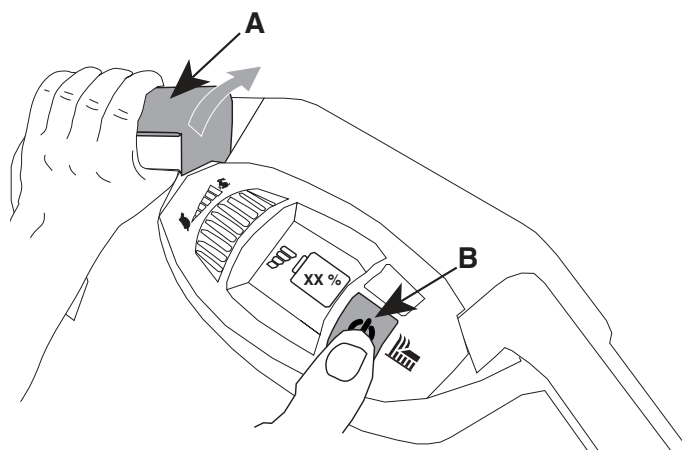


22

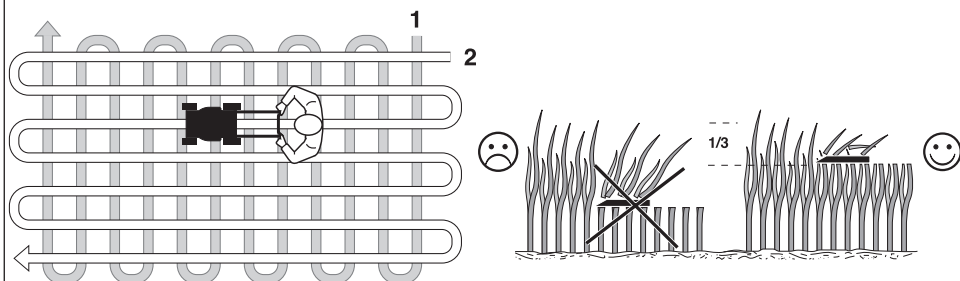


23

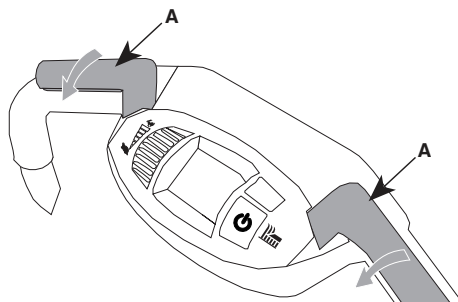


24

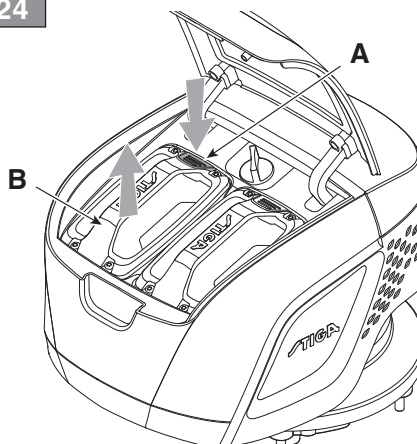


25

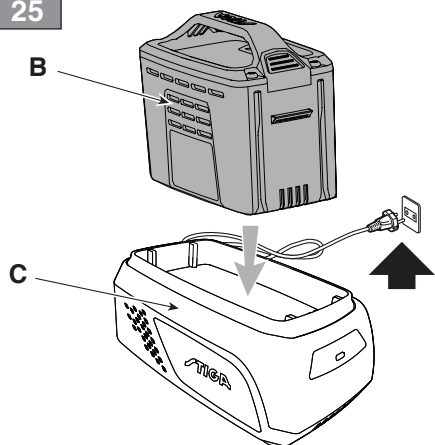


26

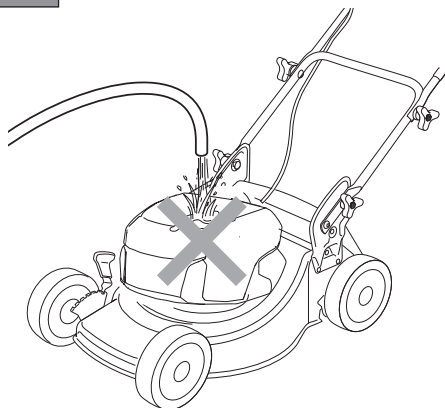


27

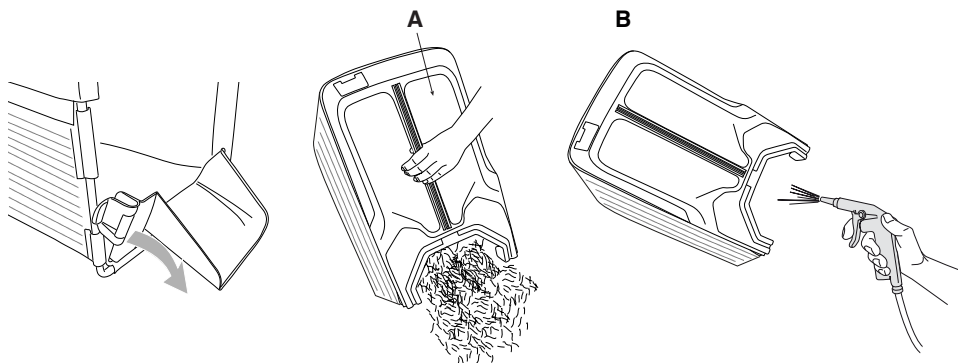


28

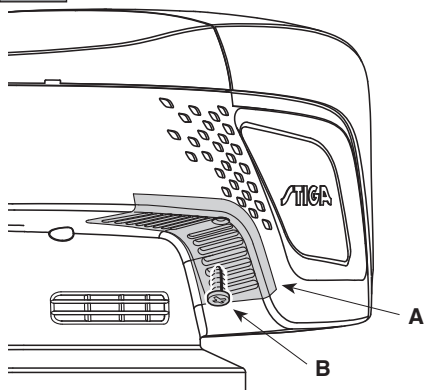


29

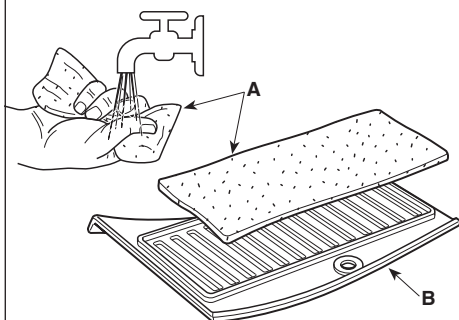


30


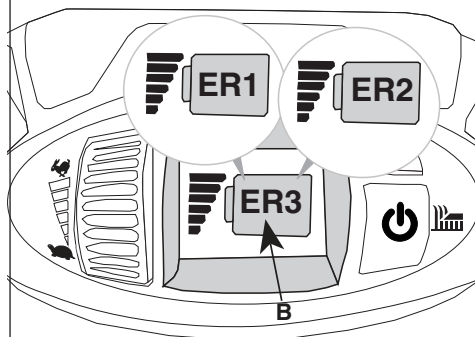


31

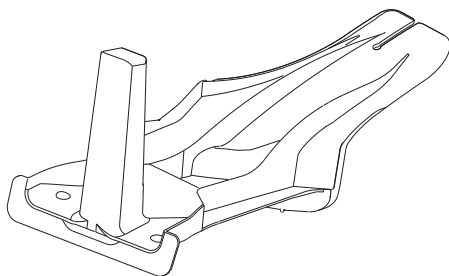

32

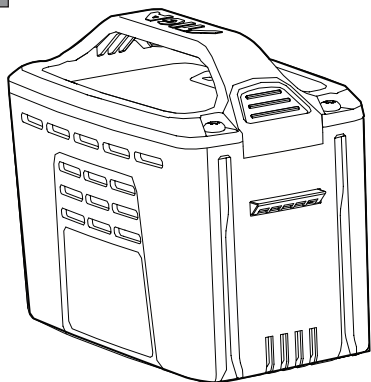

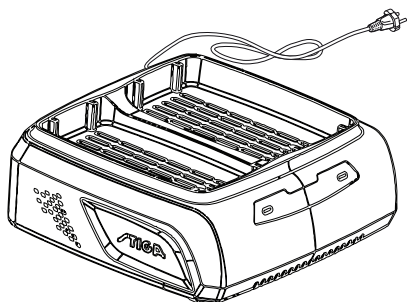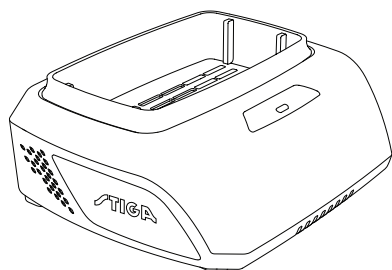

[1]	DATI TECNICI		CP1 430 Li D48 Series	CP1 480 Li D48 Series
[2]	Potenza nominale *	W	1500	1500
[3]	Velocità mass. di funzionamento motore *	min ⁻¹	2900	2900
[4]	Tensione e frequenza di alimentazione MAX	V / DC	48	48
[5]	Tensione e frequenza di alimentazione NOMINAL	V / DC	43,2	43,2
[6]	Peso macchina *	kg	27 ÷ 30	32
[7]	Ampiezza di taglio	cm	41	46
[8]	Dimensioni:			
[8a]	Lunghezza	mm	1580	1650
[8b]	Larghezza	mm	540	560
[8c]	Altezza	mm	1075	1075
[9]	Codice dispositivo di taglio		81004341/3	81004460/0 81004346/3
[10]	Livello di pressione acustica	dB(A)	79,8	82,4
[11]	Incertezza di misura	dB(A)	3,0	3,0
[12]	Livello di potenza acustica misurato	dB(A)	90,24	94,36
[11]	Incertezza di misura	dB(A)	1,34	0,99
[13]	Livello di potenza acustica garantito	dB(A)	92	95
[14]	Livello di vibrazioni	m/s ²	< 2,5	< 2,5
[11]	Incertezza di misura	m/s ²	1,5	1,5

* Per il dato specifico, fare riferimento a quanto indicato nell'etichetta di identificazione della macchina.

[15]	ACCESSORI A RICHIESTA		
[16]	Kit "mulching"	✓	✓
[17]	Batterie, mod.	BT 520 Li 48 BT 540 Li 48 BT 550 Li 48	
[18]	Carica batteria, mod.	CG 500 Li 48 CGF 500 Li 48 CGD 500 Li 48	

[19]	TABELLA PER LA CORRETTA COMBINAZIONE DELLE BATTERIE
------	---

[20]	Uso di una singola batteria		
[21]	Batteria Slot 1	BT 520 Li 48	x
		BT 540 Li 48	✓
		BT 550 Li 48	✓

[22]	Uso combinato di due batterie				
[23]			Batteria Slot 2		
			BT 520 Li 48	BT 540 Li 48	BT 550 Li 48
[21]	Batteria Slot 1	BT 520 Li 48	x	✓	✓
		BT 540 Li 48	✓	✓	✓
		BT 550 Li 48	✓	✓	✓

[1] BG - ТЕХНИЧЕСКИ ДАННИ [2] Номинална мощност * [3] Номинална скорост на функциониране на двигателя * [4] Напрежение и честота на захранване MAX [5] Напрежение и честота на захранване NOMINAL [6] Тегло на машината * [7] Ширина на косене [8] Размери [8a] Дължина [8b] Ширина [8c] Височина [9] Код на инструмента за рязане [10] Дръжка [11] Ниво на звуково налягане [12] Несигурност на измерване [13] Измерено ниво на акустична мощност [14] Гарантирано ниво на акустична мощност [15] Ниво на вибрации [16] принадлежност по поръчка [17] Набор за "Mulching" [18] Аккумулятори, модел [19] Зарядно устройство, модел [20] Използване на една батерия [21] Отвор за батерията 1 [22] Комбинирано използване на две батерии [23] Отвор за батерията 2 * За специфични данни, вижте посоченото на идентификационния етикет на машината.	[1] BS - TEHNIČKI PODACI [2] Nazivna snaga * [3] Maks. brzina rada motora * [4] Napon i frekvencija napajanja MAX [5] Napon i frekvencija napajanja NOMINAL [6] Težina mašine * [7] Širina košenja [8] Dimenzije [8a] Dužina [8b] Širina [8c] Visina [9] Šifra rezne glave [10] Drška [11] Razina zvučnog pritiska [12] Mjerna nesigurnost [13] Izmjerena razina zvučne snage [14] Garantovana razina zvučne snage [15] Razina vibracija [16] Dodatna oprema na zahtjev [17] Pribor za mulčiranje [18] Baterije, mod. [19] Punjač baterije, mod. [20] Korištenje s jednom baterijom [21] Slot za bateriju 1 [22] Kombinovana upotreba s dvije baterije [23] Slot za bateriju 2 * Za specifični podatak, pogledajte što je navedeno na identifikacijskoj naljepnici mašine.	[1] CS - TECHNICKÉ PARAMETRY [2] Jmenovitý výkon [3] Maximální rychlost činnosti motoru * [4] Napájecí napětí a frekvence MAX [5] Napájecí napětí a frekvence NOMINAL [6] Hmotnost stroje * [7] Šířka sečení [8] Rozměry [8a] Délka [8b] Šířka [8c] Výška [9] Kód sekacího zařízení [10] Rukojeť [11] Úroveň akustického tlaku [12] Nepřesnost měření [13] Úroveň naměřeného akustického výkonu [14] Úroveň zaručeného akustického výkonu [15] Úroveň vibrací [16] Příslušenství na požádání [17] Sada pro Mulčování [18] Akumulátor, mod. [19] Nabíječka akumulátoru, mod. [20] Použití jednoho akumulátoru [21] Slot 1 akumulátoru [22] Kombinované použití dvou akumulátorů [23] Slot 2 akumulátoru * Ohledně uvedeného údaje vycházejte z hodnoty uvedené na identifikačním štítku stroje.
[1] DA - TEKNISKE DATA [2] Nominel effekt * [3] Motorens maks. driftshastighed * [4] Forsyningsspænding og -frekvens MAX [5] Forsyningsspænding og -frekvens NOMINAL [6] Maskinens vægt * [7] Klippebredde [8] Mål [8a] Længde [8b] Bredde [8c] Højde [9] Skæreanordningens varenr [10] Styrehåndtag [11] Lydtryksniveau [12] Målesikkerhed [13] Målt lydeffektniveau [14] Garanteret lydeffektniveau [15] Vibrationsniveau [16] Ekstraudstyr [17] Sæt til "mulching" [18] Batterier, mod. [19] Batterioplader, mod. [20] Brug af ét enkelt batteri [21] Batteri slot 1 [22] Kombineret brug af to batterier [23] Batteri slot 2 * For disse data henvises til hvad der er angivet på maskinens identifikationsmærkat.	[1] DE - TECHNISCHE DATEN [2] Nennleistung * [3] Max. Betriebsgeschwindigkeit des Motors * [4] Versorgungsspannung und -frequenz MAX [5] Versorgungsspannung und -frequenz NOMINAL [6] Maschinengewicht * [7] Schnittbreite [8] Abmessungen [8a] Länge [8b] Breite [8c] Höhe [9] Nummer Schneidwerkzeug [10] Griff [11] Schalldruckpegel [12] Messungengenauigkeit [13] Gemessener Schalleistungspegel [14] Garantierter Schalleistungspegel [15] Vibrationspegel [16] Sonderzubehör [17] "Mulching"-Kit [18] Batterien, Mod. [19] Batterieladegerät, Mod. [20] Verwendung einer einzelnen Batterie [21] Batterie Slot 1 [22] Kombinierte Verwendung zweier Batterien [23] Batterie Slot 2 * Für die genaue Angabe nehmen Sie bitte auf das Typenschild der Maschine Bezug.	[1] EL - TEHNIKA XAPAKTISTIKA [2] Ονομαστική ισχύς * [3] Μέγ. ταχύτητα λειτουργίας κινητήρα * [4] Τάση και συχνότητα τροφοδοσίας MAX [5] Τάση και συχνότητα τροφοδοσίας NOMINAL [6] Βάρος μηχανήματος * [7] Πλάτος κοπής [8] Διαστάσεις [8a] Μήκος [8b] Πλάτος [8c] Ύψος [9] Κωδικός συστήματος κοπής [10] Τυμόνι [11] Στάθμη ακουστικής πίεσης [12] Αβεβαιότητα μέτρησης [13] Μετρημένη στάθμη ακουστικής ισχύος [14] Εγγυημένη στάθμη ακουστικής ισχύος [15] Επίπεδο κραδασμών [16] αιτούμενα παρελκομενα [17] Σετ "Mulching" (ψιλοτεμαχισμού) [18] Μπαταρίες, μοντ. [19] Φορτιστής μπαταρίας, μοντ. [20] Χρήση μιας μεμονωμένης μπαταρίας [21] Μπαταρία, υποδοχή 1 [22] Συνδυασμένη χρήση δύο μπαταριών [23] Μπαταρία, υποδοχή 2 * Για το συγκεκριμένο στοιχείο, ελέγξτε τα όσα αναγράφονται στην ετικέτα προσδιορισμού του μηχανήματος.
[1] EN - TECHNICAL DATA [2] Nominal power* [3] Max. motor operating speed * [4] Power supply frequency and voltage MAX [5] Power supply frequency and voltage NOMINAL [6] Machine weight * [7] Cutting width [8] Dimensions [8a] Length [8b] Width [8c] Height [9] Cutting means code [10] Handle [11] Acoustic pressure level [12] Measurement uncertainty [13] Measured acoustic power level [14] Guaranteed acoustic power level [15] Vibration level [16] Accessories available on request [17] Mulching kit [18] Batteries, mod. [19] Battery charger, mod. [20] Single battery use [21] Battery Slot 1 [22] Combined use with two batteries [23] Battery Slot 2 * Please refer to the data indicated on the machine's identification label for the exact figure.	[1] ES - DATOS TÉCNICOS [2] Potencia nominal * [3] Velocidad máx. de funcionamiento motor * [4] Tensión y Frecuencia de alimentación MAX [5] Tensión y Frecuencia de alimentación NOMINAL [6] Peso máquina * [7] Amplitud de corte [8] Dimensiones [8a] Longitud [8b] Anchura [8c] Altura [9] Código dispositivo de corte [10] Mango [11] Nivel de presión acústica [12] Incertidumbre de medida [13] Nivel de potencia acústica medido [14] Nivel de potencia acústica garantizado [15] Nivel de vibraciones [16] Accesorios bajo pedido [17] Kit para "Mulching" [18] Baterías, mod. [19] Cargador de batería, mod. [20] Uso de una única batería [21] Batería slot 1 [22] Uso combinado de dos baterías [23] Batería slot 2 * Para el dato específico, hacer referencia a lo indicado en la etiqueta de identificación de la máquina.	[1] ET - TEHNILISED ANDMED [2] Nominaalvõimsus * [3] Motori töötamise maks. kiirus * [4] Toite pinge ja sagedus MAX [5] Toite pinge ja sagedus NOMINAL [6] Masina kaal * [7] Lõikelaius [8] Mõõdmed [8a] Pikkus [8b] Laius [8c] Kõrgus [9] Lõikeseadme kood [10] Juhtraud [11] Helirõhu tase [12] Mõõtemääramatus [13] Mõõdetud müra võimsuse tase [14] Garanteeritud müra võimsuse tase [15] Vibratsiooni tase [16] Tellimisel lisatarkvid [17] "Multisims" komplekt [18] Aku, mud. [19] Akulaadja, mud. [20] Kasutus ühe akuga [21] Aku pesa 1 [22] Kombineeritud kasutus kahe akuga [23] Aku pesa 2 * Konkreetse info jaoks viidata masina identifitseerimis-etiketil märgitule.

[1] FI - TEKNISET TIEDOT [2] Nimellisteho * [3] Moottorin maksimaalinen toimintanopeus * [4] Syöttöjännite ja -taajuus MAX [5] Syöttöjännite ja -taajuus NOMINAL [6] Laitteen paino * [7] Leikkuleveys [8] Koko [8a] Pituus [8b] Leveys [8c] Korkeus [9] Leikkuuvälineen koodi [10] Kädensija [11] Akustisen paineen taso [12] Mitauksen epävarmuus [13] Mitattu äänitehotaso [14] Taattu äänitehotaso [15] Tärinätaaso [16] Tilattavat lisävarusteet [17] Silppuamisvarusteet [18] Akut, malli [19] Akkulaaturi, malli [20] Yhden ainoan akun käyttö [21] Akku tila 1 [22] Kahden akun yhdistetty käyttö [23] Akku tila 2 * Määrättyä arvoa varten, viittaa laitteen tunnuslaatas- sa annettuihin tietoihin.	[1] FR - CARACTÉRISTIQUES TECHNIQUES [2] Puissance nominale * [3] Vitesse max. de fonctionnement du moteur * [4] Tension et fréquence d'alimentation MAX [5] Tension et fréquence d'alimentation * NOMINAL [6] Poids machine * [7] Largeur de coupe [8] Dimensions [8a] Longueur [8b] Largeur [8c] Hauteur [9] Code organe de coupe [10] Guidon [11] Niveau de pression acoustique [12] Incertitude de la mesure [13] Niveau de puissance acoustique mesuré [14] Niveau de puissance acoustique garanti [15] Niveau de vibrations [16] Accessoires sur demande [17] Kit "Mulching" [18] Batteries, mod. [19] Chargeur de batterie, mod. [20] Utilisation d'une seule batterie [21] Batterie fente 1 [22] Utilisation combinée de deux batteries [23] Batterie fente 2 * Pour la valeur spécifique, se référer à ce qui est indi- qué sur la plaque d'identification de la machine.	[1] HR - TEHNIČKI PODACI [2] Nazivna snaga * [3] Maks. brzina rada motora * [4] Napon i frekvencija napajanja MAX [5] Napon i frekvencija napajanja NOMINAL [6] Težina stroja * [7] Širina košnje [8] Dimenzije [8a] Dužina [8b] Širina [8c] Visina [9] Štra noža [10] Drška [11] Razina zvučnog tlaka [12] Mjerna nesigurnost [13] Izmjerena razina zvučne snage [14] Zajamčena razina zvučne snage [15] Razina vibracija [16] Dodatni pribor na upit [17] Komplet za "mulčiranje" [18] Baterije, mod. [19] Punjač baterija, mod. [20] Uporaba samo jedne baterije [21] Utor za bateriju 1 [22] Kombinirana uporaba dvije baterije [23] Utor za bateriju 2 * Specifični podatke pogledajte na identifikacijskoj etiketi stroja.
[1] HU - MŰSZAKI ADATOK [2] Névleges teljesítmény * [3] A motor max. üzemi sebessége * [4] Tápfeszültség és -frekvencia MAX [5] Tápfeszültség és -frekvencia NOMINAL [6] A gép tömege * [7] Munkaszélesség [8] Méretek [8a] Hosszúság [8b] Szélesség [8c] Magasság [9] Vágóegység kódszáma [10] Tolókar [11] Hangnyomásszint [12] Mérés bi zonytalanság [13] Mért zajteljesítmény szint [14] Garantiált zajteljesítmény szint [15] Vibrációs szint [16] Rendelhető tartozékok [17] "Mulcoszó" készlet [18] Akkumulátorok, típus [19] Akkumulátortöltő, típusa [20] Egy elem használata [21] Elemtartó 1 [22] Két elem kombinált használata [23] Elemtartó 2 * A pontos adatot lásd a gép azonosító adattábláján.	[1] LT - TECHNINIAI DUOMENYS [2] Vardinė galia * [3] Maksimalus variklio veikimo greitis * [4] Maitinimo įtampa ir dažnis MAX [5] Maitinimo įtampa ir dažnis NOMINAL [6] įrenginio svoris * [7] Pjovimo plotis [8] Išmatavimai [8a] Ilgis [8b] Plotis [8c] Aukštis [9] Pjovimo įtaiso kodas [10] Rankena [11] Garso slėgio lygis [12] Išmatavimo paklaida [13] Išmatuotas garso galios lygis [14] Garantuojamas garso galios lygis [15] Vibracijų lygis [16] Priedai, kuriuos galima užsisakyti [17] „Mulčiavimo“ rinkinys [18] Akumuliatoriai, mod. [19] Akumuliatoriaus įkroviklis, mod. [20] Vieno akumuliatoriaus naudojimas [21] 1 akumuliatoriaus anga [22] Suderintas dviejų akumuliatorių naudojimas [23] 2 akumuliatoriaus anga * Konkretūs specifiniai duomenys yra pateikti įrenginio identifikavimo etiketėje.	[1] LV - TEHNISKE DATI [2] Nominālā jauda * [3] Maks. dzinēja griešanās ātrums * [4] Barošanas spriegums un frekvence MAX [5] Barošanas spriegums un frekvence NOMINAL [6] Mašīnas svars [7] Plaušanas platums [8] Izmēri [8a] Garums [8b] Platums [8c] Augstums [9] Grezējierīces kods [10] Rokturis [11] Skaņas spiediena līmenis [12] Mērījumu kļūda [13] Izmērītais skaņas intensitātes līmenis [14] Garantētais skaņas intensitātes līmenis [15] Vibrāciju līmenis [16] Piederumi pēc pieprasījuma [17] „Mulčēšanas” komplekts [18] Akumulatori, mod. [19] Akumulatoru lādētājs, mod. [20] Viena akumulatora izmantošana [21] Akumulatora 1. slots [22] Divu akumulatoru kombinēta izmantošana [23] Akumulatora 2. slots * Precīza vērtība ir norādīta mašīnas identifikācijas datu plāksnītē.
[1] MK - ТЕХНИЧКИ ПОДАТОЦИ [2] Номинална моќност * [3] Максимална брзина при работа на моторот * [4] Волтажа и вид на напојување MAX [5] Волтажа и вид на напојување NOMINAL [6] Техника на машината * [7] Обем на косење [8] Димензии [8a] Должина [8b] Ширина [8c] Висина [9] Код на уредот за сечење [10] Рачка [11] Ниво на акустичен притисок [12] Отстапување од мерењата [13] Измерено ниво на акустична моќност [14] Гарантирано ниво на акустична моќност [15] Ниво на вибрации [16] додатоци достапни на барање [17] Комплет за „мелење“ [18] Батерии, модели [19] Полнач за батерија, модел [20] Батерија за еднократна употреба [21] Отвор за батерија 1 [22] Комбинирано користење со две батерии [23] Отвор за батерија 2 * За одреден податок, проверете дали истиот е посочен на етикетата за идентификација на машината.	[1] NL - TECHNISCHE GEGEVENS [2] Nominale vermogen * [3] Maximale snelheid voor de werking van de motor * [4] Spanning en frequentie voeding MAX [5] Spanning en frequentie voeding NOMINAL [6] Gewicht machine * [7] Maatbreedte [8] Afmetingen [8a] Lengte [8b] Breedte [8c] Hoogte [9] Code snij-inrichting [10] Steel [11] Niveau geluidsdruk [12] Meetonzekerheid [13] Gemeten akoestisch vermogen [14] Gewaarborgd akoestisch vermogen [15] Niveau trillingen [16] Optionele accessoires [17] Kit "Mulching" [18] Accu's, mod. [19] Acculader, mod. [20] Gebruik van een enkele batterij [21] Batterij compartiment 1 [22] Gecombineerd gebruik van twee batterijen [23] Batterij compartiment 2 * Voor het specifiek gegeven, verwijst men naar wat aangegeven is op het identificatielabel van de machine.	[1] NO - TEKNISKE DATA [2] Nominell effekt * [3] Motorens maks driftshastighet * [4] Matespennning og -frekvens MAX [5] Matespennning og -frekvens NOMINAL [6] Maskinvekt * [7] Klippebredde [8] Mål [8a] Lengde [8b] Bredd [8c] Høyde [9] Artikkelnummer for klippeinnretning [10] Håndtak [11] Lydtrykknivå [12] Måleusikkerhet [13] Målt lydeffektnivå [14] Garantert lydeffektnivå [15] Vibrasjonsnivå [16] Tilleggsutstyr på forespørsel [17] Mulching-sett [18] Batteri, mod. [19] Batterilader, mod. [20] Det brukes kun ett enkelt batteri [21] Batteri slot 1 [22] Kombineret bruk av to batterier [23] Batteri slot 2 * For spesifikk informasjon, se referansen på maski- nens identifikasjonsetikett.

[1] PL - DANE TECHNICZNE [2] Moc znamionowa * [3] Maks. prędkość obrotowa silnika * [4] Napięcie i częstotliwość zasilania MAX [5] Napięcie i częstotliwość zasilania NOMINAL [6] Masa maszyny * [7] Szerokość koszenia [8] Wymiary [8a] Długość [8b] Szerokość [8c] Wysokość [9] Kod agregatu tnącego [10] Uchwyty [11] Poziom ciśnienia akustycznego [12] Błąd pomiaru [13] Poziom mocy akustycznej zmierzony [14] Gwarantowany poziom mocy akustycznej [15] Poziom wibracji [16] Akcesoria dostępne na zamówienie [17] Zestaw mulczujący [18] Akumulatory, mod. [19] Ładowarka akumulatora, mod. [20] Korzystanie z jednego akumulatora [21] Slot 1. akumulatora [22] Łączne korzystanie z dwóch akumulatorów [23] Slot 2. akumulatora * W celu uzyskania konkretnych danych, należy się odnieść do wskazań zamieszczonych na tabliczce identyfikacyjnej maszyny.	[1] PT - DADOS TÉCNICOS [2] Potência nominal * [3] Velocidade máx. de funcionamento motor * [4] Tensão e frequência de alimentação MAX [5] Tensão e frequência de alimentação NOMINAL [6] Peso da máquina * [7] Amplitude de corte [8] Dimensões [8a] Comprimento [8b] Largura [8c] Altura [9] Código dispositivo de corte [10] Guiador [11] Nível de pressão acústica [12] Incerteza de medição [13] Nível de potência acústica medido [14] Nível de potência acústica garantido [15] Nível de vibrações [16] Acessórios a pedido [17] Kit "Mulching" [18] Baterias, mod. [19] Carregador de bateria, mod. [20] Uso de uma única bateria [21] Bateria compartimento 1 [22] Uso combinado de duas baterias [23] Bateria compartimento 2 * Para o dado específico, consultar a etiqueta de identificação da máquina.	[1] RO - DATE TEHNICE [2] Putere nominală * [3] Viteză max. de funcționare a motorului * [4] Tensiunea și frecvența de alimentare MAX [5] Tensiunea și frecvența de alimentare NOMINAL [6] Greutatea mașinii * [7] Lățimea de tăiere [8] Dimensiuni [8a] Lungime [8b] Lățime [8c] Înălțime [9] Codul dispozitivului de tăiere [10] Ghidon [11] Nivel de presiune acustică [12] Nesiguranta în măsurare [13] Nivel de putere acustică măsurat [14] Nivel de putere acustică garantat [15] Nivel de vibrații [16] Accesorii la cerere [17] Kit de mărunțire „Mulching” [18] Baterii, mod. [19] Încărcător, mod. [20] Utilizarea unei singure baterii [21] Canal baterie 1 [22] Utilizare combinată a două baterii [23] Canal baterie 2 * Pentru informația specifică, consultați datele de pe eticheta de identificare a mașinii.
[1] RU - ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ [2] Номинальная мощность * [3] Макс. число оборотов двигателя * [4] Напряжение и частота питания MAX [5] Напряжение и частота питания NOMINAL [6] Вес машины * [7] Ширина скашивания [8] Габариты [8a] Длина [8b] Ширина [8c] Высота [9] Код режущего приспособления [10] Рукоятка [11] Уровень звукового давления [12] Погрешность измерения [13] Измеренный уровень звуковой мощности [14] Гарантируемый уровень звуковой мощности [15] Уровень вибрации [16] принадлежности – навесные орудия по заказу [17] Комплект "Мульчирование" [18] Батареи, мод. [19] Зарядное устройство, мод. [20] Использование одной батареи [21] Слот батареи 1 [22] Комбинированное использование двух батарей [23] Слот батареи 2 * Точное значение см. на идентификационном ярлыке машины.	[1] SK - TECHNICKÉ PARAMETRE [2] Menovitý výkon * [3] Maximálna rýchlosť činnosti motora * [4] Napájacie napätie a frekvencia MAX [5] Napájacie napätie a frekvencia NOMINAL [6] Hmotnosť stroja * [7] Šírka kosenia [8] Rozmery [8a] Dĺžka [8b] Šírka [8c] Výška [9] Kód kosiaceho zariadenia [10] Rukoväť [11] Úroveň akustického tlaku [12] Nepresnosť merania [13] Úroveň nameraného akustického výkonu [14] Úroveň zarúčeného akustického výkonu [15] Úroveň vibrácií [16] Prídavné zariadenia na požiadanie [17] Súprava pre Mulčovanie [18] Akumulátor, mod. [19] Nabíjačka akumulátora, mod. [20] Použitie jedného akumulátora [21] Slot 1 akumulátora [22] Kombinované použitie dvoch akumulátorov [23] Slot 2 akumulátora * Ohľadne uvedeného parametra vychádzajte z hodnoty uvedenej na identifikačnom štítku stroja.	[1] SL - TEHNIČNI PODATKI [2] Nazivna moč * [3] Najvišja hitrost delovanja motorja * [4] Napetost in frekvenca električnega napajanja MAX [5] Napetost in frekvenca električnega napajanja NOMINAL [6] Teža stroja * [7] Širina reza [8] Dimenzije [8a] Dolžina [8b] Širina [8c] Višina [9] Šifra rezalne naprave [10] Držaj [11] Raven zvočnega tlaka [12] Merilna negotovost [13] Izmerjena raven zvočne moči [14] Zajamčena raven zvočne moči [15] Nivo vibracij [16] Dodatni priključki na zahtevo [17] Komplet za mulčenje [18] Baterije, mod. [19] Polnilnik baterije, mod. [20] Uporaba samo ene baterije [21] Baterija: ležišče 1 [22] Kombinirana uporaba dveh baterij [23] Baterija: ležišče 2 * Za specifični podatek glej identifikacijsko nalepko stroja.
[1] SR - TEHNIČKI PODACI [2] Nazivna snaga [3] Maks. radna brzina motora * [4] Napon i frekvencija napajanja MAX [5] Napon i frekvencija napajanja NOMINAL [6] Težina mašine * [7] Širina košenja [8] Dimenzije [8a] Dužina [8b] Širina [8c] Visina [9] Šifra rezne glave [10] Drška [11] Nivo zvučnog pritiska [12] Merna nesigurnost [13] Izmereni nivo zvučne snage [14] Garantovani nivo zvučne snage [15] Nivo vibracija [16] Dodatna oprema na zahtev [17] Komplet za malčiranje [18] Baterije, mod. [19] Punjač baterije, mod. [20] Korišćenje sa jednom baterijom [21] Slot za bateriju 1 [22] Kombinovana upotreba sa dve baterije [23] Slot za bateriju 2 * Za specifični podatak, pogledajte podatke navedene na identifikacijskoj nalepnici mašine.	[1] SV - TEKNISKA SPECIFIKATIONER [2] Nominell effekt * [3] Motors maximala funktionshastighet * [4] Spänning och frekvens MAX [5] Spänning och frekvens NOMINAL [6] Maskinvekt * [7] Skärbredd [8] Dimensioner [8a] Längd [8b] Bredd [8c] Höjd [9] Skärenhetens kod [10] Handtag [11] Ljudtrycksnivå [12] Tvivel med mått [13] Uppmätt ljudeffektnivå [14] Garanterad ljudeffektnivå [15] Vibrationsnivå [16] Fällavställbehör [17] Sats för "Mulching" [18] Batterier, mod. [19] Batteriladdare, mod. [20] Användning av ett enda batteri [21] Batteri plats 1 [22] Kombinerad användning av två batterier [23] Batteri plats 2 * För specifik information, se uppgifterna på maskinens märklplåt.	[1] TR - TEKNİK VERİLER [2] Nominal güç * [3] Motorun maksimum çalışma hızı * [4] Besleme gerilimi ve frekansı MAX [5] Besleme gerilimi ve frekansı NOMINAL [6] Makine ağırlığı * [7] Kesim genişliği [8] Ebatlar [8a] Uzunluk [8b] Genişlik [8c] Yükseklik [9] Kesim düzeni kodu [10] Sap [11] Ses basınç seviyesi [12] Ölçü belirsizliği [13] Ölçülen ses gücü seviyesi [14] Garanti edilen ses gücü seviyesi [15] Titreşim seviyesi [16] Talep üzerine aksesuarlar [17] "Malçlama" kiti [18] Bataryalar, mod. [19] Batarya şarj cihazı, mod. [20] Tek aküyü kullanım [21] Akü Yuvası 1 [22] İki aküyü kombine kullanım [23] Akü Yuvası 2 * Spesifik değer için, makine belirleme etiketinde gösterilenleri referans alın.



INDEX

1. GENERAL INFORMATION	1
2. SAFETY REGULATIONS	1
3. GETTING TO KNOW THE MACHINE	3
4. ASSEMBLY	4
5. CONTROLS	4
6. USING THE MACHINE	4
7. MAINTENANCE	6
8. STORAGE	6
9. HANDLING AND TRANSPORTATION	7
10. MAINTENANCE TABLE	7
11. TROUBLESHOOTING	7
12. ACCESSORIES ON REQUEST	8

1. GENERAL INFORMATION

1.1 HOW TO READ THE MANUAL

Some paragraphs in the manual that contain particularly important information regarding safety and operation and are emphasised in a different manner, according to this criterion:

NOTE OR IMPORTANT *these give details or further information on what has already been said, and aim to prevent damage to the machine.*

This symbol highlights danger. Failure to observe the warning can lead to possible personal and/or third party injury and/or damage.

- * The paragraphs highlighted in a square with grey spots
- * indicate the optional characteristics that are not available on all models documented in this manual. Check if
- * the characteristics are available on this model.

Whenever reference is made to a position on the machine "front", "back", "left" or "right" hand side, this refers to the operator's working position.

1.2 REFERENCES

1.2.1 Figures

The figures in these instructions for use are numbered 1, 2, 3, etc.

The components indicated in the figures are identified with letters A, B, C, and so on.

Reference to component C in figure 2 is indicated with the wording: "See fig. 2.C" or simply "(Fig. 2.C)".

The figures are provided as a guide only. The actual pieces can differ from those illustrated in this document.

1.2.2 Titles

The manual is divided into chapters and paragraphs. The title of paragraph "2.1 Training" is a sub-title of "2. Safety regulations". References to titles or paragraphs are marked with the abbreviation chap. or par. and the relevant number. Example: "chap. 2" or "par. 2.1"

2. SAFETY REGULATIONS

2.1 TRAINING

Become acquainted with the controls and the proper use of the machine. Learn how to stop the motor quickly. Failure to follow the warnings and instructions may result in fire and/or serious injury.

- Never allow children or persons unfamiliar with these instructions to use the machine. Local laws may establish a minimum age for users.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never use the machine if the user is tired or unwell, or has taken medicine, drugs, alcohol or any substances which may slow their reflexes and compromise their judgement.
- Do not allow children or other passengers to ride on the machine.
- Bear in mind that the operator or user is responsible for accidents or unexpected events that may occur to other people or their property. It is the user's responsibility to assess the potential risk of the area where work is to be carried out and to take all the necessary precautions to ensure his own safety and that of others, particularly on slopes or rough, slippery and unstable ground.
- If the machine is sold or lent to others, make sure that the operator reads the user instructions contained in this manual.

2.2 PRELIMINARY PROCEDURES

Personal Protective Equipment (PPE)

- Always wear suitable work attire, hard-wearing safety footwear with non-slip soles and long trousers. Do not operate the machine barefoot or wearing open sandals. Wear hearing protection devices.
- Use of hearing protections can reduce the ability to hear any warnings (shouting or alarms). Be careful of what occurs around you in the work area.
- Wear protective gloves whenever your hands are at risk.
- Never wear scarves, shirts, necklaces, bracelets, loose flowing clothing, laces or ties or any hanging or hanging accessories that could be caught in the machine or in any objects or materials in the work area.
- Tie your hair back if it is long.

Work area/Machine

- Thoroughly inspect the entire work area and remove anything that could be thrown by the machine or damage the cutting means/rotating units (stones, branches, iron wires, bones, etc.).

2.3 DURING OPERATION

Work Area

- Do not use the machine in environments at risk of explosion, in the presence of flammable liquids, gas or powder. Power tools create sparks which may ignite the dust or fumes.
- Work only in daylight or with good artificial light in good visibility conditions.
- Keep persons, children and animals away from the working area. Children must be supervised by another adult.
- Avoid working with wet grass, in the rain and when there is a risk of a thunderstorm, especially lightening.

- Do not expose the machine to rain or wet environments. Water entering a power tool will increase the risk of electric shock.
- Pay careful attention to uneven ground (hills, dips), slopes, hidden hazards and obstacles that could limit visibility.
- Be very careful near ravines, ditches or embankments. The machine could overturn if a wheel slides over the edge or if the earth gives way.
- Always mow across a slope and never up and down it, being very careful when changing direction, making sure you have firm footage and that the wheels do not hit any obstacles (such as stones, branches, roots, etc.) that may cause the machine to slide sideways or make you lose control of it.
- Look out for traffic when using the machine near the road.

Behaviour

- Exercise caution when reversing or moving backwards. Look behind you to make sure there are no obstacles before and during operations in reverse gear.
- Never run, always walk.
- Do not allow the lawnmower to pull you along.
- Always keep hands and feet away from the cutting means, when starting and when using the machine.
- Attention: the cutting means will continue to rotate for a few seconds after disengagement or after you have switched off the motor.
- Keep away from the discharge opening.

 **If something breaks or an accident occurs during mowing, turn off the engine immediately and move the machine away to prevent further damage; if an accident occurs with injuries or third parties are injured, carry out the first aid measures most suitable for the situation immediately and contact the medical authorities for any necessary health care. Carefully remove any debris which could cause damage or injury to persons or animals if ignored.**

Use limitations

- Never operate the machine with guards damaged, missing or incorrectly assembled (grass catcher, side discharge guards, rear discharge guards).
- Don't use the machine if the attachments/tools are not installed in their seats.
- Never disengage, deactivate, remove or tamper with the safety systems/micro switches installed.
- Do not strain the machine too much and do not use a small machine for heavy-duty work; if you use the right machine, you will reduce the risk of hazards and improve the quality of your work.

2.4 MAINTENANCE, STORAGE

Ensure regular maintenance and correct storage to maintain machine safety and high performance levels.

Maintenance

- Never use the machine with worn or damaged parts. Faulty or worn-out parts must always be replaced and never repaired.
- Be careful during adjustment of the machine to prevent entrapment of the fingers between moving parts of the cutting means and fixed parts of the machine.

 **The noise and vibration levels shown in these instructions are the maximum levels when using the machine. The use of an unbalanced cutting element, the excessive speed of movement, or lack of maintenance have a significant influence on noise emissions and vibrations.**

Consequently, it is necessary to take preventive steps to eliminate possible damage due to high levels of noise and stress from vibration; Maintain the machine well, wear ear protection devices, and take breaks while working.

Storage

- To reduce fire risks, do not leave containers with debris inside a room.

2.5 BATTERY / BATTERY CHARGER

IMPORTANT *The following safety instructions are in addition to the safety requirements provided in the specific battery and battery charger manual delivered with this machine.*

- Only use battery chargers recommended by the manufacturer to recharge batteries. An inadequate battery charger may cause electric shock, overheating or corrosive liquid to leak from the battery.
- Use only batteries specifically designed for your power tool. The use of other batteries may cause injuries and fire risks.
- Make sure that the machine is switched off before inserting the battery. Inserting a battery in a machine which is switched on can cause a fire.
- Keep all unused batteries at a distance from paper clips, coins, keys, nails, screws or other small metal objects as contact with the same can cause short circuits. Short circuits between battery contacts can lead to explosion or fires.
- Do not use the battery charger in places where there are inflammable vapours, substances or on easily inflammable surfaces like paper, fabric, etc. During recharge, the battery charger becomes heated and may cause fire.
- When transporting accumulators, make sure the contacts never come into contact with each other and never use metal containers to transport them.

2.6 ENVIRONMENTAL PROTECTION

Safeguarding the environment must be a relevant and priority aspect when using the machine, of benefit to the community and the environment we live in.

- Avoid being a disturbance to the neighbourhood. Use this machine at reasonable times of the day only (not early morning or late evening when the noise could cause disturbance).
- Strictly comply with local regulations for the disposal of packaging, damaged parts or any elements with strong environmental impact; this waste must not be disposed of with regular waste, but must be separated and taken to collection centres, which will recycle the materials.
- Comply with local regulations for the disposal of waste materials.
- When the machine is withdrawn from service, do not dispose of it in the environment, but take it to a waste disposal facility in accordance with the local regulations in force.



Do not throw electrical equipment away with domestic waste. According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its implementation in compliance with national standards, old electrical equipment must be collected separately, for eco-compatible recycling. If electrical equipment is disposed of in dumps or in landfills, hazardous substances can leak into the groundwater and contaminate the food chain, damaging your health and well-being. For further information on the disposal of this product, contact your dealer or a domestic waste collection service.



At the end of their working life, dispose of batteries paying due attention to the environment. Batteries contain material classified as hazardous for you and the environment. They must be removed and disposed of separately at a facility that accepts lithium-ion batteries.



Separate waste collection of the products and packaging used allows the materials to be recycled and reused. Reuse of recycled materials help to prevent environmental pollution and reduces the demand for raw materials.

3. GETTING TO KNOW THE MACHINE

3.1 DESCRIPTION OF THE MACHINE AND PLANNED USE

This machine is pedestrian-controlled lawnmower.

The machine is essentially composed of a motor which drives a cutting means enclosed in a casing, equipped with wheels and a handle.

The operator is able to operate the machine and use the main controls, always staying behind the handle at a safe distance from the rotating cutting means.

If the operator leaves the machine, the motor and cutting means will stop within a few seconds.

3.1.1 Intended use

This machine is designed and built to cut (and collect) grass in gardens and grassy areas, with a height according to its cutting capacity, driven by an operator walking behind it. Generally speaking this machine can:

1. Mow the grass and collect it in the grass catcher bag.
2. Mow the grass and discharge it on the ground through the rear part.
3. Mow the grass and discharge it on the ground laterally (if available).
4. Mow the grass, chop it and discharge it on the ground (mulching effect - if available).

The use of special attachments provided for by the Manufacturer as original equipment or which may be purchased separately, allows this work to be done in various operating modes, illustrated in this manual or the instructions that accompany the single attachments.

3.1.2 Improper use

Any other usage different from the afore-mentioned ones may be hazardous and harm persons and/or damage things.

Examples of improper use may include, but are not limited to:

- Allowing children, animals or other passengers to ride on the machine as they could fall off and injure themselves or compromise safe driving by the operator.
- Letting oneself be transported by the machine.
- Using the machine to tow or push loads.
- Using the cutting means on surfaces other than grass.
- Use the machine for leaf or debris collection.
- Using the machine to trim hedges, or for cutting vegetation other than grass.
- Use of the machine by more than one person.

IMPORTANT *Improper use of the machine will invalidate the warranty, relieve the Manufacturer from all liabilities, and the user will consequently be liable for all and any damage or injury to himself or others.*

3.1.3 User types

This machine is intended for use by consumers, i.e. non-professional operators. It is intended for "DIY" use only.

IMPORTANT *The machine must be used by one operator.*

3.2 SAFETY SIGNS

The machine has various symbols on it (Fig. 2). Their function is to remind the operator of the correct conduct for use, with due care and caution. Meanings of the symbols:



Warning. Read the instructions before operating the machine.



Danger! Risk of thrown objects. Keep all persons away from the work area whilst working.



Only for lawn mowers with thermal engine.



Only for electric lawn mowers with mains power supply.



Only for electric lawn mowers with mains power supply.



Danger! Danger of cutting. Cutting means in motion. Do not insert hands or feet into the cutting means housing.



Be careful when using the sharp cutting means. Do not put hands or feet near or under the opening of the cutting means. The cutting means continues to turn even after the motor has been switched off. Remove the safety key (deactivation device) before any maintenance is carried out.

IMPORTANT *Any damaged or illegible decals must be replaced. Order replacement decals from an Authorised Service Centre.*

3.3 IDENTIFICATION LABEL

The identification label holds the following data (Fig.1).

1. Sound power level.
2. CE conformity marking.
3. Year of manufacture.
4. Type of machine.
5. Serial number.
6. Name and address of Manufacturer.
7. Article code.
8. Max. motor operation speed.
9. Weight in kg.
10. Power voltage and frequency.
11. Electrical protection rating.
12. Nominal power.

Write the identification data of the machine in the specific space on the label on the back of the cover page.

IMPORTANT *Quote the information on the product identification label whenever you contact an Authorised Service Centre.*

IMPORTANT *The example of the Declaration of Conformity is provided on the last pages of the manual.*

3.4 MAIN COMPONENTS (FIG.1)

- A. Chassis.
- B. Engine.
- C. Cutting means.
- D. Rear discharge guard.
- E. Side discharge guard (if equipped).
- F. Side discharge chute (if equipped).
- G. Grass catcher.
- H. Handle.
- I. Battery.
- J. Operator presence lever.
- K. Drive engagement lever.
- L. Hatch for accessing the battery compartment.
- M. Safety key (Deactivation device).
- N. Battery charger.



Strictly observe the indications and the safety regulations described in chap. 2.

4. ASSEMBLY

Certain components of the machine are not installed in the factory and have to be assembled after unpacking, following the instructions below.



Unpacking and completing the assembly should be performed on a flat and stable surface, with enough space for handling the machine and its packaging. Do not use the machine until all the indications provided in the "ASSEMBLY" section have been carried out.

4.1 UNPACKING (FIG.3)

- 1. Remove all the unassembled parts from the box.
- 2. Dispose of the box and packaging in compliance with local regulations.



Before assembling, make sure the safety key is not inserted into its housing.

4.2 HANDLE ASSEMBLY (FIG.4,5,6,7,8)

4.3 GRASS CATCHER ASSEMBLY (FIG.9)

5. CONTROLS

5.1 SAFETY KEY (DEACTIVATION DEVICE) (FIG.10.A)

The key activates and deactivates the electric circuit of the machine.

IMPORTANT Remove the safety key whenever the machine is unused or left unattended.

5.2 HANDLE

5.2.1 Operator presence lever

Press one of the two levers (Fig.11.A) against the handle to enable the cutting means and drive engagement functions. When both levers are released, the motor automatically stops and all functions are disabled.

5.2.2 Power button (Fig.12.A);



- 1. **Machine start-up.** By pressing the button (Fig.12.A) the display (Fig.12.B) switches on and the machine is ready for use.

NOTE The machine can be switched on only if the operator presence lever and the drive lever are released.

NOTE In case the machine is not operated, the display turns off after 15 seconds and the above-mentioned operation must be carried out again.



- 2. **Cutting means engagement.**

NOTE The cutting means engagement is possible only by pressing the operator presence lever against the handle (see par. 6.3).

- 3. **Cutting means disengagement.** With the cutting means engaged, press the power button (Fig.12.A); the cutting means stops whilst keeping the machine powered on.

5.2.3 Drive ON lever

This engages the wheel drive and allows the machine to move forward.



Traction engaged (Fig.11.A/B).

- a. Press one of the two operator presence levers (Fig.11.A) against the handle.
- b. Press one of the two drive engagement levers (Fig.11.B) against the handle.

Speed adjustment (Fig.12.C).

You can select 6 different levels of speed.



- 1. **Maximum speed** (about 5 Km/h).



- 2. **Minimum speed** (about 2.5 Km/h).

Every two "clicks" of the selection knob (Fig.12.C) cause a forward speed level change, shown on the display (Fig.12.C1).

NOTE The last speed level selected remains set after the machine is turned off.

IMPORTANT Avoid moving the machine backwards when the drive is ON.

5.2.4 "ECO" button

The "ECO" mode allows to save energy when cutting the grass, optimising the battery life. Press the button (Fig.12.D) to enable or disable the "Eco" mode.

When the traction is active, the display shows the indication "E". This mode is automatically deactivated when the operator presence levers are released.

NOTE It is not recommended to use the "ECO" function in heavy grass cutting conditions (cutting of dense, high, humid grass).

5.3 CUTTING HEIGHT ADJUSTMENT

 **Do this when the cutting means is stationary.**

- Adjustment (See Fig.13.A)

6. USING THE MACHINE

IMPORTANT For instructions regarding the batteries, refer to the specific manual.

6.1 PRELIMINARY PROCEDURES

Make sure that the safety key is not inserted in its slot. Place the machine in a stable horizontal position on the ground.

6.1.1 Preparing the machine before starting work

NOTE This machine can be used to mow lawns in various ways.

a. Preparation for grass cutting and collection in the grass catcher:

1. For side discharge models: make sure that the guard (Fig. 14.A) is lowered and locked by the safety lever (Fig. 14.B).
2. Insert the grass catcher shroud (Fig.14.C).
3. Insert the grass catcher (Fig.14.D).

b. Preparation for grass cutting and rear grass discharge on the ground:

1. Lift the rear discharge guard (Fig.15.A) and fit the pin (Fig.15.B).
2. For models with side discharge: make sure that the guard (Fig. 15.C) is lowered and locked by the safety lever (Fig. 15.D).

To remove the pin: see Fig.15.A/B.

c. Preparation for grass mowing and chopping (mulching function):

Lift the rear discharge guard (Fig.16.A) and fit the chute cap (Fig.16.B) in the discharge opening, keeping it slightly tilted to the right. Fasten it by fitting the two pins (Fig.16.B.1) into the holes provided until clicks into place.

For models with side discharge: make sure that the side discharge guard (Fig. 16.C) is lowered and locked by the safety lever (Fig. 16.D).

d. Preparation for grass cutting and side discharge on the ground:

1. Lift the rear discharge guard (Fig.17.A) and fit the chute cap (Fig.17.B) in the discharge opening, keeping it slightly tilted to the right. Fasten it by fitting the two pins (Fig.17.B.1) into the holes provided until clicks into place.
2. Slightly push the safety lever (Fig.17.C) and lift the side discharge guard (Fig.17.D).
3. Insert the side discharge chute (Fig.17.E).
4. Close the side discharge guard (Fig.17.D) so as to lock the side discharge chute (Fig.17.E).

To remove the side discharge chute:

5. Slightly push the safety lever (Fig.17.C) and lift the side discharge guard (Fig.17.D).
6. Release the side discharge chute (Fig.17.E).

6.2 Safety checks



Always carry out the safety checks before use.

6.2.1 Safety check before every use

- Check the integrity and the correct mounting of all components of the machine;
- make sure that all fastening devices are correctly tightened;
- keep all surfaces of the machine clean and dry.

6.2.2 Machine operating test

Action	Result
1. Start the machine (par. 6.3). 2. Enable the cutting means (par.6.3). 3. Release both operator presence levers (Fig.23.A).	1. The display turns off and the machine is ready for use. 2. The cutting means should move. 3. The levers should return automatically and rapidly to the neutral position, the motor must switch off and the cutting means must stop within a few seconds.
1. Start the machine (par. 6.3). 2. Operate the drive lever (par. 5.2.3). 3. Disengage the drive lever.	1. The display turns off and the machine is ready for use. 2. The wheels should move the machine forward. 3. The wheels should stop and the machine stops moving forward.
Test driving	No abnormal vibrations. No abnormal sound.



If any of the results fail to match the indications provided in the tables, do not use the machine! Contact an Authorised Service Centre to have it checked and repaired if necessary.

6.3 START-UP

NOTE Start up the machine on a flat surface without obstacles or high grass.

1. Open the hatch for accessing the battery compartment (Fig.18.A).
2. Insert the batteries correctly in their housing (Fig. 18.B)
3. Insert the safety key (Fig.19.B) completely and turn it to "ON" position.
4. Press the power button (Fig.20.A).
5. Engage the cutting means by pressing one of the two operator presence levers (Fig.21.A) against the handle and then the button (Fig.21.B).

6.4 OPERATION

IMPORTANT When working, always keep a safe distance from the cutting means, given by the length of the handle.

IMPORTANT To guarantee optimal machine operation, it is recommended to use two batteries at the same time.

The battery power reserve (and therefore the lawn surface to be mown before recharging) depends on many factors, described in (par. 7.2.1).

During use, the charge status of the batteries is displayed (remaining charge percentage) (Fig.12.E).

IMPORTANT If the motor stops because it is overheated whilst mowing, you must wait approximately 5 minutes before restarting it.

6.4.1 Grass cutting

1. Start moving forward and mowing the grass area.
2. Adjust the speed and cutting height (par. 5.6) according to the lawn conditions (grass height, density and humidity) and to the amount of grass to be cut.

• **For traction models (par. 5.2.3):** It is advisable not to cut on slopes of more than 15°.

3. The appearance of the lawn will improve if you alternate cutting in both directions at the same height (Fig.22).


• **For side discharge:** it is recommended to follow a path so as to avoid discharging the cut grass from the part of the lawn that is yet to be mown.

• **For mulching or rear grass discharge:**

- Always avoid removing a large quantity of grass. Never cut more than one third of the total grass height per single pass (Fig.22).
- Keep the chassis clean (par. 7.3.1).

6.4.2 Grass catcher emptying

• **For grass catcher with contents indicator device:**

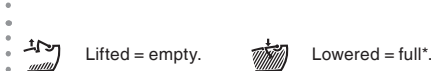

• that the grass catcher is full and must be emptied.

To remove and empty the grass catcher:

1. Wait until the cutting means stops;
2. Remove the grass catcher (Fig.27.D).

6.5 STOPPING THE MACHINE

To stop the machine:

1. Release both levers (Fig.23.A).
2. Wait until the cutting means stops.

 **After stopping the machine, it will take a few seconds for the cutting means to stop.**

IMPORTANT Always stop the machine.

- When moving between work areas.
- When driving on grass free surfaces.
- Every time it is necessary to overcome an obstacle.
- Before adjusting the cutting height.
- Any time the grass catcher is removed or refitted.
- Any time the side discharge chute (if available) is removed or refitted.

6.6 AFTER OPERATION

1. Clean (par. 7.4).
2. If necessary, replace damaged components and tighten any slack screws and bolts.

IMPORTANT Remove the safety key whenever the machine is unused or left unattended.

7. MAINTENANCE

7.1 GENERAL INFORMATION

 **Before proceeding with any inspections, cleaning or maintenance/adjustment operations on the machine:**

- Stop the machine.
- Make sure that any moving component has stopped.
- Wait until the engine cools down.
- Remove the safety key.
- Read the relevant instructions.
- Use suitable clothing, protective gloves and goggles.

7.2 ROUTINE MAINTENANCE

- The frequency and types of maintenance are summarised in the "Maintenance Table" (chapter 10).

IMPORTANT Any maintenance and adjustment operations not described in this manual must be carried out by your Authorised Service Centre.

7.2.1 Battery

Battery removal and recharging

1. Open the hatch and remove the safety key.
2. Press the flap in the battery housing (Fig.24.A) and remove the battery (Fig.24.B).
3. Insert the battery (Fig.25.B) in its housing in the battery charger (Fig.25.C).
4. Connect the battery charger to a power socket (Fig. 25.B) with the voltage indicated on the rating plate.
5. Fully charge the battery according to the instructions in the battery/battery charger booklet.

NOTE The battery is equipped with a guard that inhibits recharging if the environmental temperature is not between 0 and +45 °C.

NOTE The battery can be recharged at any time, even partially, with no risk of damaging it.

Refitting the battery on the machine

When recharging is completed:

1. Remove the battery from the housing in the battery charger (do not keep recharging when recharging is completed).
2. Disconnect the battery charger from the mains power supply.
3. Open the battery housing hatch (Fig.18.A), insert the battery (Fig.18.B) into its housing pressing down until you hear it click firmly into position and check the electrical contact.
4. Completely close the hatch again.

7.3 OCCASIONAL MAINTENANCE

7.3.1 Cutting means

⚠ All operations related to the cutting means must be performed by an Authorised Service Centre.

⚠ Make sure damaged, misshapen or worn cutting means is replaced, together with the securing screws to preserve balance.

IMPORTANT Always use original cutting means bearing the code indicated in the "Technical Data" table.

7.4 CLEANING

Clean thoroughly following the instructions below every time it is used.

7.4.1 Cleaning the machine

- Always make sure the air intakes are free of debris.
- Do not spray water onto the motor and electrical components, prevent them from getting wet (Fig.26.0).
- Do not use aggressive liquids to clean the chassis.
- To reduce the risk of fire, keep the engine free of grass, leaves residues or excessive grease.
- Always keep the levers, display and buttons free of debris.

7.4.2 Cleaning the cutting means assembly

Remove grass debris and mud accumulated inside the chassis.

.....
* **For side discharge:** remove the discharge chute (if mounted - par. 6.1.2d.).
.....

7.4.3 Cleaning the grass catcher (Fig.27.A/B)

7.5 CLEANING THE AIR FILTER

The filter element must always be kept perfectly clean. Proceed as follows:

1. Clean around the air filter grid.
2. Unscrew the screw (Fig.28.B) to remove the grid (Fig.28.A).
3. Remove the filter element (Fig.29.A).
4. Blow the filter of wash it with water (Fig.29.A) to remove the dust and residues.
5. Refit the filter element (Fig.29.A) in its housing, refit the grid and tighten the screw (Fig.28.A/B).

8. STORAGE

8.1 STORING THE MACHINE

When the machine is to be stored away:

4. Wait for the engine to cool.
5. Remove the safety key.
6. Clean (par. 7.4).
7. Check the integrity of the machine.
8. Store the machine:
 - In a dry place.
 - Protected from inclement weather.
 - In a place where children cannot get to it.
 - Making sure that keys or tools used for maintenance are removed.

8.2 STORING THE BATTERY

The battery must be kept in a cool, shaded place without humidity.

NOTE If case of prolonged periods of inactivity, recharge the battery every two months to prolong its service life

9. HANDLING AND TRANSPORTATION

Whenever the machine is to be handled, raised, transported or tilted you must:

- Stop the machine (par. 6.5) until the moving parts come to a complete halt.
- Wear heavy work gloves.
- Hold the machine in the points offering a safe grip, taking into account the weight and its division.
- Use an appropriate number of people for the weight of the machine and the characteristics of the vehicle or the place where it must be placed or collected.
- Make sure that machine movements do not cause damage or injuries.

When transporting the machine on a vehicle or trailer, always:

- Use an access ramp of suitable strength, width and length.
- Load the machine with the motor switched off and pushed by an adequate number of people.
- Lower the cutting means assembly.
- Position it so that it cannot cause a hazard for anybody.
- Fasten firmly to the means of transport using ropes or chains to prevent it from tipping over.

10. MAINTENANCE TABLE

Intervention	Frequency	Notes
MACHINE		
Check all fasteners ; Safety checks/check controls; Check the rear/lateral discharge guards; Check the grass catcher bag and lateral discharge chute; Check the cutting means.	Before use	par. 6.2
General cleaning and inspection; Checking for any damage to the machine. If necessary, contact the authorised service centre.	After each use	par. 7.4
Replacing the cutting means	-	par. 7.3.1 ***
Check the battery charge status	Before each use	*
Recharge the battery	After each use	par. 7.2.1 *
Cleaning the air filter	Once a month	par. 7.5

* Refer to the battery/battery charger manual.

** The operation must be carried out by your Dealer or a specialised Authorised Service Centre

*** Operation to be performed at the first signs of any malfunction

11. PROBLEM IDENTIFICATION

If problems persist after having performed the above operations, contact your dealer.

PROBLEM	PROBABLE CAUSE	SOLUTION
1. After pressing the starter button, the display does not come ON.	Safety key or battery missing or not inserted correctly.	Insert the key (par. 5.1). Open the hatch and check that the battery is fitted in its housing correctly (par. 7.2.1).
2. After pressing the starter button, the display does not come ON and the machine sets off a buzzer.	Internal motor anomaly.	Remove the safety key and contact your Dealer or the Authorised Service Centre.
3. The motor shuts down whilst working.	Battery incorrectly inserted or discharged/obstructions that prevent the rotation of the cutting means.	Make sure that the battery is well fitted in its housing and check the charge status (par. 7.2.1)/ remove the safety key, remove any residues.
4. The display shows ER3 (Fig.30.B) .	The thermal protection has tripped due to overheating of the motor.	Wait for at least 5 minutes and restart the machine.
5. The display alternates between: ER1 + OPC (Fig.30.B) .	Thermal protection has tripped due to excessive current absorption caused by: excessively high grass cutting or obstructions.	Set a higher cutting height when the grass is very high or clean the machine (par. 7.4).
6. The display shows ER1 (Fig.30.B) .	Drive motor over current for heavy working conditions (drive under stress).	Make sure that the wheels are not blocked. Clean as needed. Check the slope of the land.
7. The display alternates between: 100% + ER3 (Fig.30.B) .	Anomaly in the electrical connection of battery and motor.	Remove the safety key and contact the Authorised Service Centre to have it checked.
8. The display shows ER2 (Fig.30.B) .	Cutting means blocked.	Stop the machine, remove the safety key. Remove any potential obstructions. If the problem persists, contact the Authorised Service Centre.
9. The display alternates between ER2+ER3 (Fig.30.B) .	Motor anomaly.	Remove the safety key and contact an Authorised Service Centre.
10. The cut grass is no longer collected in the grass catcher.	The cutting means hit a foreign object or the chassis has residues inside.	Stop the machine, remove the safety key. Clean the internal part of the chassis. Contact an Authorised Service Centre.
11. There is noise and/or excessive vibration.	Loose or damaged cutting means.	Stop the machine, remove the safety key. Contact an Authorised Service Centre.
12. Battery power reserve is low.	Severe working conditions requiring greater current absorption or insufficient battery power for the operating requirements.	Optimize the use or use another higher power battery.
13. The battery charger is not charging the battery.	Battery is not correctly inserted in the battery charger. Unsuitable environmental conditions. Dirty contacts. The battery charger is not energised. Faulty battery charger.	Check it is correctly inserted. Recharge the battery in places with suitable temperatures. Clean the contacts. Check it is plugged in and the power socket is energised. Replace with an original spare part.

12. ATTACHMENTS ON REQUEST

12.1 MULCHING KIT (Fig.31)

Finely chops the cut grass and leaves it on the lawn.

12.2 BATTERIES (Fig.32)

Type-approved batteries (ref. "Technical data").

12.3 BATTERY CHARGER

Device used to recharge the battery (Fig.33).

DICHIARAZIONE CE DI CONFORMITÀ (adeguati Originali)
(Direttiva Macchine 2006/42/CE, Allegato II, parte A)

1. La Società: **STIGA S.p.A. - Via del Lavoro, 6 - 31033 Castelnuovo Veneto (TV) - Italy**
2. Dichiamo sotto la propria responsabilità, che la macchina: **Torcedo con combustore a pletti / luglio 2019**

- a) Tipo / Modello Base:
b) Marca/Modello di costruzione:
c) Modificato:

CP1 430 LI 60

- d) Motore: **Indicatore**

3. **È conforme alle specifiche delle direttive:**

- MD: 2006/42/CE
- e) Ente Certificatore: **/**
- f) Esame CE del tipo: **/**

- DMD: 2000/14/CE, ANNEK VI - 2005/88/CE
- D. Lgs. 252/2002, ANNEK VI, proc. 1 (Italy)
- e) Ente Certificatore:

- ENISO: 2014/30/UE
- PNEU: 1: 2011/65/UE - 2015/65/UE

NR0197 - TÜV Rheinland LGA Products GmbH
Telefonat: 2, 90431 Mönchengladbach - Germany

4. **Riferimento alle Norme armonizzate:**

EN 60335-1:2012+A11:2014+A13:2017 EN 55014-1:2017
EN 60335-2-77:2010 EN 55014-2:2015
EN 50561:2012

- a) Livello di potenza sonora misurato
b) Livello di potenza sonora garantita
c) Applicazione di legge

89 dB(A)
90 dB(A)
41 cm

- d) Persona autorizzata a compilare il Fascicolo Tecnico:

STIGA S.p.A.
Via del Lavoro, 6
31033 Castelnuovo Veneto (TV) - Italia

o) Castelnuovo V.to, 01.07.2019

Senior Vice President Chief Strategy Officer/CSO &
Chief Operating Officer

Sean Robinson



DICHIARAZIONE CE DI CONFORMITÀ (adeguati Originali)
(Direttiva Macchine 2006/42/CE, Allegato II, parte A)

1. La Società: **STIGA S.p.A. - Via del Lavoro, 6 - 31033 Castelnuovo Veneto (TV) - Italy**
2. Dichiamo sotto la propria responsabilità, che la macchina: **Torcedon con combustore a pletti / luglio 2019**

- a) Tipo / Modello Base:
b) Marchio di costruzione:
c) Modello:

CP1 480 LI 60

- d) Motore: **Indietro**

3. **È conforme alle specifiche delle direttive:**

- MD: 2006/42/CE
- e) Ente Certificatore: **/**
- f) Esame CE del tipo: **/**
- DMD: 2000/14/CE, ANNEX VI - 2005/88/CE
- D. Lgs. 252/2002, ANNEX VI, par. 1 (Italy)
- e) Ente Certificatore:
- ENISO: 2014/30/UE
- PNEU: 1: 2011/65/UE - 2015/65/UE

NR0197 - TÜV Rheinland LGA Products GmbH
Telefonat: 2, 90431 Mönchengladbach - Germany

4. **Riferimento alle Norme armonizzate:**

EN 60335-1:2012+A11:2014+A13:2017 EN 55014-1:2017
EN 60335-2-77:2010 EN 55014-2:2015
EN 50561:2012

- a) Livello di potenza sonora misurato
b) Livello di potenza sonora garantito
c) Applicazione di legge

52 dB(A)
52 dB(A)
46 cm

- d) Persona autorizzata a compilare il Fascicolo Tecnico:

STIGA S.p.A.
Via del Lavoro, 6
31033 Castelnuovo Veneto (TV) - Italia

o) Castelnuovo V.to, 01.07.2019

Senior Vice President Chief Strategy Officer/CSO &
Chief Operating Officer

Sean Robinson



[illegible]

IT • Il contenuto e le immagini del presente manuale d'uso sono stati realizzati per conto di STIGA S.p.A. e sono tutelati da diritto d'autore – E' vietata ogni riproduzione o alterazione anche parziale non autorizzata del documento.

BG • Съдържанието и изображенията в настоящото ръководство са извършени за STIGA S.p.A. и са защитени с авторски права – Забранява се всяко неоторизирано възпроизвеждане или промяна, дори и отчасти на документа.

BS • Sadržaj i slike iz ovog korisničkog priručnika napravljeni su isključivo za STIGA S.p.A. i zaštićeni su autorskim pravima – zabranjena je svaka neovlaštena reprodukcija ili izmjena dokumenta, djelomično ili u potpunosti.

CS • Obsah a obrázky v tomto návodu k použití byly zpracovány jménem společnosti STIGA S.p.A. a jsou chráněny autorským právem – Reprodukce či nepovolené pozměňování tohoto dokumentu, a to i částečné, je zakázáno.

DA • Indhold og illustrationer i denne vejledning er blevet skabt på vegne af STIGA S.p.A. og er beskyttet af ophavsret – Enhver gengivelse eller ændring, også delvis, af dokumentet uden autorisation hertil er forbudt.

DE • Inhalt und Bilder dieser Bedienungsanleitung wurden im Namen von STIGA S.p.A. erstellt und sind urheberrechtlich geschützt – Jede nicht genehmigte Vervielfältigung oder Veränderung, auch auszugsweise, dieses Dokuments ist verboten.

EL • Το περιεχόμενο και οι εικόνες στο παρόν εγχειρίδιο χρήσης δημιουργήθηκαν για λογαριασμό της εταιρείας STIGA S.p.A. και προστατεύονται από πνευματικά δικαιώματα – Απαγορεύεται οποιαδήποτε αναπαραγωγή ή τροποποίηση, έστω και μερική, του εγγράφου χωρίς έγκριση.

EN • The content and images in this User Manual were produced expressly for STIGA S.p.A. and are protected by copyright – any unauthorised reproduction or modification to the document, either partially or in full, is prohibited.

ES • El contenido y las imágenes del presente manual de uso han sido creados por STIGA S.p.A. y están protegidos por los derechos de autor – Se prohíbe toda reproducción o modificación, incluso parcial, no autorizada del documento.

ET • Käesoleva kasutusjuhendi sisu ja kujutised on toodetud konkreetselt ettevõttele STIGA S.p.A. ja neile rakendub autorikaitseseadus – dokumendi igasugune osaline või täielik ilma loata reprodutseerimine või muutmine on keelatud.

FI • Tämän käyttöoppaan sisältö ja kuvat on valmistettu STIGA S.p.A. -yhtiön toimesta ja niitä suojaa tekijänoikeuslaki. – Asiakirjan kaikenlainen kopioiminen tai muuttaminen, osittainkin, on kielletty ilman erityistä lupaa.

FR • Le contenu et les images du présent manuel d'utilisation ont été réalisés pour le compte de STIGA S.p.A. et sont protégés par un droit d'auteur – Toute reproduction ou modification non autorisée, même partielle, du document, est interdite.

HR • Sadržaj i slike u ovom priručniku za uporabu izrađeni su za tvrtku STIGA S.p.A. te su obuhvaćeni autorskim pravima – Zabranjuje se neovlašteno umnožavanje ili prilagodba, djelomična ili u cijelosti, ovog dokumenta.

HU • Ennek a használati útmutatónak a tartalma és a benne szereplő képek kizárólag a STIGA S.p.A. számára készültek és szerzői joggal védettek – tilos a dokumentum bármely részének vagy egészének engedély nélküli sokszorosítása és módosítása.

LT • Šio naudotojo vadovo turinis ir paveikslėliai skirti tik „STIGA S.p.A.“ ir yra saugomi autorių teisėmis – dokumentą atgaminti ar modifikuoti, visiškai arba iš dalies, yra draudžiama.

LV • Šis lietotāja rokasgrāmatas saturs un attēli ir veidoti tikai STIGA S.p.A. un ir aizsargāti ar autortiesībām. Jebkāda dokumenta vai tā daļas prettiesiska kopēšana vai pārveide ir stingri aizliegta.

MK • Содржината и сликите во Упатството за корисникот се подготвени исклучиво за STIGA S.p.A. и се заштитени со авторски права – забрането е секое делумно или целосно неовластено репродуцирање или измена на документот.

NL • De inhoud en de afbeeldingen van deze gebruikshandleiding werden gerealiseerd voor rekening van STIGA S.p.A. en zijn beschermd door het auteursrecht – Elke niet-geautoriseerde reproductie of wijziging, ook gedeeltelijke, van het document is verboden.

NO • Innholdet og bildene i denne brukerveiledningen er utført på oppdrag fra STIGA S.p.A. og er beskyttet ved opphavsrett – Enhver gjengivelse eller endring, selv kun delvis, er forbudt.

PL • Treść oraz ilustracje zawarte w niniejszej instrukcji obsługi powstały na zlecenie spółki STIGA S.p.A. i są chronione prawami autorskimi – Zabrania się wszelkiego kopiowania bądź modyfikowania, także częściowego, niniejszego dokumentu bez uzyskania stosownej zgody.

PT • As imagens e os conteúdos contidos no presente Manual do Utilizador foram expressamente criados para uso exclusivo da STIGA S.p.A., encontrando-se protegidos por direitos de autor. Qualquer tipo de reprodução ou alteração, parcial ou integral, não autorizadas deste Manual estão expressamente proibidas.

RO • Conținutul și imaginile din manualul de utilizare de față au fost realizate în numele STIGA S.p.A. și sunt protejate de drepturi de autor – Este interzisă orice reproducere sau modificare chiar și parțială neautorizată a documentului.

RU • Тесты и изображения, содержащиеся в настоящем руководстве, были созданы в интересах STIGA S.p.A. и защищены авторскими правами – Любое несанкционированное воспроизведение или изменение документа запрещено.

SK • Obsah a obrázky v tomto návode na používanie boli spracované menom spoločnosti STIGA S.p.A. a sú chránené autorským právom – Reprodukcie či nepovolené pozměňovanie tohto dokumentu, a to aj čiastočné, je zakázané.

SL • Vsebine in slike v tem uporabniškem priručniku so izdelane za podjetje STIGA S.p.A. in so zaščiten z avtorskimi pravicami – vsakršno nepooblaščenno razmnoževanje ali spreminjanje dokumenta, v celoti ali delno, je prepovedano.

SR • Sadržaj i slike ovog priručnika za upotrebu su napravljeni u ime STIGA S.p.A. i zaštićeni su autorskim pravima – Zabranjena je svaka potpuna ili delimična reprodukcija ili izmena dokumenta bez odobrenja.

SV • Innehållet och bilderna i denna användarhandbok har framställts för STIGA S.p.A. och skyddas av upphovsrätt – all form av reproduktion eller ändring, även partiell, som inte auktoriserats är förbjuden.

TR • Bu Kullanıcı Kılavuzundaki içerik ve resimler açıkça STIGA S.p.A. için üretilmiştir ve telif hakkı ile korunmaktadır – dokümanın izinsiz olarak tamamen ya da kısmen herhangi bir şekilde çoğaltılması ya da değiştirilmesi yasaktır.



.....	
Type:	 L_{WA} dB
Art.N	
..... -s/n	

CE

STIGA S.p.A.

Via del Lavoro, 6

31033 Castelfranco Veneto (TV) ITALY

stiga.com